



OPERATING AND PARTS MANUAL

DLQ & DLQHD LIQUID APPLICATORS

2020



TABLE OF CONTENTS

TO YOU THE OWNER.....	1
LIMITED WARRANTY STATEMENT.....	2
NEW MACHINE CHECKOUT.....	3
IMPLEMENT SAFETY.....	4
PRE-SEASON CHECK.....	5
BOLT TORQUE CHART.....	6
LOADED RADIUS OF VARIOUS TIRES.....	7
LIQUID INJECTOR NOZZLE CHART.....	8
GPA TABLE.....	9
DLQ TONGUE - JACK AND HITCH OPTIONS.....	11
DLQ TOOLBAR CONTROL ARM.....	12
DLQSTD AXLE, SPINDLE, AND HUB.....	13
1002194, 819 8-BOLT HUB ASSEMBLY, COMPLETE.....	14
DLQHD AXLE, SPINDLE, AND HUB.....	15
4410248, 873 10-BOLT HUB ASSEMBLY, COMPLETE.....	16
DLQHD 2000 AXLE, SPINDLE, AND HUB.....	17
4410337, 881 10-BOLT HUB ASSEMBLY, COMPLETE.....	18
DLQ ADJUSTABLE AXLE.....	19
4410449, 891 10-BOLT HUB ASSEMBLY, COMPLETE.....	20
DLQ SINGLE FOLD TOOLBAR.....	21
DLQ FRONT FOLD TOOLBAR.....	22
DLQ DOUBLE FOLD TOOLBAR.....	23
DLQHD 60' TOOLBAR.....	24
TOOLBAR CYLINDER STOP.....	25
DLQ LIGHT KIT.....	26
CYLINDER LINKAGE AND DOWNPRESSURE.....	27
DLQ WING LOCK.....	28
2 PIN GAUGE WHEEL AND BRACKET.....	29
4410086, 888 6-BOLT HUB ASSEMBLY, COMPLETE.....	30
GROUND DRIVE ASSEMBLY.....	31
DLQ 3-SHUTOFF RAVEN PLUMBING.....	32
YETTER COULTER ASSEMBLY.....	33
NOZZLE AND COULTER ASSEMBLY.....	34
GROVE COULTER ASSEMBLY.....	35
GROVE KNIFE AND INJECTION.....	36
DLQ DOWNPRESSURE KIT - GULL WING PLUMBING.....	37
DECAL LAYOUT.....	38
PARTS ORDERING PROCEDURE.....	39

TO YOU, THE OWNER

Your Dalton Ag Equipment is the most modern, up-to-date, versatile, machine available for fertilizer application. The machine is the result of many years of experience, research, development and testing of equipment for fertilizer application. It is soundly engineered and carefully built to rigid specifications. It is of rugged and simple construction, with a minimum of moving parts.

However, to obtain maximum performance from your Dalton Ag Equipment, it is necessary to follow the instructions and safety suggestions in this manual. Each section has been carefully prepared for the purpose of providing needed and valuable information to the owner and operator. Each operator of this unit should be familiar with the contents of this manual. Keep it in a safe and convenient location. THERE ARE MANY SAFETY SUGGESTIONS (CAUTION AREAS) PRINTED THROUGHOUT THIS MANUAL. CAREFULLY READ THEM ALL BEFORE OPERATING THIS UNIT.

DESIGN IMPROVEMENTS

Dalton Ag Products follows a policy of continuous products improvement. We therefore reserve the right to make design improvements, and changes in specifications and prices, without incurring obligations to make revisions or additions to equipment previously sold.

**REGISTER
WARRANTY
ONE OF
FOUR WAYS**

- Register on-line at:
www.daltonag.com
- Fax your completed warranty registration form to:
641-569-7033
- Email your completed warranty registration form to:
office@daltonag.com
- Mail your completed warranty registration form to:
Dalton Ag, Inc.
P.O. Box 70
Lenox, IA 50851



LIMITED WARRANTY STATEMENT

DALTON AG, INC. warrants to the original purchaser only that all products manufactured under the Dalton Ag and Mobility Brands will be free from defects in material and workmanship under normal use and service.

DALTON AG's obligation under this warranty is limited to repairing or replacing, as it may elect, free of charge and without charge for installation, at the place of business of a dealer or distributor authorized to handle the equipment covered by this warranty or at a DALTON AG facility, any parts that prove, in DALTON AG's judgment, to be defective in material or workmanship within two (2) years after delivery to the original purchaser. DALTON AG shall not be liable for personal injuries or any special or consequential damages of any kind, either direct or indirect. This warranty is subject to acts of God, fire and existing conditions of supply and demand, production, ability or inability to deliver, or for any other valid reason beyond the reasonable control of DALTON AG. No distributor, dealer, agent or DALTON AG employee (other than DALTON's President in writing) is authorized to extend or make any other or further express or implied warranty or incur any additional obligation on DALTON AG's behalf in connection with the sale of this product.

Customer Responsibility

Product Registration - It is a condition of this warranty that the original purchaser fill out the warranty card furnished by DALTON AG and return it to DALTON AG to be recorded in DALTON AG's owner file. Registration may also be done on line at www.DaltonAg.com/warrantyregistration. If the original purchaser's card or electronic registration is not on file at DALTON AG's office, the warranty period will extend only from date equipment was picked up or shipped from the DALTON AG plant.

Maintenance - It is the customer's responsibility to maintain their equipment in accordance with the instructions provided in the Operator's Manual. DALTON AG recommends that you keep records and receipts as the customer may be required to verify the maintenance instructions have been followed.

Operation - It is the customer's responsibility to operate the equipment only for the purpose for which it was designed and in accordance with all safety and operational recommendations contained in the Operator's Manual. If a defect in materials or workmanship occurs, it is the customer's responsibility to cease operating the equipment until authorized repairs are made.

Damage incurred from continued operation after a defect is discovered may not be covered by this warranty.

What this Warranty Covers

This warranty covers failures caused by defects in materials or workmanship only.

This Warranty does not cover failures caused by:

- | | | |
|------------------------------|------------------------------|---|
| - Improper operation | - Unauthorized repairs | - Usage contrary to the intended purpose of the product |
| - Natural calamities | - Use of Non DALTON AG parts | |
| - Unauthorized modifications | - Neglected maintenance | |

This Warranty does not cover replacement of Wear or Maintenance Items including, but not limited to:

- | | | | | |
|--------------|---------|----------|----------|------------|
| - Lubricants | - Hoses | - Disks | - Idlers | - Belts |
| - Filters | - Tires | - Chains | - Blades | - Bearings |

This Warranty does not cover:

Pickup and delivery of the equipment

Service Calls or Travel Time to and from sites

Rental of replacement equipment during repair period

Products that have been declared a total loss and subsequently salvaged

Overtime labor charges

Parts Warranty

DALTON AG warrants its replacement parts against defects in materials or workmanship for a period of 90 days or the remainder of the product warranty, whichever is longer under the terms set out above. Remedy for defective replacement parts for units that are beyond the original product warranty, will be limited to replacement of the failed part.

DaltonAg.com

602 E. Van Buren Lenox, Iowa 50851

100% Employee Owned

PHONE: 800.342.7498

FAX: 641.569.7033

NEW MACHINE CHECKOUT

1. All hardware properly tightened.
2. Lubrication of grease fittings.
3. Wheel bolts tightened to proper specs.
4. Check hydraulic hoses and fittings.

MAINTENANCE

1. Visually inspect machine daily.
2. Repair or replace any worn or damaged parts.

LUBRICATION SCHEDULE

Careful observance of the following lubrication schedule is the best preventative maintenance program for your Dalton Ag Equipment. We recommend that you establish a firm program to insure lubrication in strict compliance with the following schedule. Use only good grade pressure gun type grease unless otherwise specified.

Daily Lubrication

Hinge points

Weekly Lubrication

Wheel bearings
Coulters

Annual Lubrication

Check all bearings - repack or replace as needed

IMPLEMENT SAFETY

In addition to design and configuration of equipment, safety and accident prevention are dependent upon the awareness, concern, and proper training of personnel involved in the operation, transport, maintenance, and storage of equipment. Failing to follow these safety messages can result in machine damage, personal injury, and/or death.

- Before operating your applicator, thoroughly read and understand your operator's manual. If you do not understand any portion of the operator's manual, contact your local Dalton Ag dealer immediately for clarification.
- Furnish this manual to a new operator.
- Tow with tractor only. Never transport applicator unit in excess of 20 MPH. Maintain a safe speed.
- Use a Slow-Moving-Vehicle (SMV) emblem when transporting.
- Be sure safety decals are readable. All safety related decals must be replaced if the applicator is painted or the decals are otherwise rendered unreadable.
- Install transport link before transporting.
- Always check for overhead obstacles in transporting applicator and before folding or unfolding the wings of the unit.
- Never permit riders on the applicator or tractor.
- Proceed slowly on rough or slippery roadways, on side hills, and around curves to avoid tipping.
- Reduce speed when approaching ditches and corners. Do not make sharp turns with brakes.
- Machinery should be operated only by persons familiar to the tractor, applicator unit, and the safety related items.
- Do not stand on, or straddle tongue when unhitching.
- Do not modify or permit anyone to modify this applicator and any of its components without first consulting your Dalton Ag dealer.
- Do not lubricate, adjust, or repair when applicator unit is in motion.
- Use only approved replacement parts.
- To prevent serious injury from high pressure fluid, NEVER attempt to inspect, service, or disassemble any part of the hydraulic system until all pressure is relieved by lowering the toolbar to the ground (or secure with cylinder transport stops provided).
- High-pressure fluid is nearly invisible but has enough force to penetrate the skin. Never use the hands to search out a suspected leak. If injured by escaping fluid, obtain medical attention at once to minimize chance of infection. Wear safety glasses or goggles to avoid eye injury when working on the hydraulic system.
- Always check torque on wheel bolts before transporting.

PRE-SEASON CHECK

1. Carefully review the safety suggestions in this manual.
2. Check all bolts for proper tightness. When the implement is new, check after one hour and every few hours of operation.
3. Replace ground tools that are severely worn, broken or damaged.
4. Check tires for proper inflation. All tires should be inflated equally to avoid side draft.
5. Check the wheel lug bolts daily, keep wheel bolts tight.
6. Grease all fittings.
7. Inspect, repack, or replace (if necessary) wheel bearings and seals.
8. Check hoses, hose routing and hydraulic cylinders. Any indication of leakage or fraying of hoses should be corrected.

OFF-SEASON STORAGE

Following these suggestions will extend service life and satisfaction:

1. A little time and effort spent cleaning your machine before storing will repay in longer service, easier operation and higher resale value.
2. Inspect for worn or damaged parts. Replace, if required, and avoid delays the next season.
3. Repaint all areas where the original paint is worn off.
4. Lubricate your implement.
5. Grease all exposed metal surfaces of ground tools.
6. Store the unit inside a shed to protect from weather and on a level area with wings down. The ground working parts should rest on boards.
7. Disconnect the rod end of the lift cylinders and retract the rod into the cylinder to prevent the cylinder rod from rusting.
8. Cap or plug all hydraulic oil lines, if the cylinders are removed. This is to prevent any contaminants from entering the hydraulic system.
9. Raise tires off ground or remove and store in cool dry location out of sunlight.

IMPORTANT : Over tightening hardware can be as damaging as under tightening.
Tightening beyond recommended torque will reduce the fastener's shock load capacity.

BOLT TORQUE CHART

SIZE							
	SAE GRADE 2		SAE GRADE 5		SAE GRADE 8		
	ASSEMBLY TORQUE DRY	LUBRICATED	ASSEMBLY TORQUE DRY	LUBRICATED	ASSEMBLY TORQUE DRY	LUBRICATED	ASSEMBLY TORQUE LUBRICATED
1/4-20	66*	49*	8	75*	12	9	11
1/4-28	76*	56*	10	86*	14	10	13
5/16-18	11	8	17	13	20	18	21
5/16-24	12	9	19	14	25	20	23
3/8-16	20	15	30	23	45	30	33
3/8-24	23	17	35	25	50	35	38
7/16-14	30	24	50	35	70	55	60
7/16-20	35	25	55	40	80	60	65
1/2-13	50	35	75	55	110	80	95
1/2-20	55	40	90	65	120	90	105
9/16-12	65	50	110	80	150	110	140
9/16-18	75	55	120	90	170	130	150
5/8-11	90	70	150	110	220	170	185
5/8-18	100	80	180	130	240	180	205
3/4-10	160	120	260	200	380	280	290
3/4-16	180	140	300	220	420	320	355
7/8-9	190	140	400	300	600	460	505
7/8-14	210	155	440	320	660	500	585
1-8	220	160	580	440	900	680	775
1-14	240	170	640	480	1000	740	900
1 1/8-7	300	220	800	600	1280	960	1150
1 1/8-12	340	260	880	660	1440	1080	1325
1 1/4-7	420	320	1120	840	1820	1360	1600
1 1/4-12	460	360	1240	920	2000	1500	1750
1 3/8-6	560	420	1460	1100	2380	1780	—
1 3/8-12	640	460	1680	1260	2720	2040	—
1 1/2-6	740	560	1940	1460	3160	2360	3250
1 1/2-12	840	620	2200	1640	3560	2660	3650

**ITEMS WITH * = INCH POUNDS
ALL OTHERS = FOOT POUNDS**

WARNING: Never work around any raised implement while in the raised position without using safety lockups.

**LOADED RADIUS OF VARIOUS TIRES -
FOR USE IN SETTING JOHN BLUE
GROUND-DRIVEN PUMPS**

TIRE SIZE	LOADED RADIUS	TIRE SIZE	LOADED RADIUS
6.70-15SL	12.9	9.00-20	19.0
7.60-15SL	13.4	10.0-20	19.6
9.5L-15SL	13.6	11.0-20	20.1
10.0-15SL	15.1	12.0-20	20.6
11L-15SL	13.5	15.0-22.5	20.0
12.5L-15SL	14.5		
9.00-16SL	14.7		
11L-16SL	13.9		
12.5L-16SL	15.0		
13.5L-16.1SL	17.5		
16.5L-16.1SL	17.3		
4.8-8	7.5		
18-9.5	7.8		
16 X 6.50-8	7.4		

LIQUID INJECTOR NOZZLE CHART

NOZZLE SELECTION

1. To select the proper nozzle size, first determine the gallons per acre and speed that is going to be used. Go to the table for the proper row spacing.
2. Find the speed across the top, go down to the "Gallon Per Acre" and read the nozzle size in the box.
3. Order nozzle by m.p.h. and gallons per acre.

FORMULA TO CONVERT POUNDS PER ACRE TO GALLONS PER ACRE

Pounds per Acre/Percent of Nitrogen = Total Pounds per Acre/pounds per Gallon = Gallons per Acre

EXAMPLE: 100 (# per Acre) / .28 (28%) = 357 (# per Acre) / 10.65 (#per Gallon) = 33.5 (GPA)

NOTE: If 1/2 rate is needed on outside shanks, order two nozzles with half the capacity. If 1 1/2 rate is needed on outside shanks, order two nozzles with 1 1/2 times the capacity.

*****REFER TO THE FOLLOWING RATE CHART FOR TIPS AND APPLICATION*****

GPA 30" SPACING
gallons per acre x 1.15 = water per acre

TIP NUMBER	ORIFICE DIAM.	PSI	CAP .1 NOZZLE GPM	5 MPH GPA	6 MPH GPA	7 MPH GPA	8 MPH GPA	9 MPH GPA	10 MPH GPA
TP0004	.055	20	.28	11	9	8	7		6
H1/4U-SS0004		30	.35	14	12	10	9	8	7
		40	.40	16	13	11	10	9	8
		50	.45	18	15	13	11	10	9
		60	.49	19	16	14	12	11	10
TP0005	.061	20	.35	14	12	10	9		
H1/4U-SS0005		30	.43	17	14	12	11	9	8
		40	.50	20	16	14	12	11	10
		50	.56	22	18	16	14	12	11
		60	.61	24	20	17	15	13	12
TP0006	.067	20	.42	17	14	12	10	9	8
H1/4U-SS0006		30	.52	20	17	15	13	11	10
		40	.60	24	20	17	15	13	12
		50	.67	26	22	18	17	15	13
		60	.73	28	24	20	18	16	15
TP0008	.078	20	.57	23	19	16	14	13	11
H1/SS0008		30	.69	27	22	19	17	15	13
		40	.80	32	26	22	20	17	16
		50	.89	53	29	25	22	19	17
		60	.98		32	28	24	21	19
TP00010	.086	20	.71	28	23	20	18	16	14
H1/4U-SS0010		30	.87	34	28	24	21	19	17
		40	1.00	39	33	28	24	22	20
		50	1.12	44	36	32	28	24	22
		60	1.22	48	40	34	30	26	24
TP00015	.107	20	1.06	42	35	30	26	23	21
H1/4U-SS0015		30	1.30	51	42	36	32	28	26
		40	1.50	59	49	42	37	33	30
		50	1.68	66	55	47	41	36	33
		60	1.84	72	60	51	45	40	36
TP00020	.125	20	1.41	56	47	40	35		28
H1/4U-SS0020		30	1.73	68	57	50	43	38	34
		40	2.00	80	66	56	50	44	40
		50	2.24	88	74	64	56	49	44
		60	2.44	96	80	70	60	53	48
TP00030	.140	20	2.12	84	70	60	52		42
H1/4U-SS0030		30	2.60	102	86	74	64	57	51
		40	3.00		99	84	74	66	59

**** 15" ROW CONVERSION - X 2

**** 36" ROW CONVERSION - X .83

To determine the orifice plates you need, use the following equations:

NOTE: Always insert Orifice Plate
with the side marked with the
number facing the outlet.

$$\text{GPM} = \frac{\text{GPA} \times \text{MPH} \times W}{5,940}$$

(per nozzle)

$$\text{GPA} = \frac{5,940 \times \text{GPM} (\text{per nozzle})}{\text{MPH} \times W}$$

W = Nozzle spacing (in inches)
for broadcast spraying.

= Spray width (in inches) for
single nozzle, band spraying
or boomless spraying.

= Row spacing (in inches) divided
by the number of nozzles per row
for directed spraying.

FOR ORIFICE SIZE	USE MESH SIZE
15 and smaller	200
16–39	100
40–70	50
72 and larger	—

Tabulated flow rates are for spraying water into air at atmospheric pressure. If your application creates backpressure, or if spraying into a liquid, measure and calibrate to ensure proper application rates.

	GPM						
	5 PSI	10 PSI	20 PSI	30 PSI	40 PSI	50 PSI	60 PSI
CP4916-008	0.003	0.004	0.006	0.007	0.008	0.009	0.010
CP4916-10	0.005	0.007	0.009	0.011	0.013	0.015	0.016
CP4916-12	0.007	0.010	0.013	0.016	0.019	0.021	0.023
CP4916-14	0.009	0.013	0.018	0.022	0.025	0.028	0.031
CP4916-15	0.010	0.015	0.021	0.025	0.029	0.032	0.036
CP4916-16	0.012	0.017	0.023	0.029	0.033	0.037	0.040
CP4916-18	0.015	0.021	0.030	0.036	0.042	0.047	0.051
CP4916-20	0.018	0.026	0.037	0.045	0.052	0.058	0.064
CP4916-22	0.022	0.031	0.043	0.053	0.061	0.068	0.075
CP4916-24	0.026	0.037	0.052	0.061	0.071	0.083	0.091
CP4916-25	0.028	0.040	0.056	0.068	0.079	0.088	0.097
CP4916-26	0.030	0.043	0.061	0.074	0.086	0.096	0.105
CP4916-27	0.032	0.046	0.064	0.079	0.091	0.102	0.111
CP4916-28	0.035	0.049	0.069	0.085	0.098	0.110	0.120
CP4916-29	0.038	0.051	0.076	0.094	0.108	0.121	0.132
CP4916-30	0.040	0.057	0.081	0.099	0.114	0.127	0.140
CP4916-31	0.043	0.062	0.087	0.107	0.123	0.138	0.151
CP4916-32	0.048	0.068	0.095	0.117	0.135	0.151	0.165
CP4916-34	0.052	0.074	0.104	0.127	0.147	0.164	0.180
CP4916-35	0.056	0.079	0.111	0.136	0.157	0.176	0.192
CP4916-37	0.061	0.086	0.122	0.149	0.172	0.192	0.211
CP4916-39	0.068	0.096	0.135	0.165	0.191	0.214	0.234
CP4916-40	0.072	0.102	0.144	0.177	0.204	0.228	0.250
CP4916-41	0.075	0.106	0.149	0.183	0.211	0.236	0.258
CP4916-43	0.082	0.116	0.163	0.200	0.231	0.258	0.283
CP4916-45	0.088	0.125	0.177	0.217	0.250	0.280	0.306
CP4916-46	0.095	0.135	0.191	0.234	0.270	0.302	0.331

	GPM						
	5 PSI	10 PSI	20 PSI	30 PSI	40 PSI	50 PSI	60 PSI
CP4916-47	0.097	0.138	0.194	0.238	0.275	0.307	0.337
CP4916-48	0.101	0.143	0.202	0.248	0.286	0.320	0.350
CP4916-49	0.104	0.148	0.209	0.255	0.295	0.330	0.361
CP4916-51	0.116	0.165	0.233	0.285	0.329	0.368	0.403
CP4916-52	0.118	0.168	0.237	0.290	0.335	0.375	0.410
CP4916-54	0.127	0.180	0.255	0.312	0.360	0.402	0.441
CP4916-55	0.133	0.189	0.267	0.326	0.377	0.421	0.462
CP4916-57	0.141	0.200	0.283	0.346	0.400	0.447	0.490
CP4916-59	0.153	0.217	0.306	0.375	0.433	0.484	0.530
CP4916-61	0.165	0.233	0.330	0.401	0.466	0.521	0.571
CP4916-63	0.174	0.246	0.347	0.425	0.491	0.549	0.601
CP4916-65	0.185	0.261	0.369	0.452	0.522	0.584	0.639
CP4916-67	0.196	0.278	0.392	0.481	0.555	0.621	0.680
CP4916-68	0.203	0.287	0.405	0.496	0.573	0.641	0.702
CP4916-70	0.216	0.306	0.433	0.530	0.612	0.681	0.750
CP4916-72	0.226	0.320	0.453	0.554	0.640	0.716	0.784
CP4916-73	0.233	0.330	0.467	0.572	0.660	0.738	0.808
CP4916-75	0.245	0.347	0.491	0.601	0.694	0.776	0.850
CP4916-78	0.272	0.385	0.544	0.667	0.770	0.861	0.943
CP4916-80	0.280	0.397	0.561	0.687	0.793	0.887	0.971
CP4916-81	0.290	0.411	0.581	0.711	0.821	0.918	1.01
CP4916-83	0.317	0.449	0.634	0.777	0.897	1.00	1.10
CP4916-86	0.332	0.470	0.664	0.813	0.939	1.05	1.15
CP4916-89	0.346	0.490	0.693	0.849	0.980	1.10	1.20
CP4916-91	0.369	0.523	0.739	0.905	1.05	1.17	1.28
CP4916-93	0.387	0.547	0.774	0.947	1.09	1.22	1.34
CP4916-95	0.404	0.572	0.808	0.990	1.14	1.28	1.40

	GPM						
	5 PSI	10 PSI	20 PSI	30 PSI	40 PSI	50 PSI	60 PSI
CP4916-98	0.442	0.625	0.884	1.08	1.25	1.40	1.53
CP4916-103	0.461	0.653	0.923	1.13	1.31	1.46	1.60
CP4916-107	0.518	0.733	1.04	1.27	1.47	1.64	1.79
CP4916-110	0.548	0.775	1.10	1.34	1.55	1.73	1.90
CP4916-115	0.605	0.855	1.21	1.48	1.71	1.91	2.09
CP4916-120	0.629	0.890	1.26	1.54	1.78	1.99	2.18
CP4916-125	0.693	0.980	1.39	1.70	1.96	2.19	2.40
CP4916-128	0.721	1.02	1.44	1.77	2.04	2.28	2.50
CP4916-132	0.774	1.10	1.55	1.90	2.19	2.45	2.68
CP4916-136	0.810	1.19	1.68	2.06	2.38	2.66	2.91
CP4916-140	0.894	1.27	1.79	2.19	2.53	2.83	3.10
CP4916-144	0.926	1.31	1.85	2.27	2.62	2.93	3.21
CP4916-147	0.953	1.35	1.91	2.33	2.70	3.01	3.30
CP4916-151	1.04	1.47	2.08	2.55	2.94	3.29	3.60
CP4916-156	1.10	1.55	2.20	2.69	3.11	3.47	3.80
CP4916-161	1.15	1.63	2.31	2.83	3.27	3.65	4.00
CP4916-166	1.21	1.72	2.43	2.97	3.43	3.84	4.20
CP4916-170	1.30	1.84	2.61	3.19	3.69	4.12	4.51
CP4916-172	1.36	1.92	2.71	3.32	3.84	4.29	4.70
CP4916-177	1.41	2.00	2.83	3.46	4.00	4.47	4.90
CP4916-182	1.47	2.08	2.95	3.61	4.17	4.66	5.10
CP4916-187	1.56	2.21	3.12	3.82	4.41	4.93	5.40
CP4916-196	1.73	2.45	3.46	4.24	4.90	5.47	6.00
CP4916-205	1.88	2.65	3.75	4.59	5.31	5.93	6.50
CP4916-218	2.11	2.98	4.21	5.16	5.96	6.66	7.30
CP4916-234	2.45	3.47	4.91	6.01	6.94	7.76	8.50
CP4916-250	2.83	4.00	5.66	6.93	8.00	8.94	9.80

DLQ TONGUE - JACK AND HITCH OPTIONS

4410351 DLQ HOSE STAND ASSEMBLY

TB 4435097 HOSE CADDY HOSE CLAMP
 151811 BOLT, .375 NC X 2, G5, PLTD
 152206 BOLT .5 NC X 1.5, G5, PLTD

4410378 PRESSURE GAUGE BRACKET ASSEMBLY, DLQ

4440967 .375 HOSE BARB, .25 NPT MALE, STAINLESS
 4420323 GAUGE MOUNT BRACKET WELDMENT
 GG100 100 LB GLYCERIN FILLED GAUGE


151805 BOLT, .375 NC X 1.25, PLTD
 4420325 HOSE STAND TOP WELDMENT

150005 NUT, .375 NC, PLTD
 150008 NUT, .5 NC, PLTD

4420845 DLQ LONG HOSE STAND

4434269 HOSE STAND BACKING PLATE

152422 BOLT, .625 NC X 8, G5

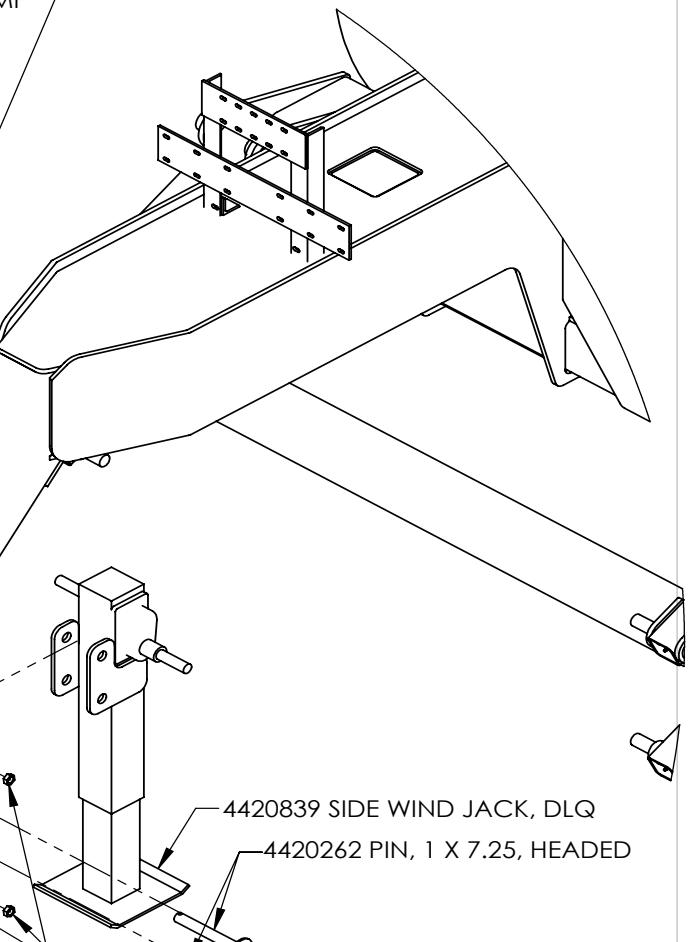

150222 LOCK WASHER, .625, PLTD
 150010 NUT, .625 NC, PLTD

4441048 CLEVIS PIN
 444018 BULL PULL HITCH, CAT 4
(OR)
 4420532-HD HITCH CLEVIS

Available:

4441023 SAFETY CHAIN, PAIR

DRAWN BY	RICH SMOTHERS	6/2/2014
CHECKED BY		
PRINT DATE	5/31/2017	
CONFIG.	Default	


 www.DaltonAg.com

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.

COMMENTS:

DWG:
 DLQ TONGUE - JACK AND HITCH OPTIONS

SIZE	SHEET TITLE:	REV
A	Sheet1	A
SCALE: 1:16	SHEET 1 OF 1	


DLQ TOOLBAR CONTROL ARM

4420842 RAVEN VALVE MOUNT, 3 SHUT-OFF
(OR)

4420917 RAVEN VALVE MOUNT, 5 SHUT-OFF

4420840 DLQ FLOW MONITOR PANEL, 1
(OR)

4420841 DLQ FLOW MONITOR PANEL, 2

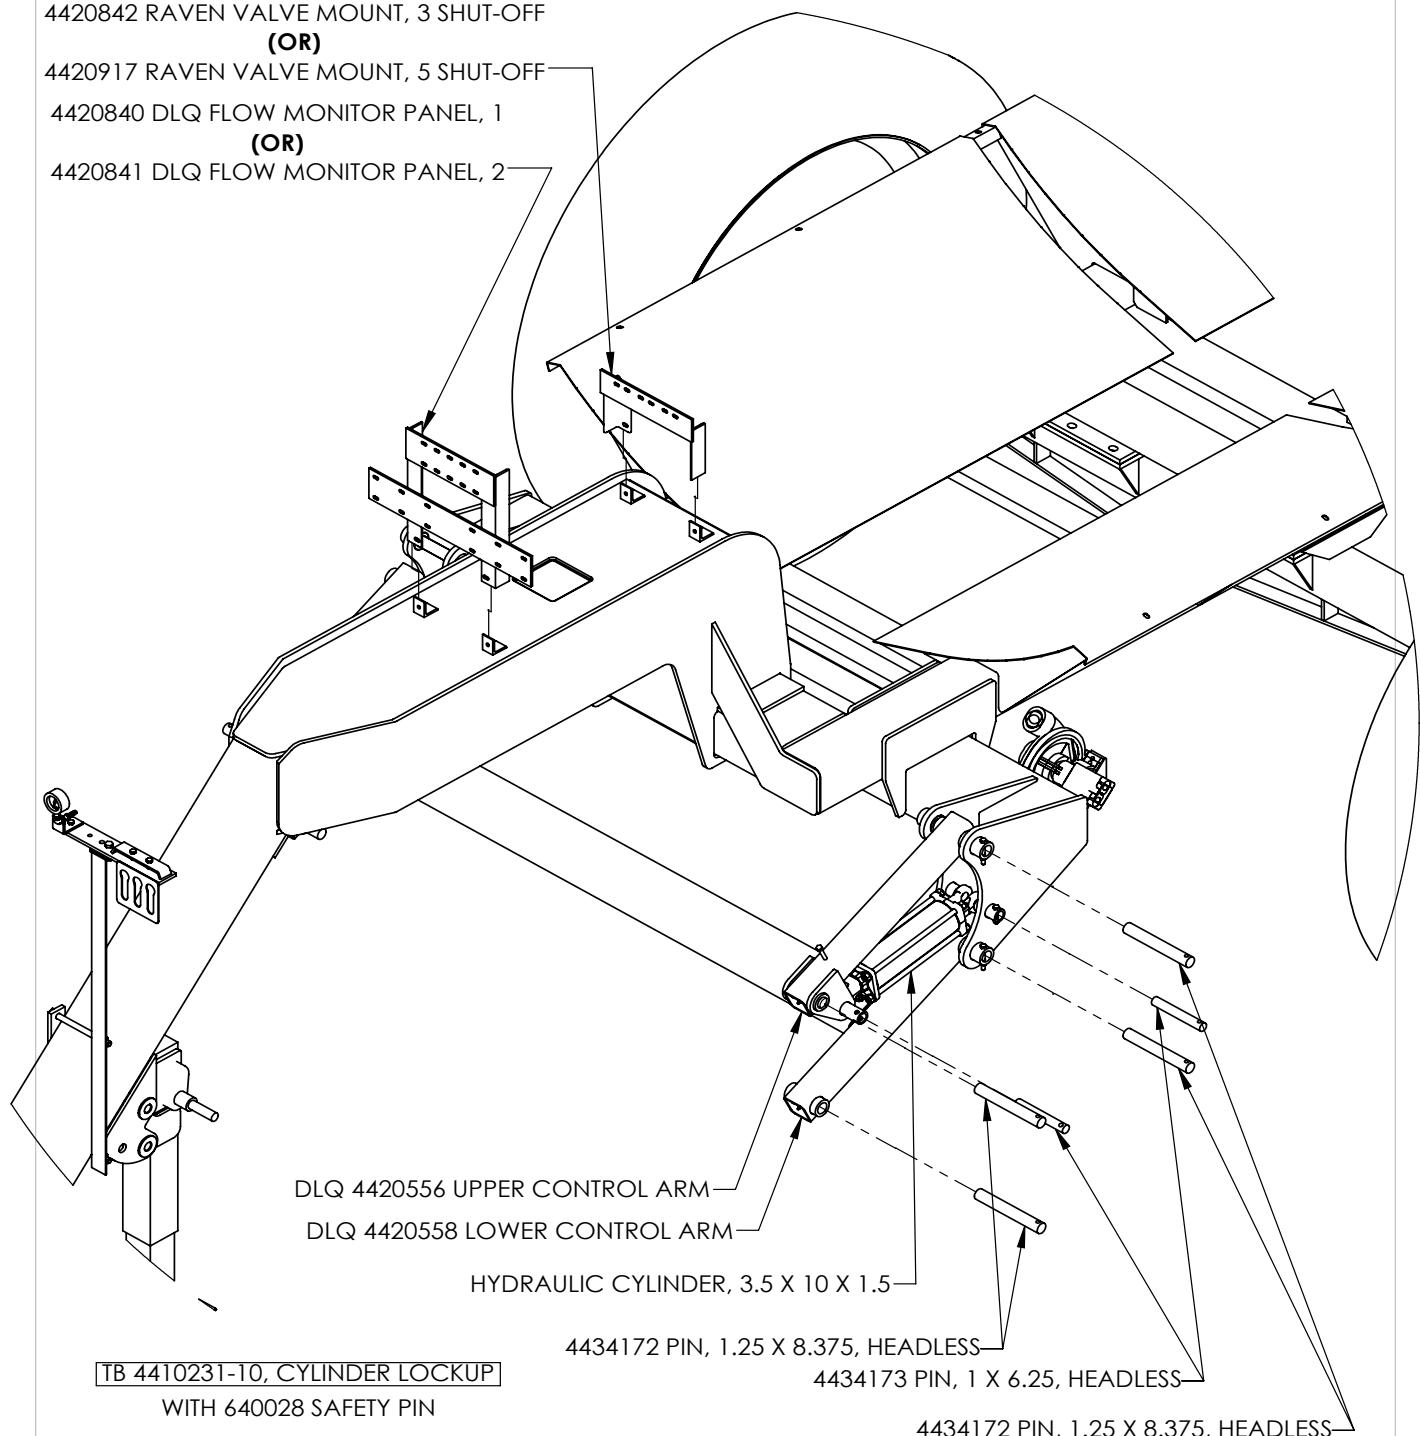

DRAWN BY	RICH SMMOTHERS	6/2/2014
CHECKED BY		
PRINT DATE	5/19/2017	
CONFIG.	Default	




DWG: DLQ HD TOOLBAR CONTROL ARM

SIZE	SHEET TITLE:	REV
A	Sheet1	A
SCALE: 1:18	SHEET 1 OF 1	

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.

COMMENTS:

DLQSTD AXLE, SPINDLE, AND HUB

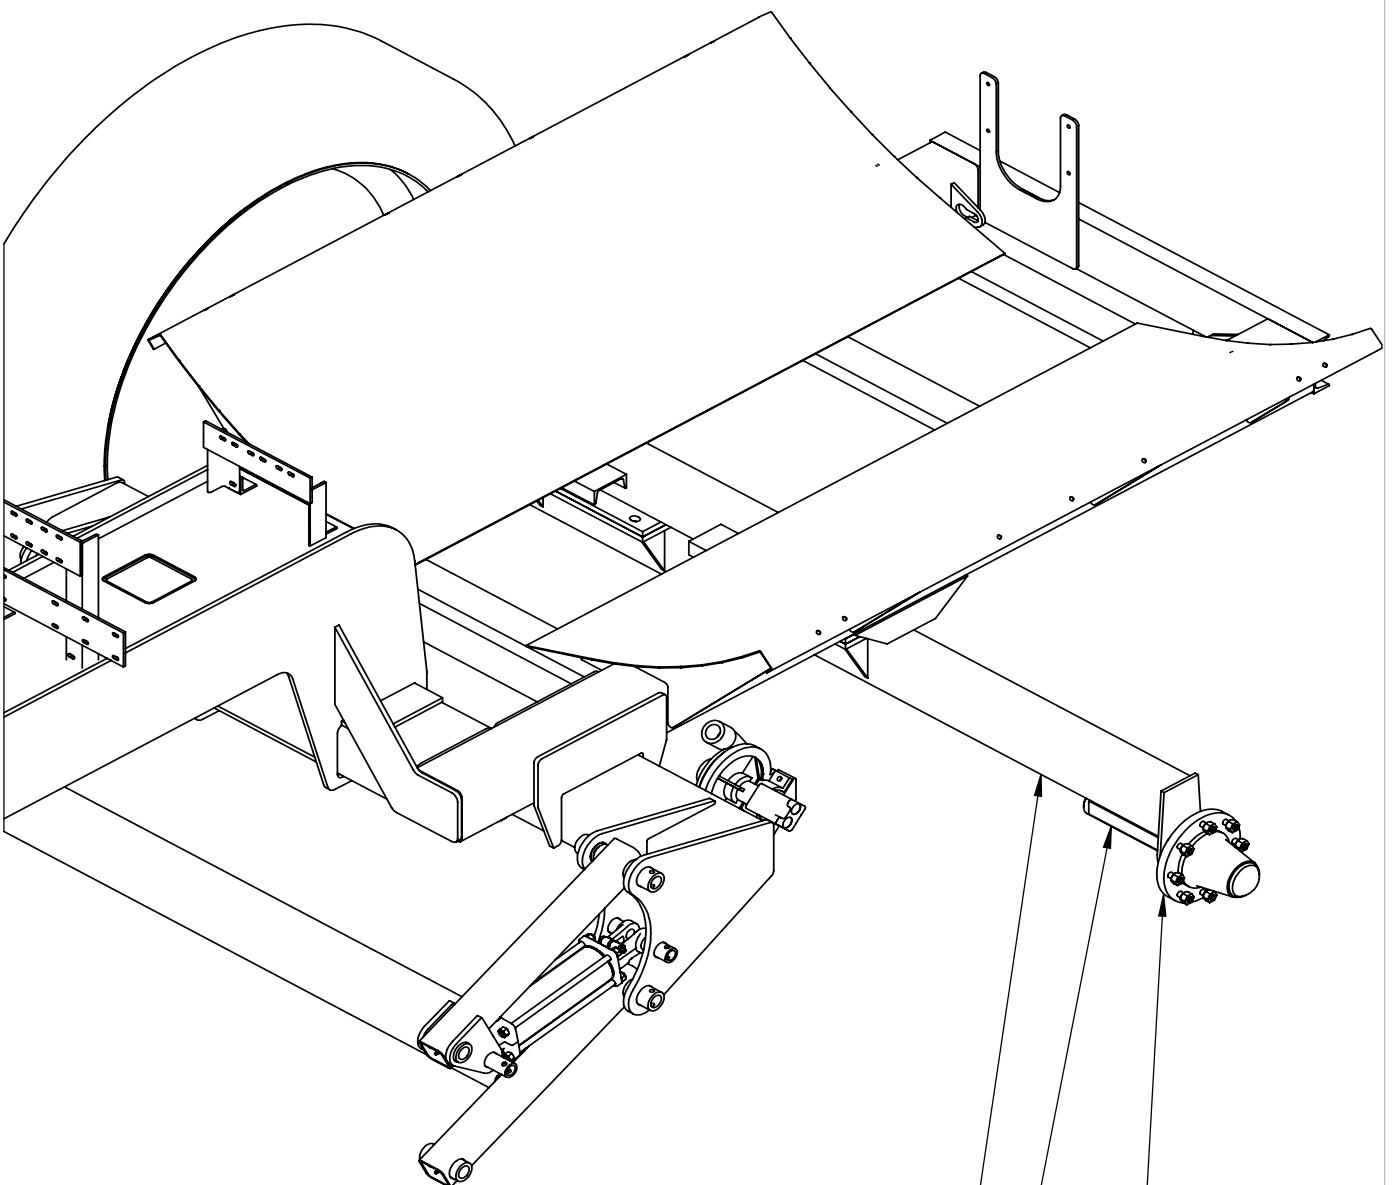

4410196 AXLE, 8B, 120, ASSEMBLY

4420489 AXLE, 8B, 120, WELDMENT

1002188 SPINDLE, 2.75X19.25

1002194, 819 8-BOLT HUB ASSEMBLY, COMPLETE

DRAWN BY	RICH SMOOTHERS	9/18/2015
CHECKED BY		
PRINT DATE	3/17/2017	
CONFIG.	Default	



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
DALTON AG. ANY REPRODUCTION IN
PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF DALTON AG IS
PROHIBITED.

COMMENTS:

DWG: DLQSTD AXLE, SPINDLE, AND HUB


SIZE	SHEET TITLE:	REV
A	Sheet1	A
SCALE: 1:16	SHEET 1 OF 1	

1002194, 819 8-BOLT HUB ASSEMBLY, COMPLETE

1002194, 819 8-BOLT HUB ASSEMBLY, COMPLETE

4450041 HUB REBUILD KIT
-INCLUDES BEARINGS, RACES, AND SEALS

DLQHD AXLE, SPINDLE, AND HUB
 (EXCLUDING DLQHD 2000)

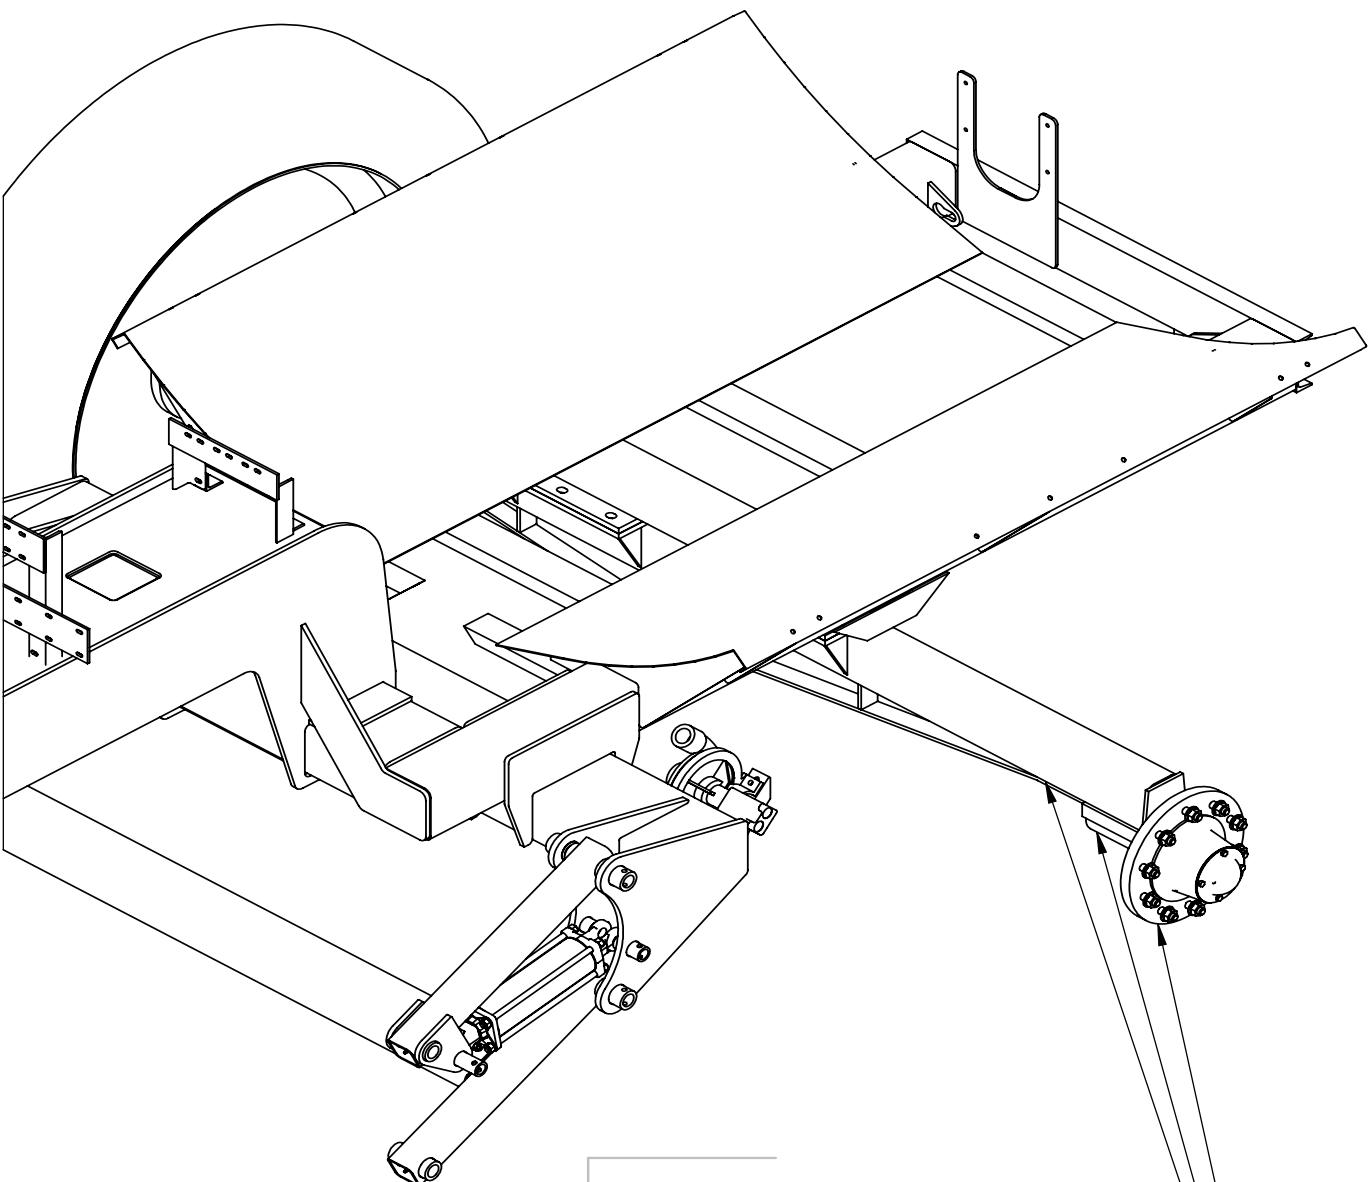

4410352 AXLE, 10B, 120, TRUSSED, ASSEMBLY

4420492 AXLE, 10B, 120, TRUSSED, WELDMENT

S-5296-L-12 SPINDLE, 3.50X16

4410248, 873 10-BOLT HUB ASSEMBLY, COMPLETE

DRAWN BY	RICH SMOOTHERS	1/21/2015
CHECKED BY		
PRINT DATE	3/17/2017	
CONFIG.	Default	


Dalton
 www.DaltonAg.com


PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS
 DRAWING IS THE SOLE PROPERTY OF
 DALTON AG. ANY REPRODUCTION IN
 PART OR AS A WHOLE WITHOUT THE
 WRITTEN PERMISSION OF DALTON AG IS
 PROHIBITED.

COMMENTS:

DWG: DLQHD AXLE, SPINDLE, AND HUB

SIZE	SHEET TITLE:	REV
A	Sheet1	A
SCALE: 1:16	SHEET 1 OF 1	

4410248, 873 10-BOLT HUB ASSEMBLY, COMPLETE

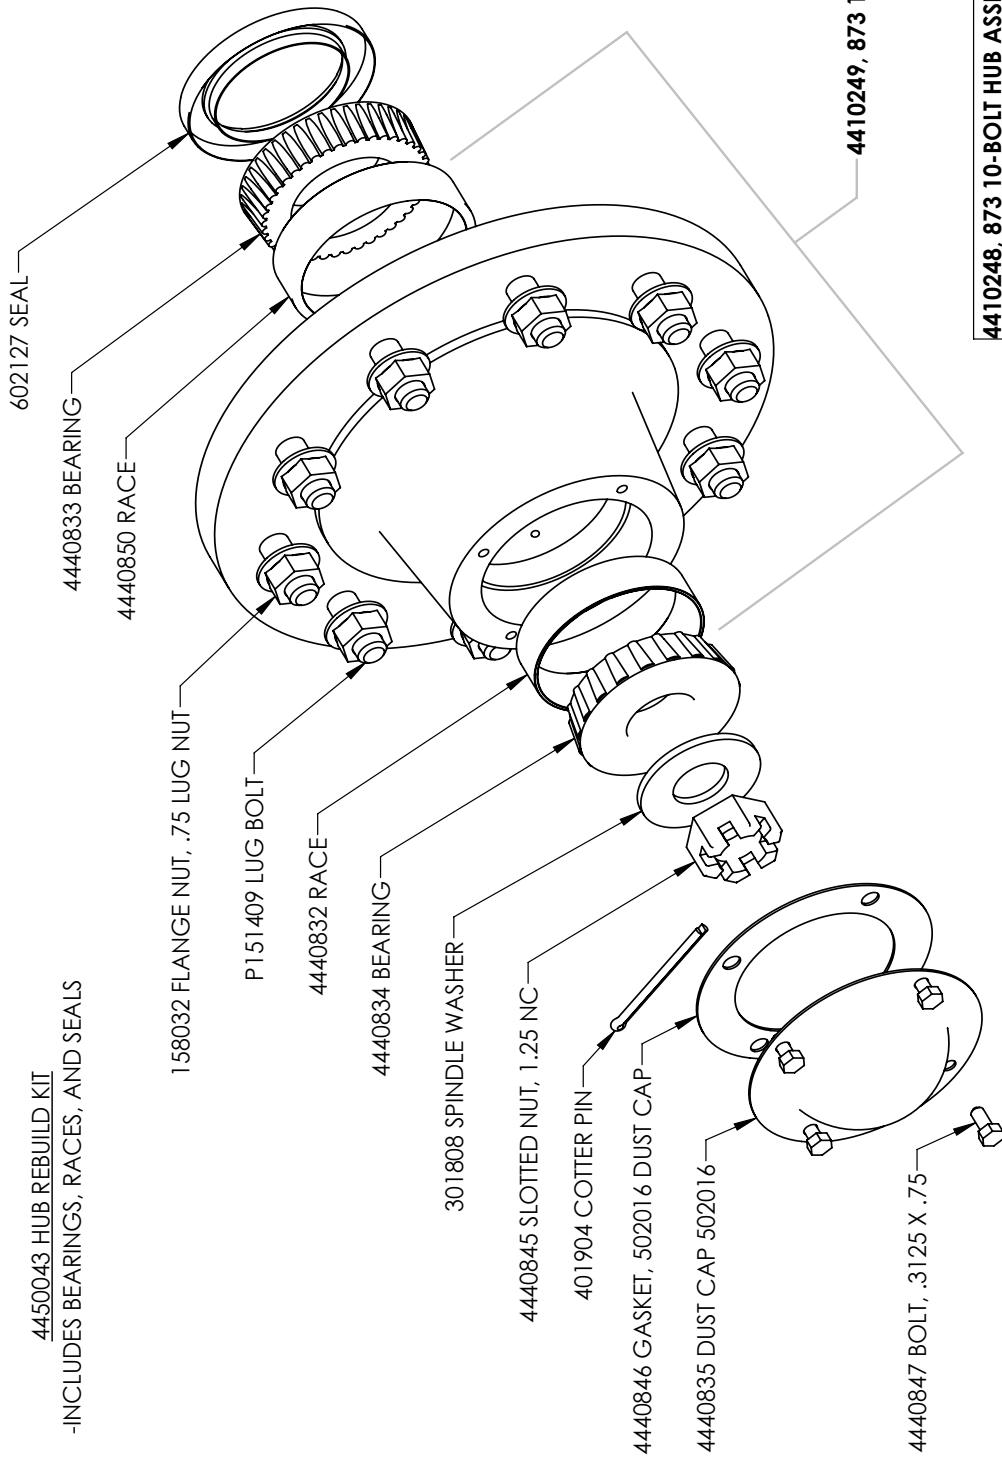

4410248, 873 10-BOLT HUB ASSEMBLY, COMPLETE




DWG: 4410248, 873 10-BOLT HUB ASSEMBLY, COMPLETE
602 E. VAN BUREN ST., LENOX, IA 50651

SIZE	SHEET TITLE:	Sheet	REV
A	SCALE: 1:4	SHEET 1 OF 1	A

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.

DLQHD 2000 AXLE, SPINDLE, AND HUB

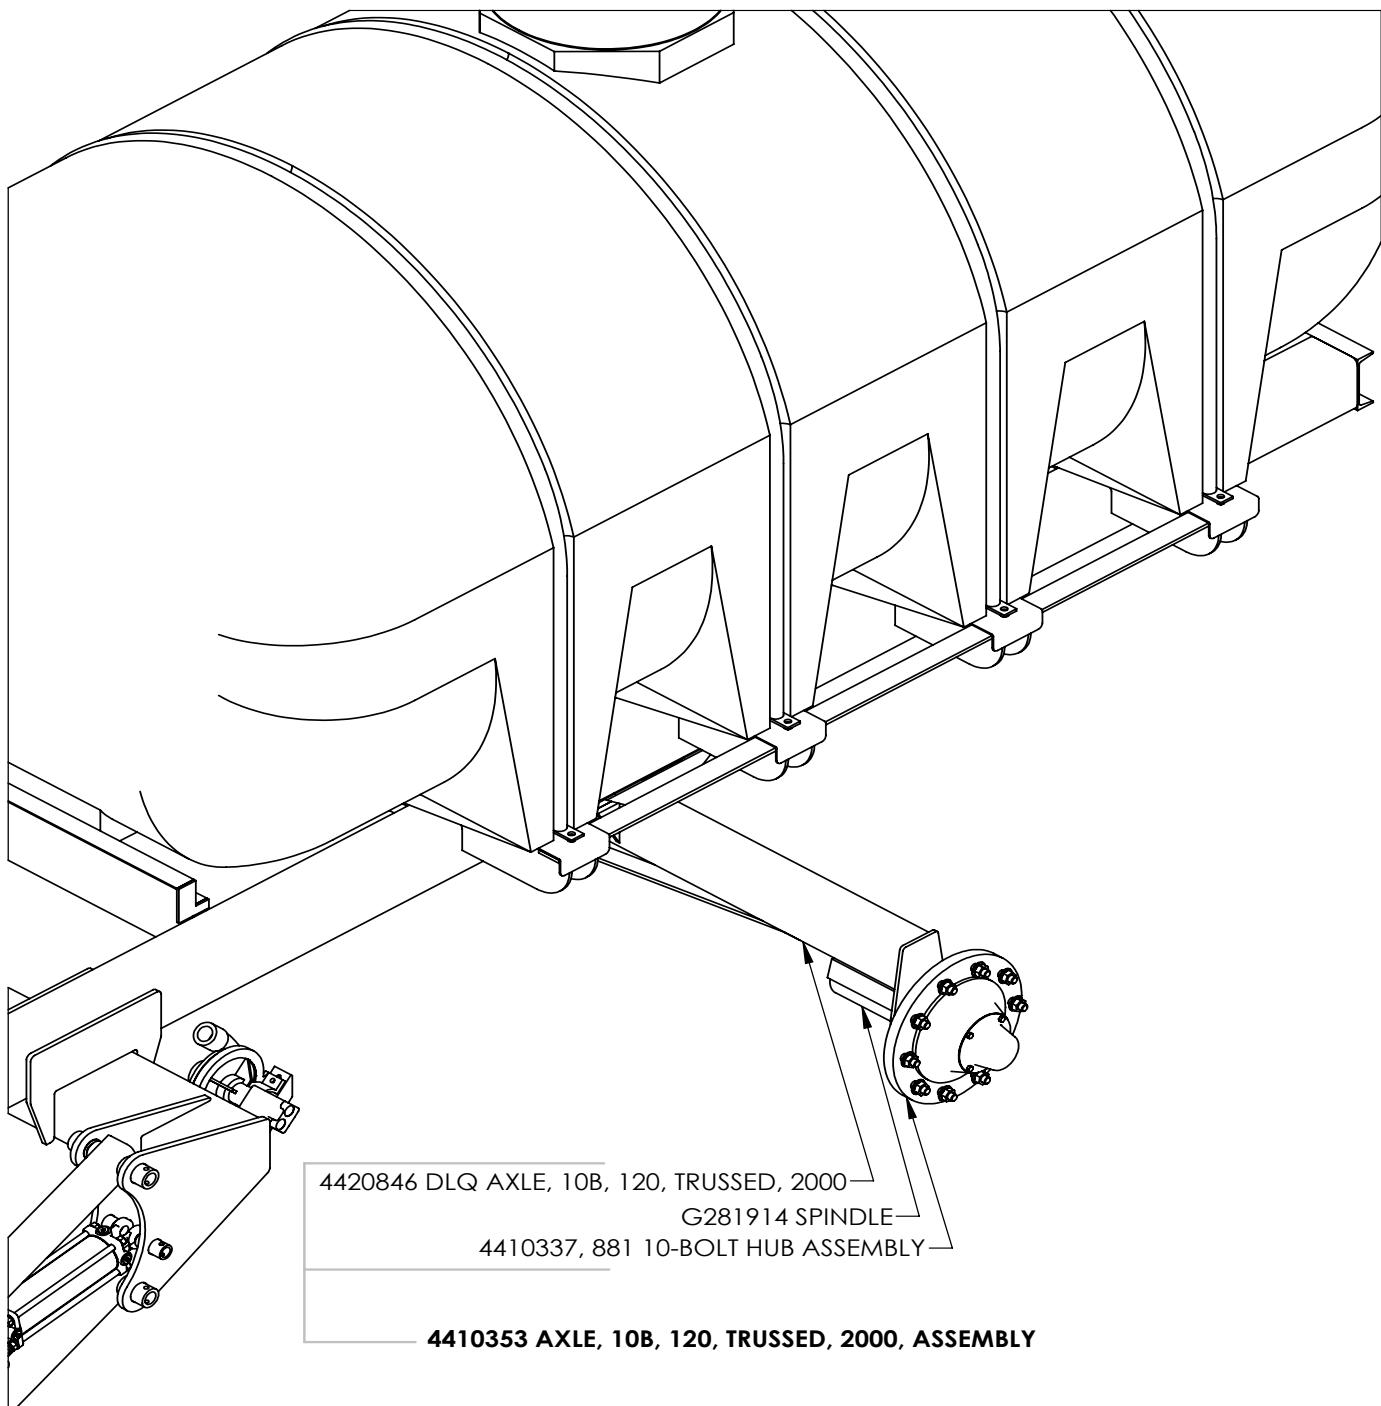

DRAWN BY	RICH SMMOTHERS	6/2/2014
CHECKED BY		
PRINT DATE	3/17/2017	
CONFIG.	Default	

 Dalton
www.DaltonAg.com


PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.

COMMENTS:

DWG:
DLQHD 2000 AXLE, SPINDLE, AND HUB

SIZE	SHEET TITLE:	REV
A	Sheet1	A
SCALE: 1:16	SHEET 1 OF 1	

4410337, 881 10-BOLT HUB ASSEMBLY, COMPLETE

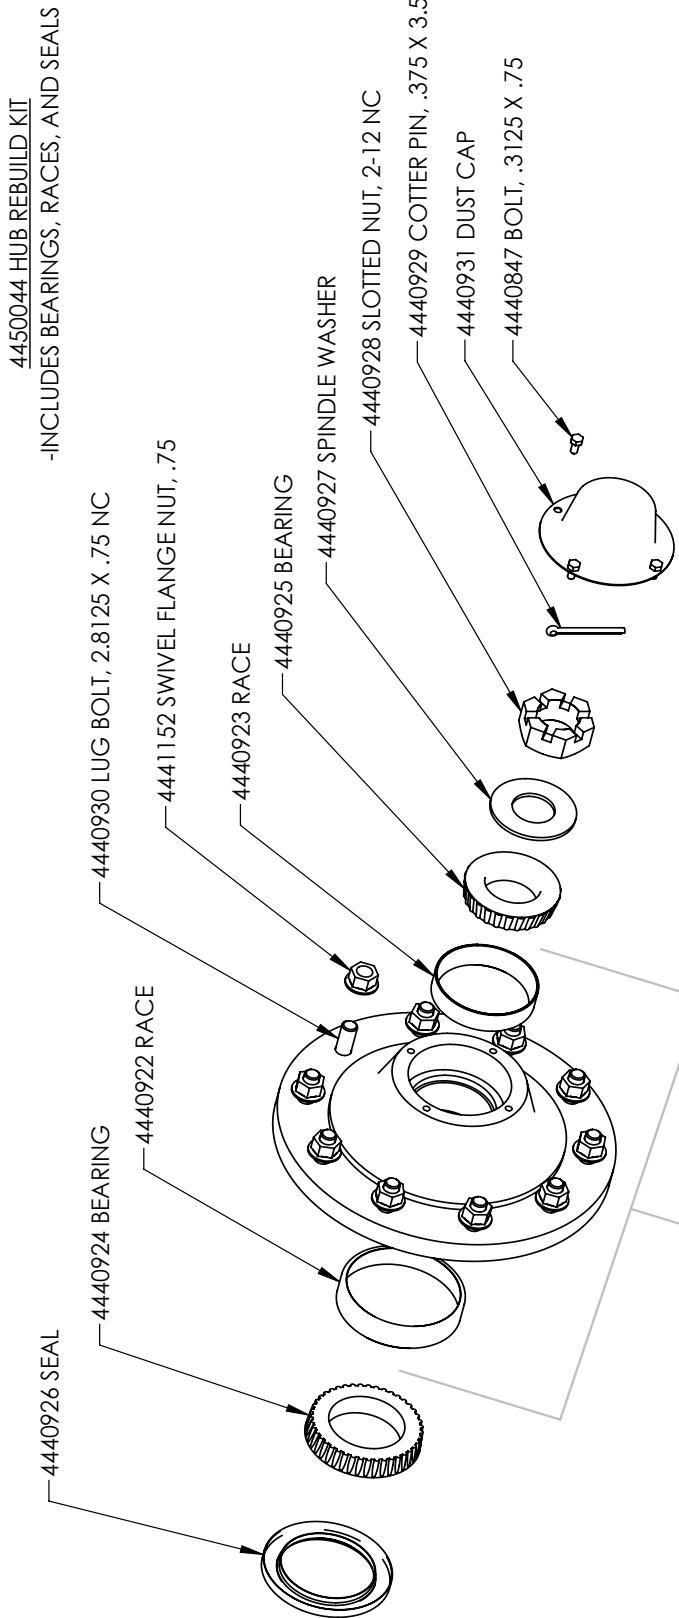


4410336, 881 10-BOLT HUB W RACES

4410337, 881 10-BOLT HUB ASSEMBLY

DRAWN BY	RICH SMOTHERS	5/18/2015	 A G C P B U C T 602 E. VAN BUREN ST., LEXO, IA 50651
CHECKED BY			
PRINT DATE	12/13/2017		
CONFIG.	Default		
COMMENTS:			
PROPRIETARY AND CONFIDENTIAL			
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.			
SHEET TITLE:	Sheet	REV	A
SIZE	SCALE: 1:8	SHEET 1 OF 1	1


DLQ ADJUSTABLE AXLE

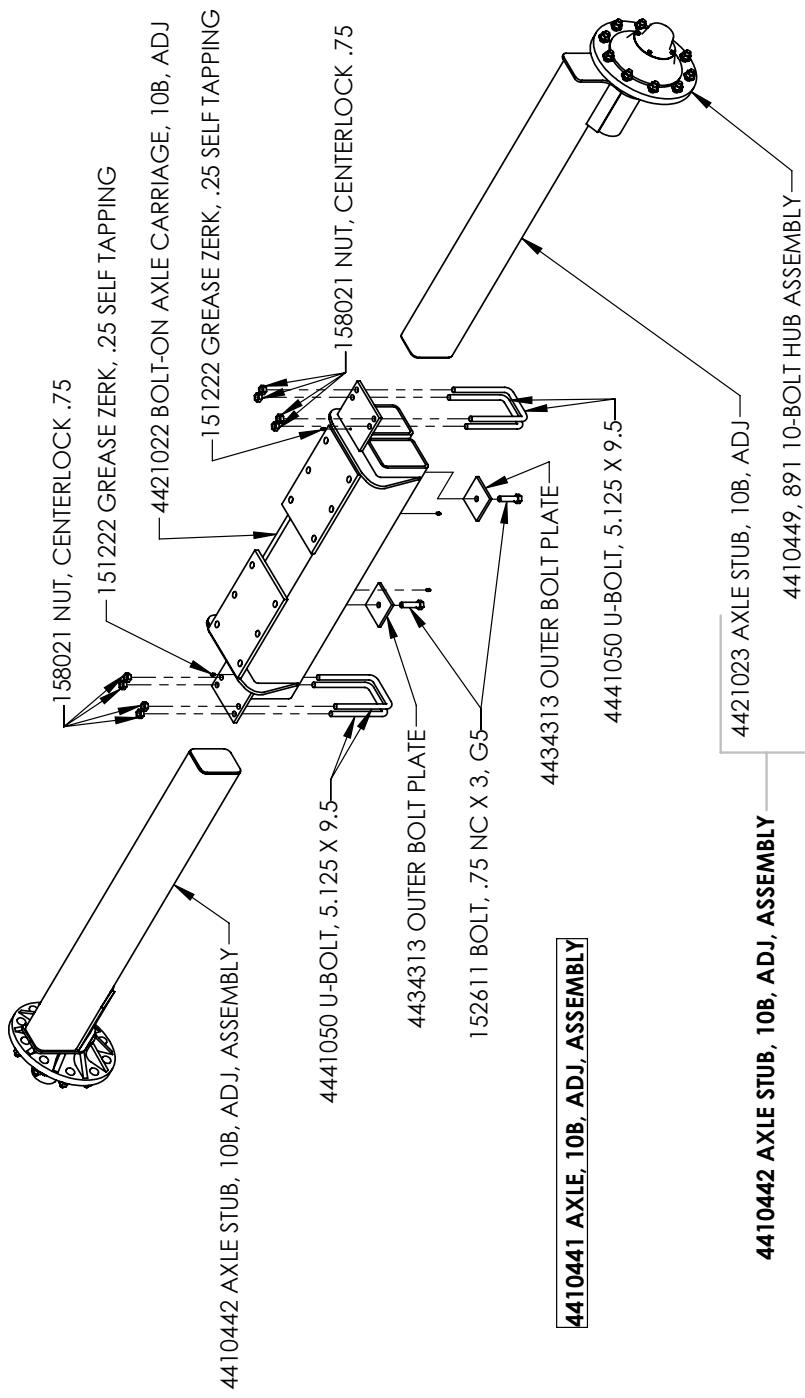

DRAWN BY	RICH SMOOTHERS	2/14/2017	Dalton 602 E. VAN BUREN ST., LENOX, IA 50851 DWG: DLQ ADJUSTABLE AXLE
CHECKED BY			
PRINT DATE	2/16/2017		
CONFIG.	Default		
COMMENTS:			
SHEET TITLE:	Sheet 1	REV	
SCALE: 1:24		SHEET 1 OF 1	
5	4	3	2

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.

4410449, 891 10-BOLT HUB ASSEMBLY, COMPLETE

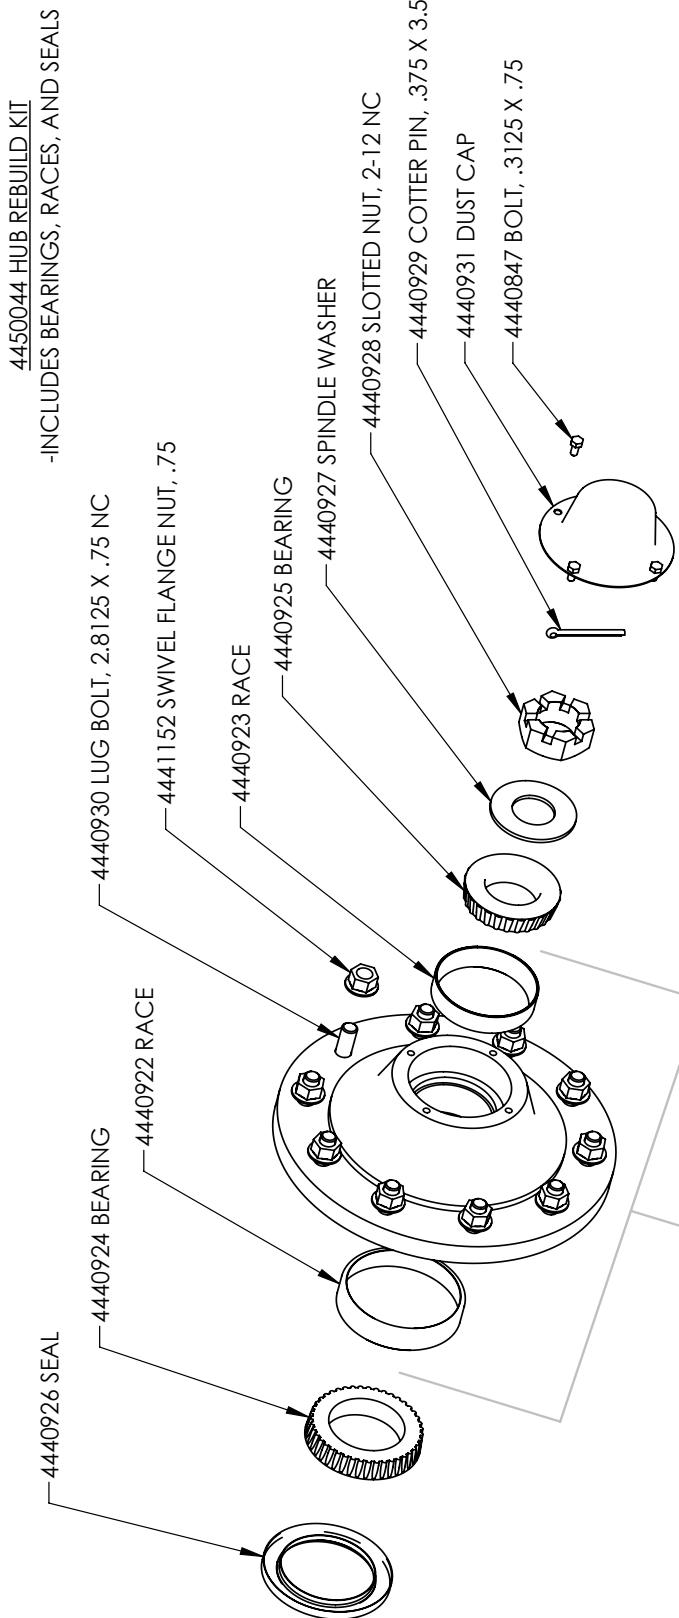

4410449, 891 10-BOLT HUB ASSEMBLY

DWG:	4410449, 891 10-BOLT HUB ASSEMBLY		
	A	Sheet 1	REV A
SIZE	SHEET TITLE:	Sheet 1	SHEET 1 OF 1
SCALE: 1:8			1

PROPRIETARY AND CONFIDENTIAL


THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.

DLQ SINGLE FOLD TOOLBAR

<p style="margin: 0;">DLQ SINGLE LIFT TOOLBAR</p> <p style="text-align: center;">4420213 PIN, 1 X 5.25, HEADED</p> <p style="text-align: center;">4435072 PIN, 2 X 7.625, HEADLESS</p> <p style="text-align: center;">HYDRAULIC CYLINDER, 3.5 X 30 X 1.5</p> <p style="text-align: center;">(2) TB 4435070 BUSHING, WING LIFT CYLINDER PIN</p> <p style="text-align: center;">TB 4410224 CYLINDER PIN WITH BUSHINGS</p>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 33%;">DRAWN BY</td> <td style="width: 33%;">RICH SMOTHERS</td> <td style="width: 33%;">6/12/2015</td> </tr> <tr> <td>CHECKED BY</td> <td></td> <td></td> </tr> <tr> <td>PRINT DATE</td> <td>5/19/2017</td> <td></td> </tr> <tr> <td>CONFIG.</td> <td>Default</td> <td></td> </tr> <tr> <td colspan="3">COMMENTS:</td> </tr> </table> <p>PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.</p>	DRAWN BY	RICH SMOTHERS	6/12/2015	CHECKED BY			PRINT DATE	5/19/2017		CONFIG.	Default		COMMENTS:		
DRAWN BY	RICH SMOTHERS	6/12/2015														
CHECKED BY																
PRINT DATE	5/19/2017															
CONFIG.	Default															
COMMENTS:																
<p style="text-align: center;">5</p>	<p style="text-align: center;">4</p>	<p style="text-align: center;">3</p>														
<p style="text-align: center;">2</p>	<p style="text-align: center;">1</p>	<p style="text-align: center;">1</p>														


DLQ FRONT FOLD TOOLBAR

DLQ FRONT FOLD TOOLBAR

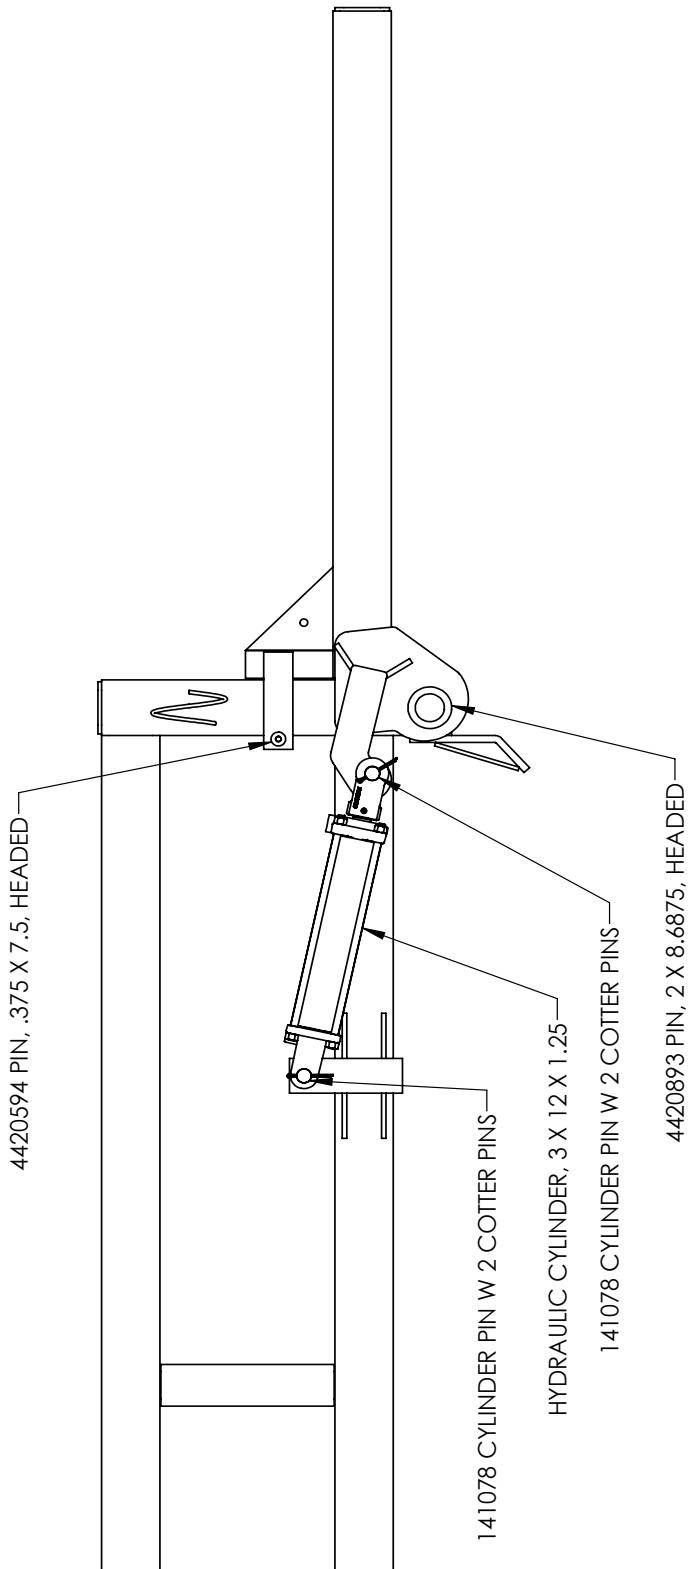


DRAWN BY	RICH SMOOTHERS	9/25/2015	
CHECKED BY			
PRINT DATE	9/19/2017		
CONFIG.	Default		
PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.			
DWG:	DLQ FRONT FOLD TOOLBAR		
SHEET TITLE:	Sheet 1		REV
A	SCALE: 1:12	2	A
	3	3	
	4	4	
	5	5	
			1
			SHEET 1 OF 1


DLQ DOUBLE FOLD TOOLBAR

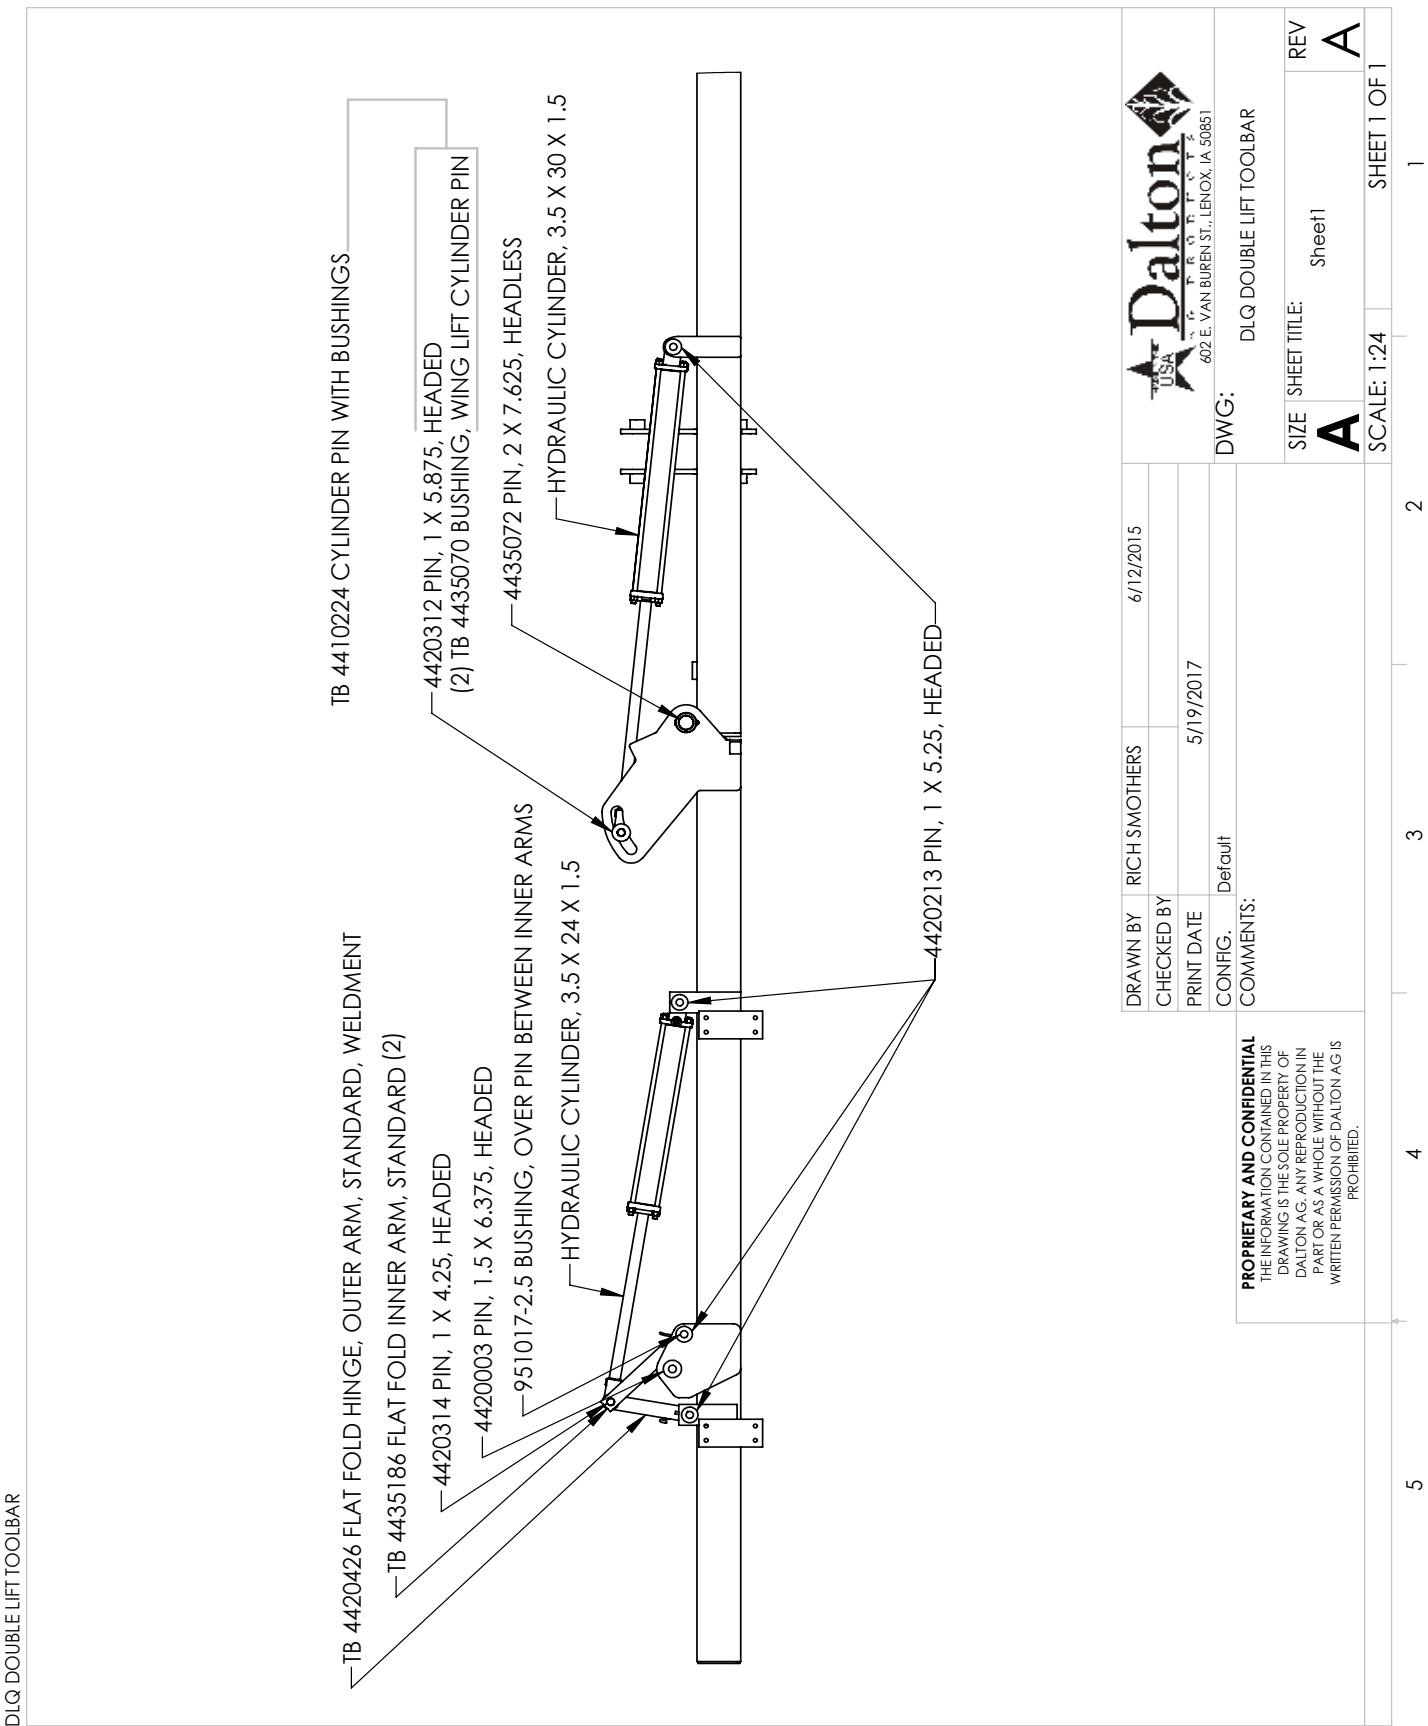

DLQHD 60' TOOLBAR

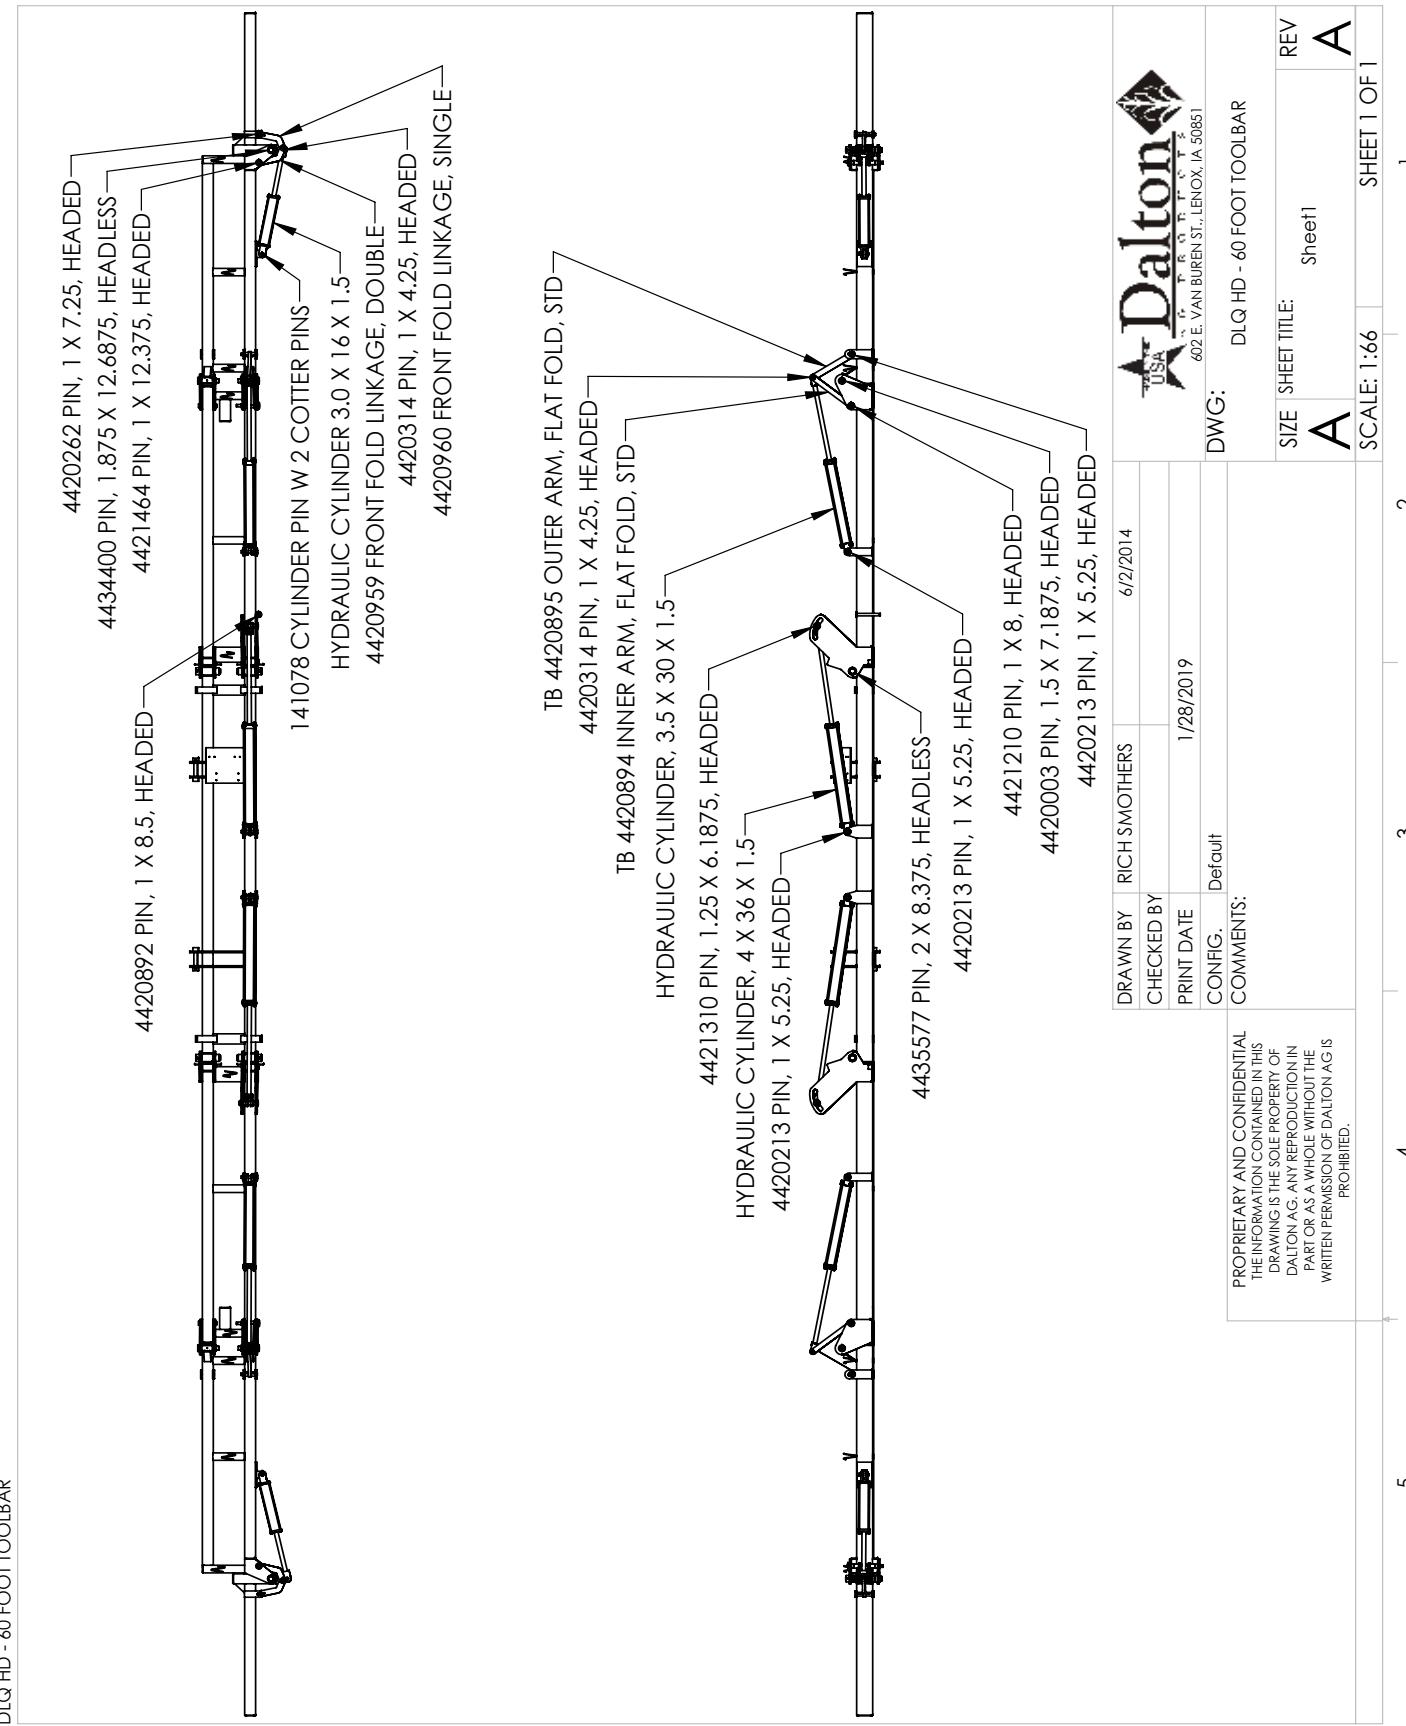


TOOLBAR CYLINDER STOP

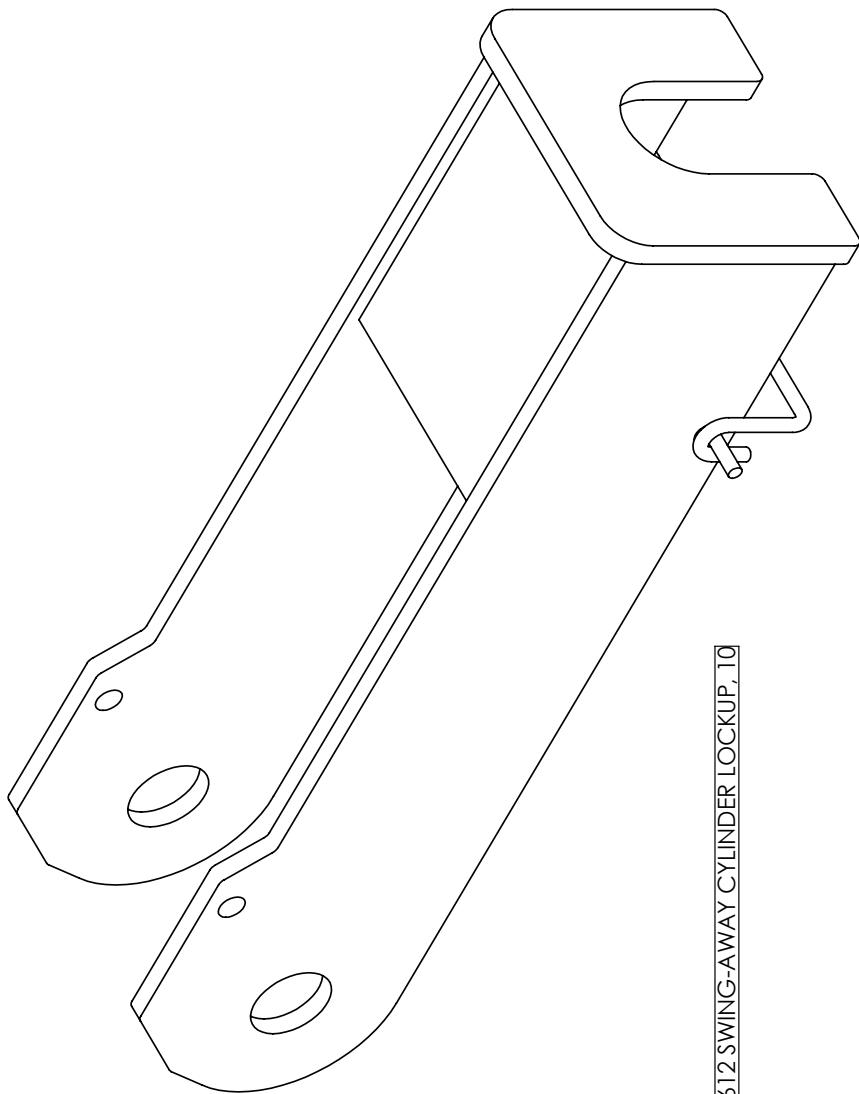


4410612 SWING-AWAY CYLINDER LOCKUP, 10

DRAWN BY	Jeremy Newton	2/14/2017	 602 E. VAN BUREN ST., LENOX, IA 50851 DWG: TOOLBAR CYLINDER STOP
CHECKED BY			
PRINT DATE	2/22/2019		
CONFIG.	Default		
COMMENTS:			
SHEET TITLE:	Sheet1	REV	
SIZE	A	SCALE: 1:2	SHEET 1 OF 1
2	3	4	5
PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.			

DLQ LIGHT KIT

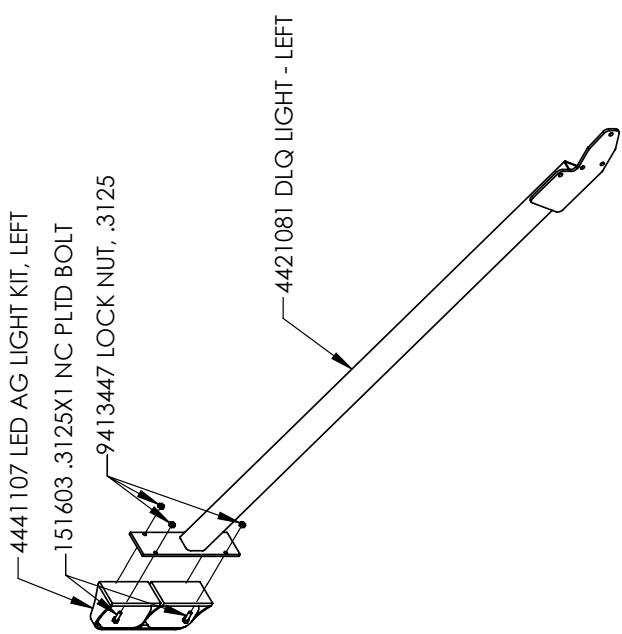

4410454 DLQ ADJ LIGHTS

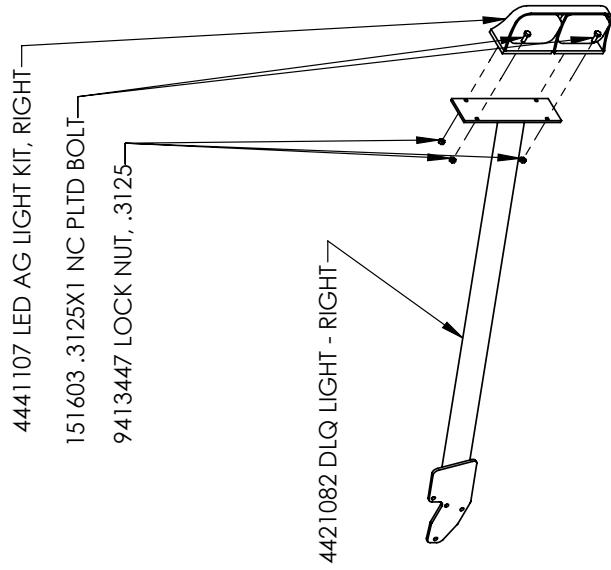

DRAWN BY	RICH SMOOTHERS	2/16/2017
CHECKED BY		
PRINT DATE	5/24/2017	
CONFIG.	Default	
COMMENTS:		

DWG: DLQ LIGHT KIT




602 E. VAN BUREN ST., LENOX, IA 50851

SIZE	SHEET TITLE:	Sheet 1	REV
A	SCALE: 1:16	SHEET 1 OF 1	1

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.

CYLINDER LINKAGE AND DOWNPRESSURE

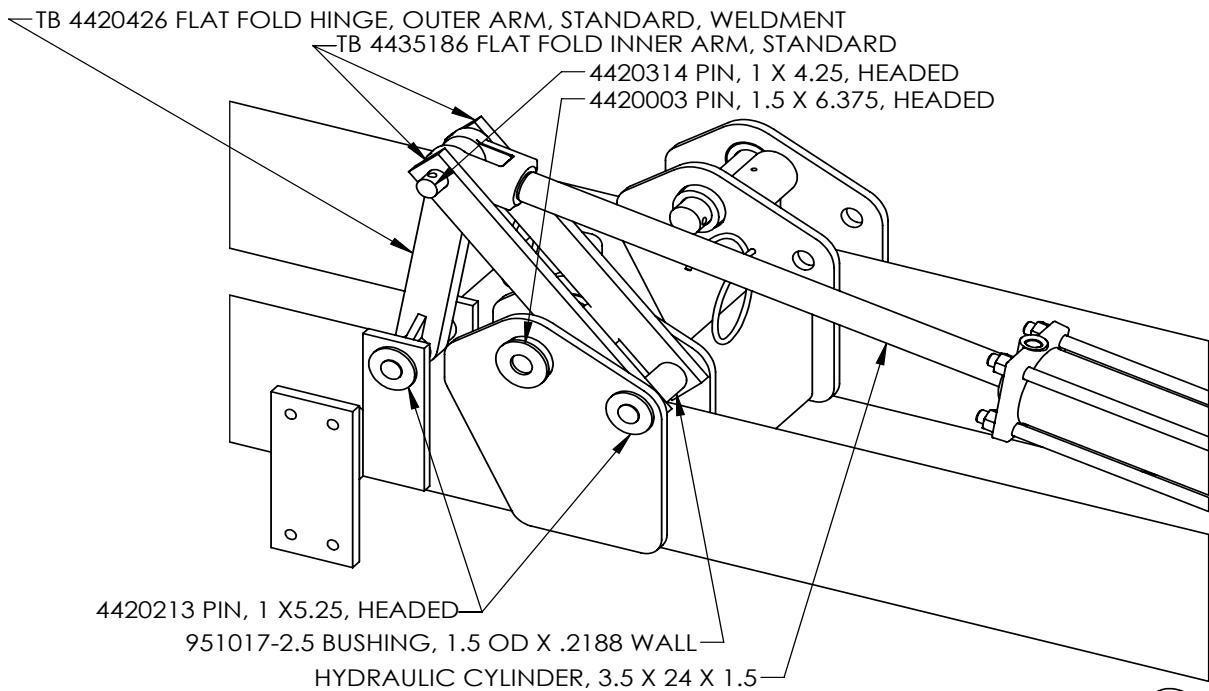

DLQ DOUBLE LIFT TOOLBAR

LIFT CYLINDER LINKAGE

TB 4410224 CYLINDER PIN WITH BUSHINGS

4434305 DLQ PIN LINKAGE

4434305 DLQ PIN LINKAGE


4420920 PIN, 1.5 X 5.875

DLQ DOWNPRESSURE KIT



Dalton
 www.DaltonAg.com

DRAWN BY	RICH SMMOTHERS	6/12/2015
CHECKED BY		
PRINT DATE	5/19/2017	
CONFIG.	Default	
COMMENTS:		DWG: CYLINDER LINKAGE AND DOWNPRESSURE
PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.	SHEET TITLE: Sheet1	REV A
	SCALE: 1:8	SHEET 1 OF 1


DLQ WING LOCK

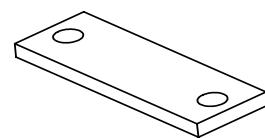


TB 4435227 BOLT PLATE, WING LOCK HOOK

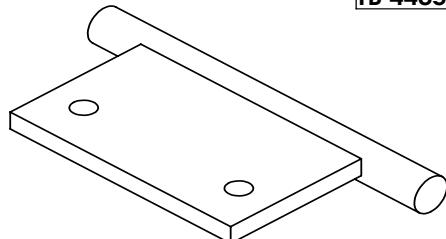

TB 4420425 WING LOCK HOOK, WELDMENT

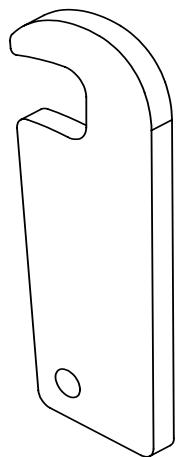

4435426 WING LATCH

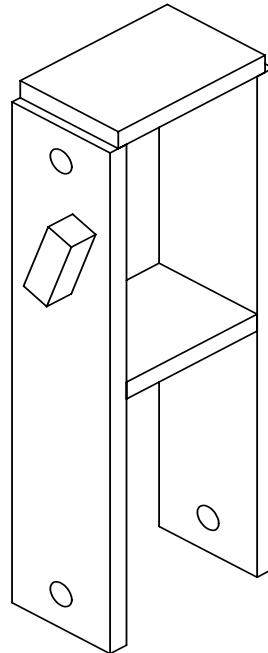

DLQ 4421028 WING LOCK BASE, WELDMENT

DRAWN BY	RICH SMOTHERS	1/25/2012
CHECKED BY		
PRINT DATE	6/24/2016	
CONFIG.	RIGHT	


www.DaltonAg.com


PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
DALTON AG. ANY REPRODUCTION IN
PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF DALTON AG IS
PROHIBITED.

COMMENTS:

DWG: DLQ WING LOCK

SIZE	SHEET TITLE:	Sheet1	REV
A			A
SCALE: 1:4	SHEET 1 OF 1		

2 PIN GAUGE WHEEL AND BRACKET

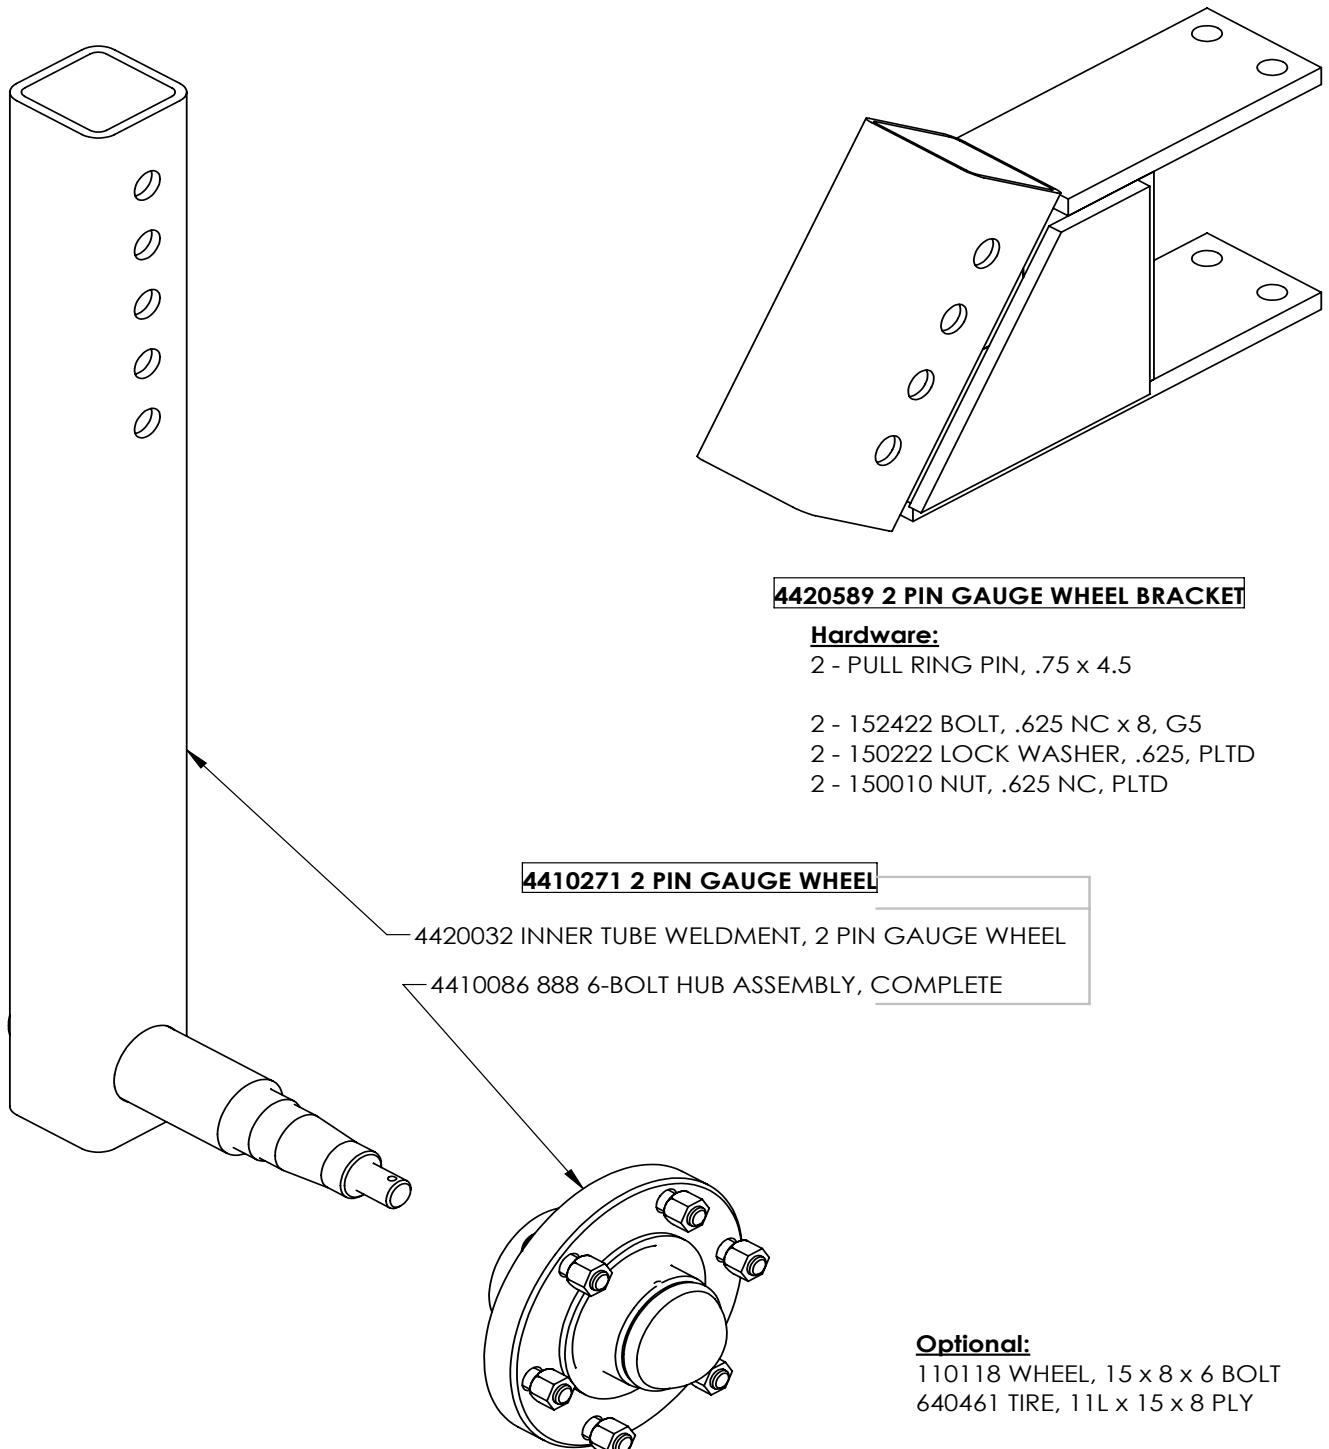

DRAWN BY	RICH SMOOTHERS	1/21/2014
CHECKED BY		
PRINT DATE	6/21/2016	
CONFIG.	Default	



www.DaltonAg.com

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
DALTON AG. ANY REPRODUCTION IN
PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF DALTON AG IS
PROHIBITED.

COMMENTS:	DWG: 2 PIN GAUGE WHEEL AND BRACKET	
	SHEET TITLE: Sheet1	REV A
SCALE: 1:4	SHEET 1 OF 1	


4410086, 888 6-BOLT HUB ASSEMBLY, COMPLETE

ASSEMBLY

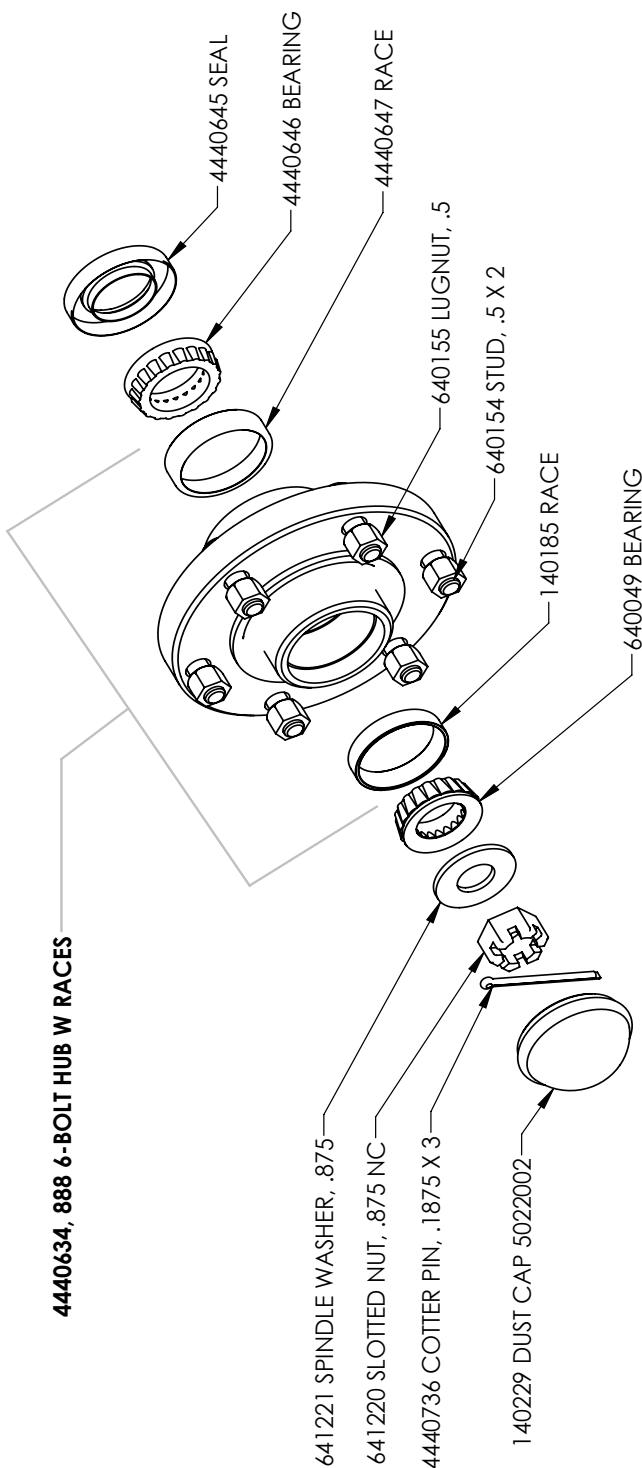

4410086 888 6-BOLT HUB ASSEMBLY, COMPLETE

DRAWN BY	RICH SMOTHERS	5/4/2009	Dalton 602 E. VAN BURENST., LENOX, IA 50851 DWG: 4410086 888 6-BOLT HUB ASSEMBLY, COMPLETE
CHECKED BY			
PRINT DATE	12/13/2017		
CONFIG. EXPLODED			
SHEET TITLE:	Sheet 1	REV A	
SCALE: 1:4	2	3	4
			5

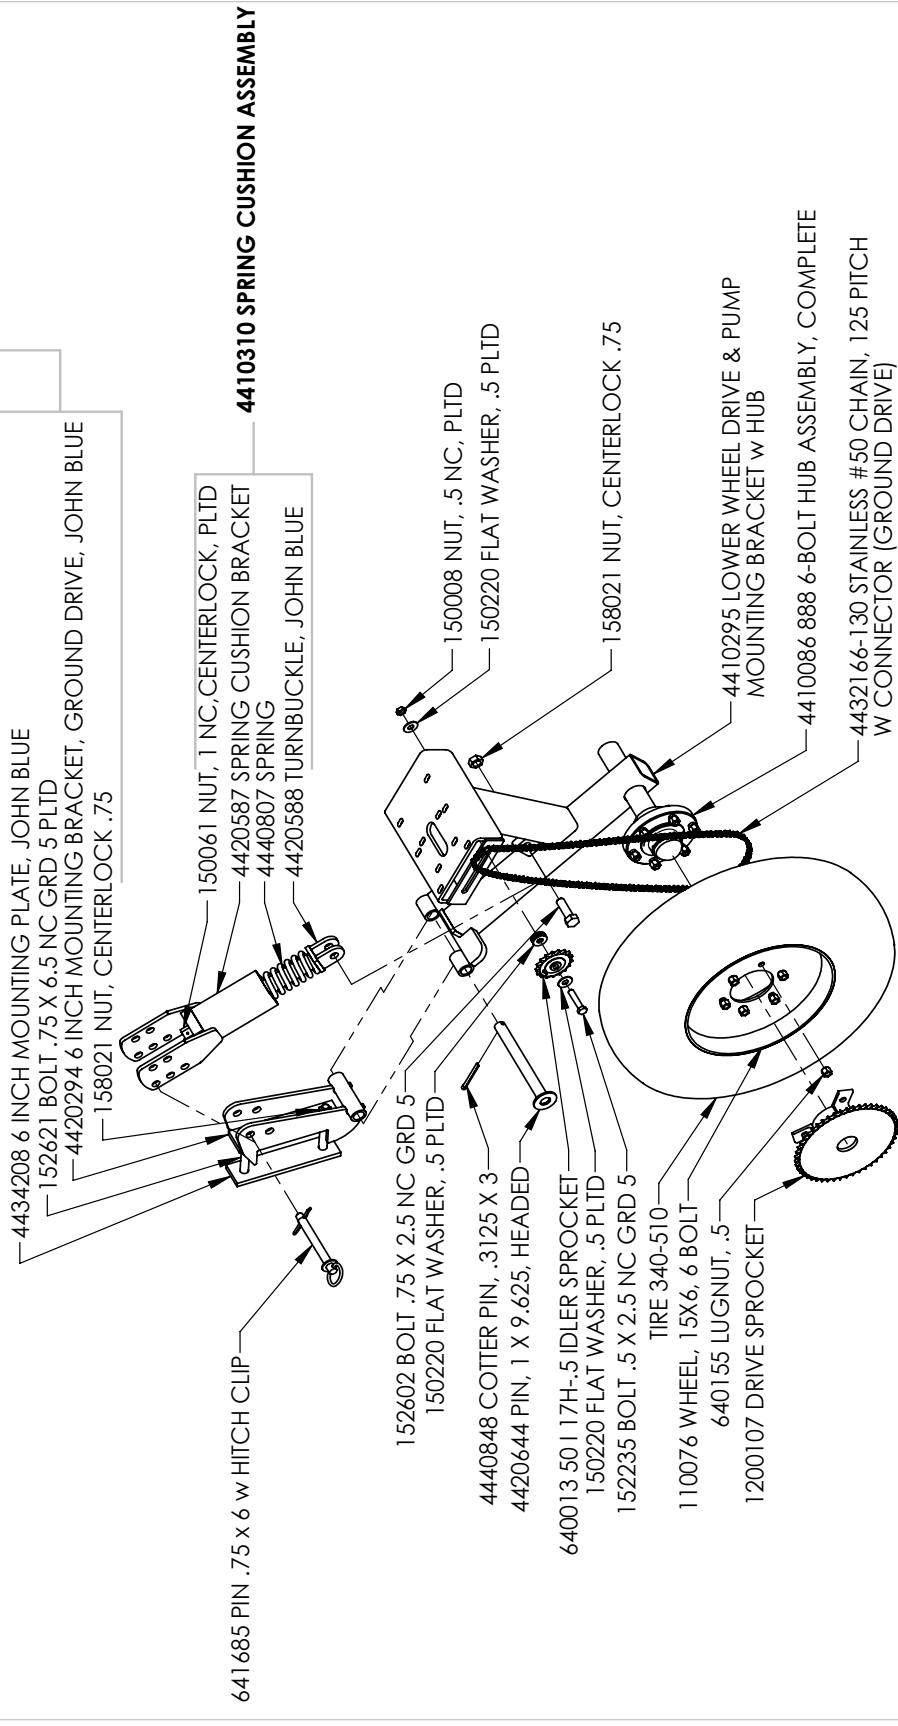4410298 6 INCH MOUNTING BRACKET ASSEMBLY**GROUND DRIVE ASSEMBLY**

(LESS PUMP WITH LUG TIRE)

4410116 GROUND DRIVE ASSEMBLY, LESS PUMP WITH LUG TIRE

DRAWN BY	RICH SMOTHERS	5/21/2014
CHECKED BY		
PRINT DATE	5/19/2017	
CONFIG.	EXPLODED	
COMMENTS:		



PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS
 DRAWING IS THE SOLE PROPERTY OF
 DALTON AG. ANY REPRODUCTION
 IN PART OR AS A WHOLE WITHOUT THE
 WRITTEN PERMISSION OF DALTON AG IS
 PROHIBITED.

SIZE	SHEET TITLE:	Sheet	REV
A	SCALE: 1:16	SHEET 1 OF 1	A



DWG:
 GROUND DRIVE ASSEMBLY, LESS PUMP WITH LUG
 TIRE
 602 E. VAN BUREN ST., LENOX, IA 50851

DLQ 3-SHUTOFF RAVEN PLUMBING

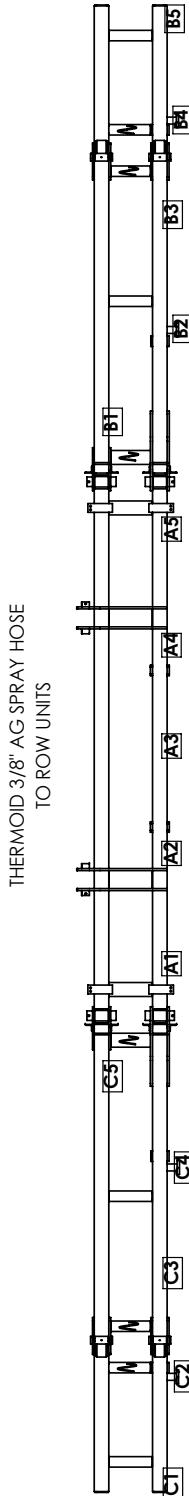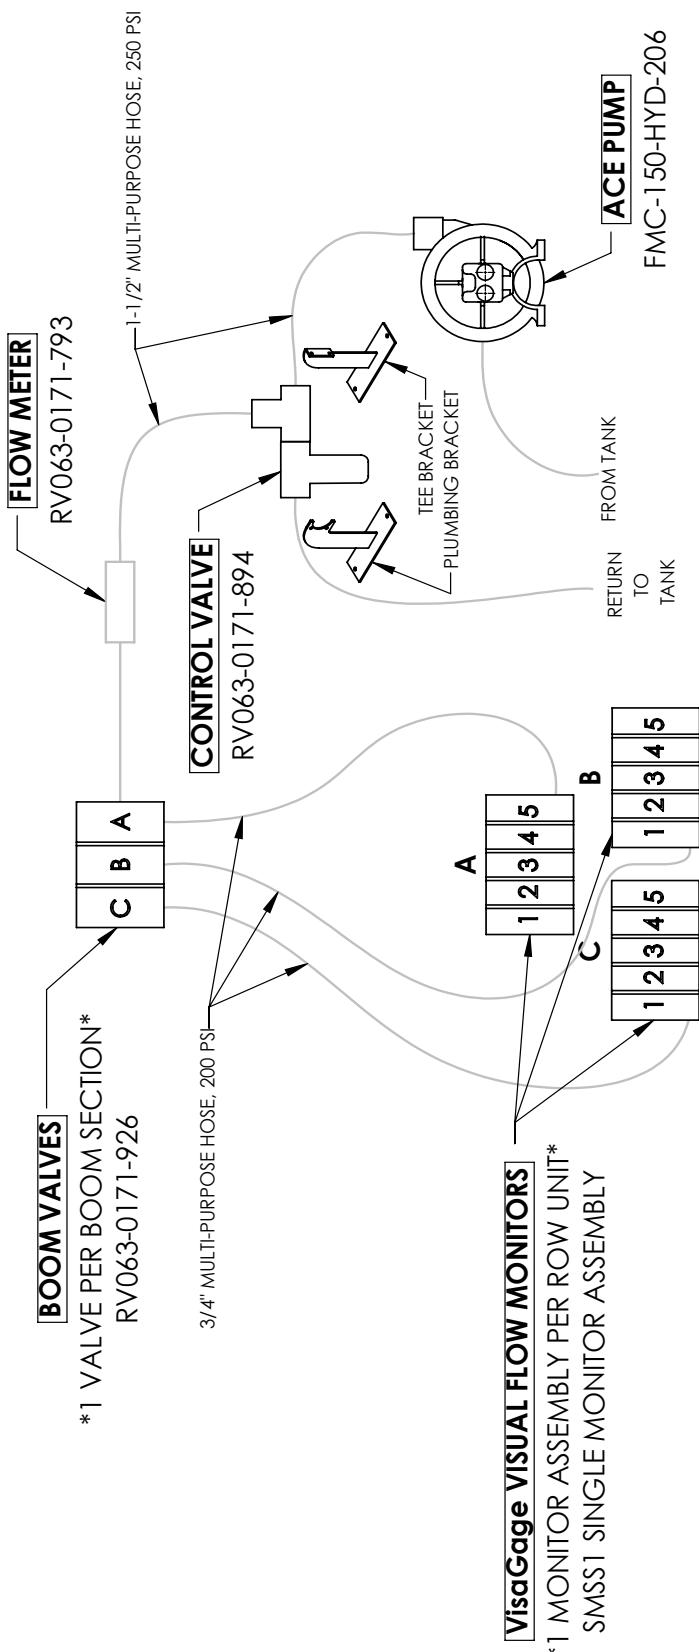

SIZE	SHEET TITLE:	Sheet 1	REV 0
A	SCALE: 1:48	SHEET 1 OF 1	
4	3	2	1
5			


PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.

Dalton
USA
602 E. VAN BUREN ST., LENOX, IA 50851
DWG: DLQ 3-SHUTOFF RAVEN PLUMBING

DRAWN BY RICH SMOTHERS
CHECKED BY
PRINT DATE 5/22/2017
CONFIG. Default
COMMENTS:

4/21/2016


YETTER COULTER ASSEMBLY

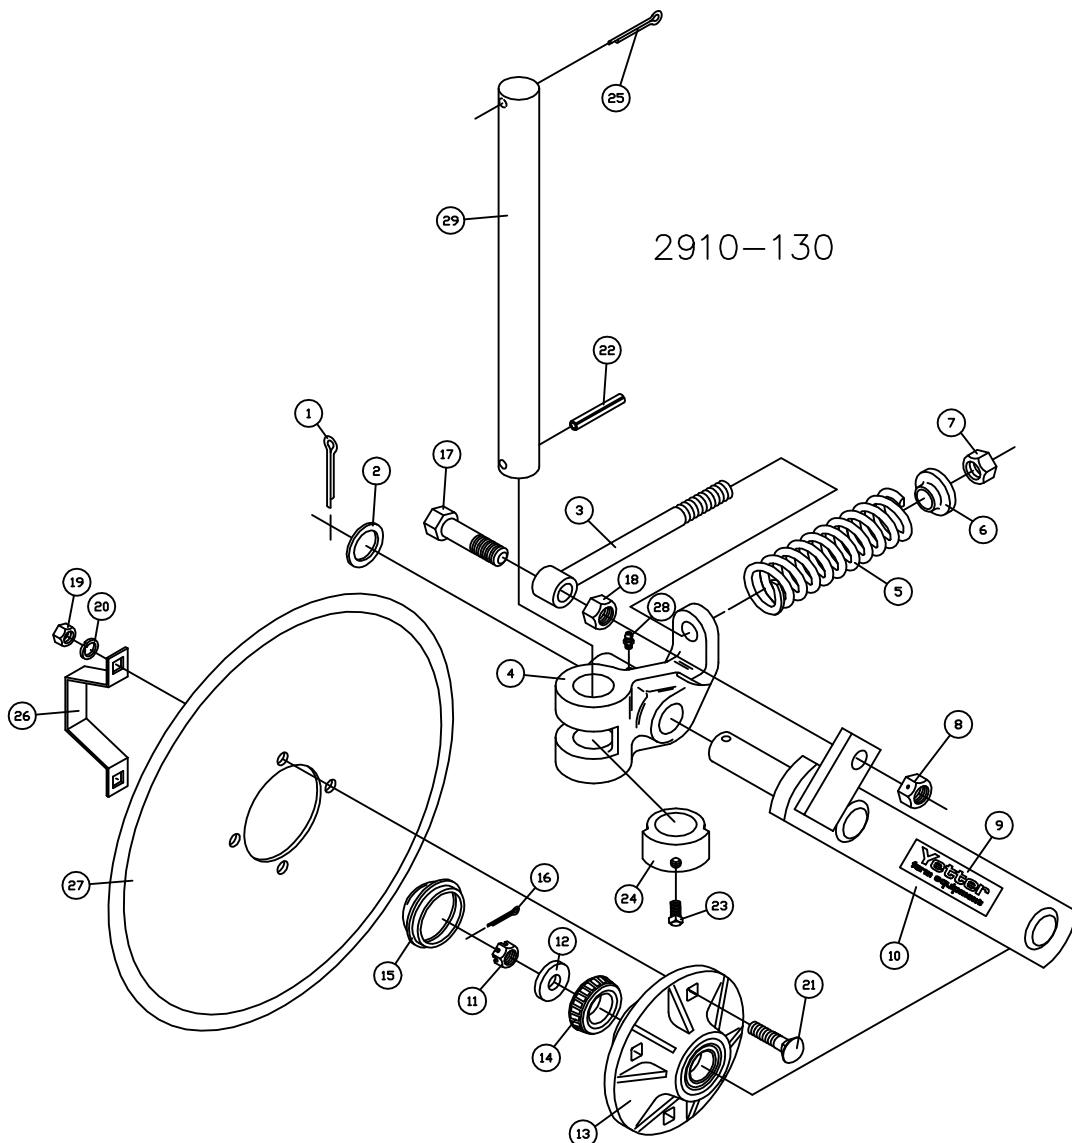

DET	QTY	PART NO.	DESCRIPTION	DET	QTY	PART NO.	DESCRIPTION
1	1	2531-125	1/4" X 1-3/4" COTTER PIN	14	1	2550-027	CONE, LM67048
2	1	2526-561	1-17/64"ID X 1-7/8"OD X14GA WASHER	15	1	2570-375	DUST CAP
3	1	2570-125	EYEBOLT	16	1	2531-102	1/8" X 1-1/4" COTTER PIN
4	1	2910-320	PIVOT	17	1	2502-410	3/4"-16 X 3" HEX BOLT GRADE 5
5	1	2910-311	SPRING	18	1	2520-508	3/4"-16 HEX NUT
6	1	2910-302	SPRING BUSHING	19	4	2520-352	1/2"-13 HEX NUT
7	1	2520-516	3/4"-10 NY-LOCK HEX NUT	20	4	2525-352	1/2" LOCKWASHER
8	1	2520-511	3/4"-16 LOCK HEX NUT	21	4	2505-337	1/2"-13 X 1 1/4" CARRIAGE BOLT GRADE 5
9	1	2565-162	DECAL-YETTER	22	1	2530-208	3/8" X 2-1/2" ROLL PIN
10	1	2910-201	PIVOT ARM	23	1	2503-379	5/8"-11 X 1" SET SCREW
11	1	2520-469	5/8"-18 SLOTTED HEX NUT	24	1	2910-301	SWIVEL COLLAR
12	1	2526-449	5/8" FLATWASHER, 1/4" THICK	25	1	2531-161	5/16" X 2-1/2" COTTER PIN
13	1	2900-102	HUB SUB-ASSEMBLY	26	1	2987-301	DUST CAP RETAINER
1	1	2550-027	CONE, LM67048	27	1		COULTER BLADE-REFERENCE ONLY
1	1	2550-066	TRIPLE LIP SEAL	28	1	2533-110	1/4"-28 LUBE FITTING-SELF TAP
1	1	2900-105	HUB/CUP PRESSED ASSEMBLY	29	1		SHANK 1-1/2" ROUND-REFERENCE ONLY
1	1	2533-110	1/4"-28 LUBE FITTING-SELF TAP				
1	1	2550-029	CUP, LM67010				

05/12/2016 S431


NOZZLE AND COULTER ASSEMBLY

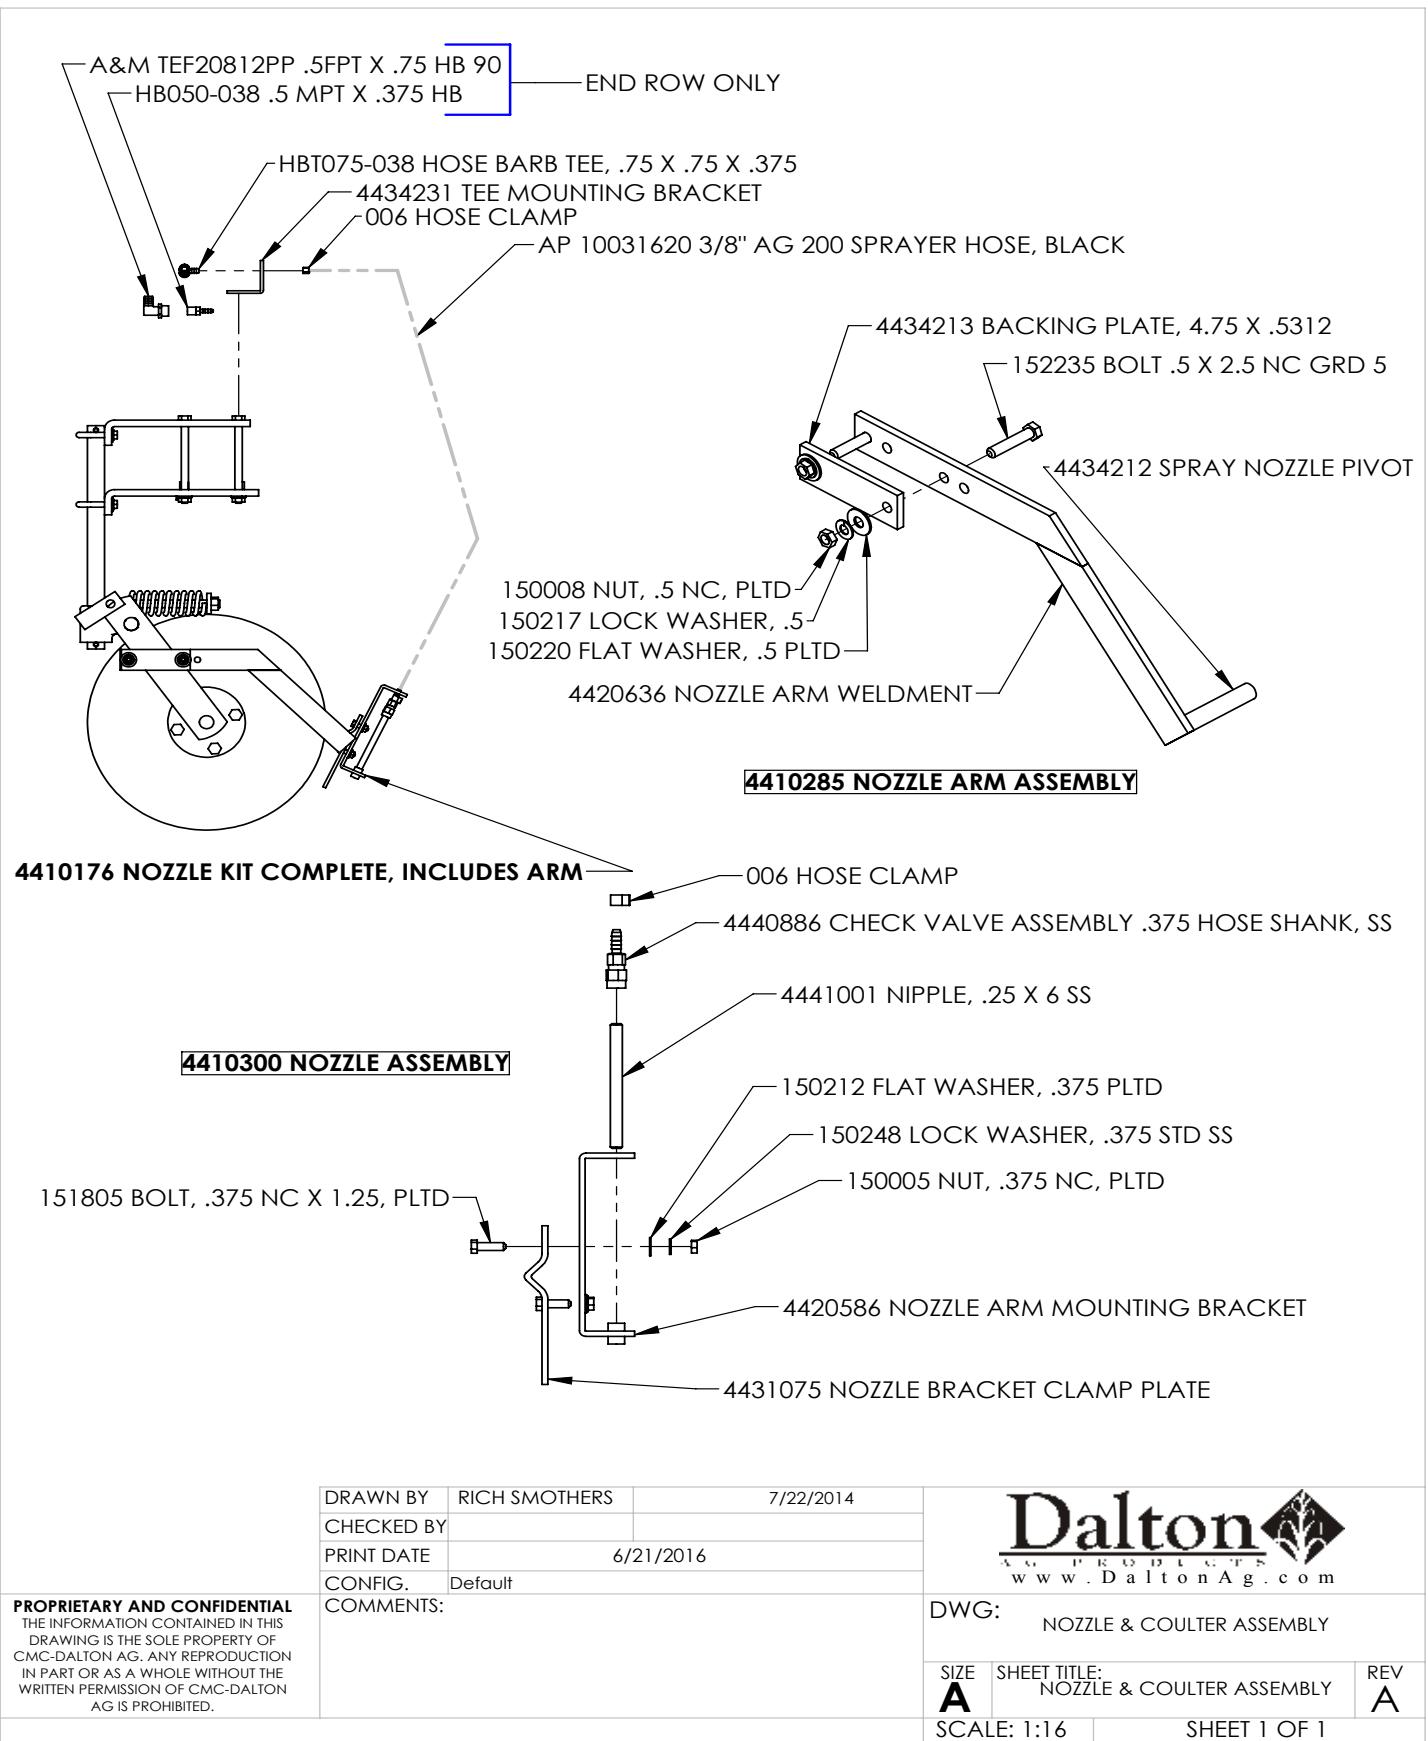

GROVE COULTER ASSEMBLY

B.O.M FOR COULTER ASSEMBLY

ITEM NO.	PART #	DESCRIPTION	QTY
1	GC3000	Cast Couler Knuckle	1
2	GC3005	Nylon Shaft Bushing	2
3	GC3010	Nylon Knuckle Bushing	1
4	GC3105	Lock Collar	1
5	GC4075	5/8-11x1 Sq Hd Set Pt	1
6	GC2005	Couler Arm	1
7	GC3035	G120 Couler Hub	1
8	GC5005	Dust Cap Keeper	1
9	GC3070	Spring Rod	1
10	GC3060	Nylon Spring Bushing	1
11	GC3055	Spring Bolt	1
12	GC3065	Spring Nut	2
13	GC3075	Spring	1
14	GC3080	Spring Alignment Casing	1
15	GC3085	Spring Lock Nut	1
16	GC3090	Washer	1
17	G908942	Cotter Pin	1
18	GC3095	Attachment Arm	1
19	GC3102	Knife Bracket	1
20	GC5010	Knife	1
21	GC3205	Injector Mount	1

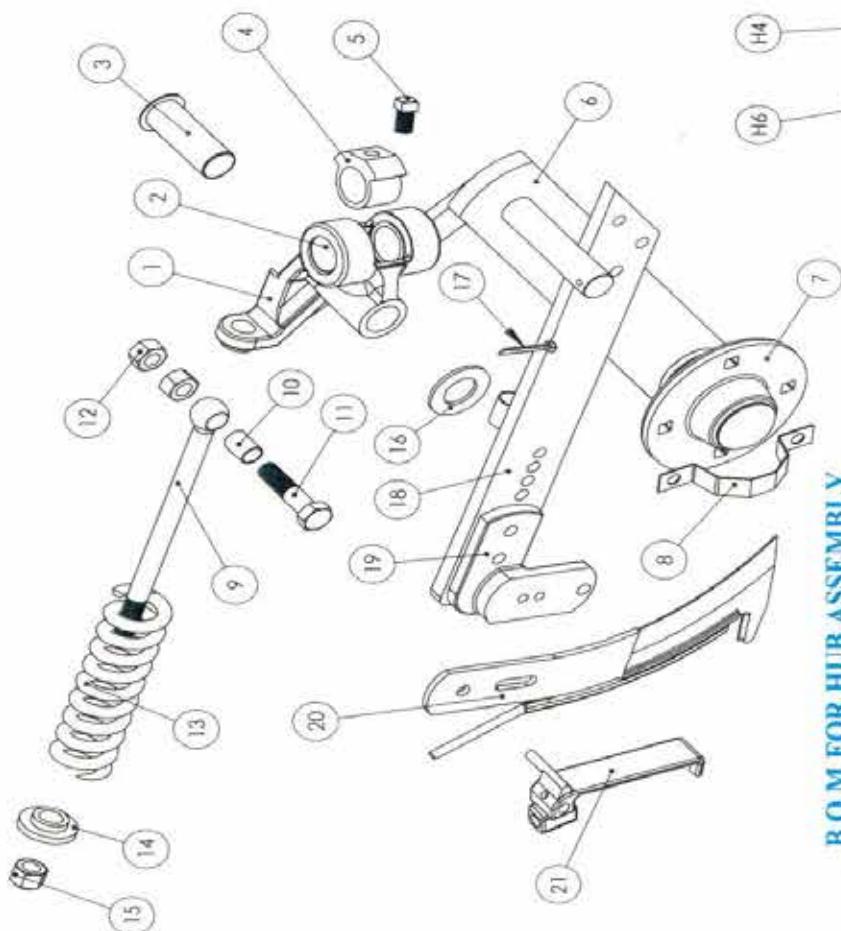


B.O.M FOR HUB ASSEMBLY

ITEM NO.	PART #	DESCRIPTION	QTY
H1	GC3035	G120 Couler Hub	1
H2	G910257	LM67010 Cup	2
H3	G910259	LM67648 Bearing	2
H4	GC3040	Seal Counterface	1
H5	GC3045	Couler Seal	1
H6	GC3050	Seal Protector	1
H7	GC3020	Couler Spindle	1
H8	G913611	Washer	1
H9	G912954	Slotted Hex Nut	1
H10	G905936	Cotter Pin	1
H11	G909970	Dust Cap	1





GROVE KNIFE AND INJECTION

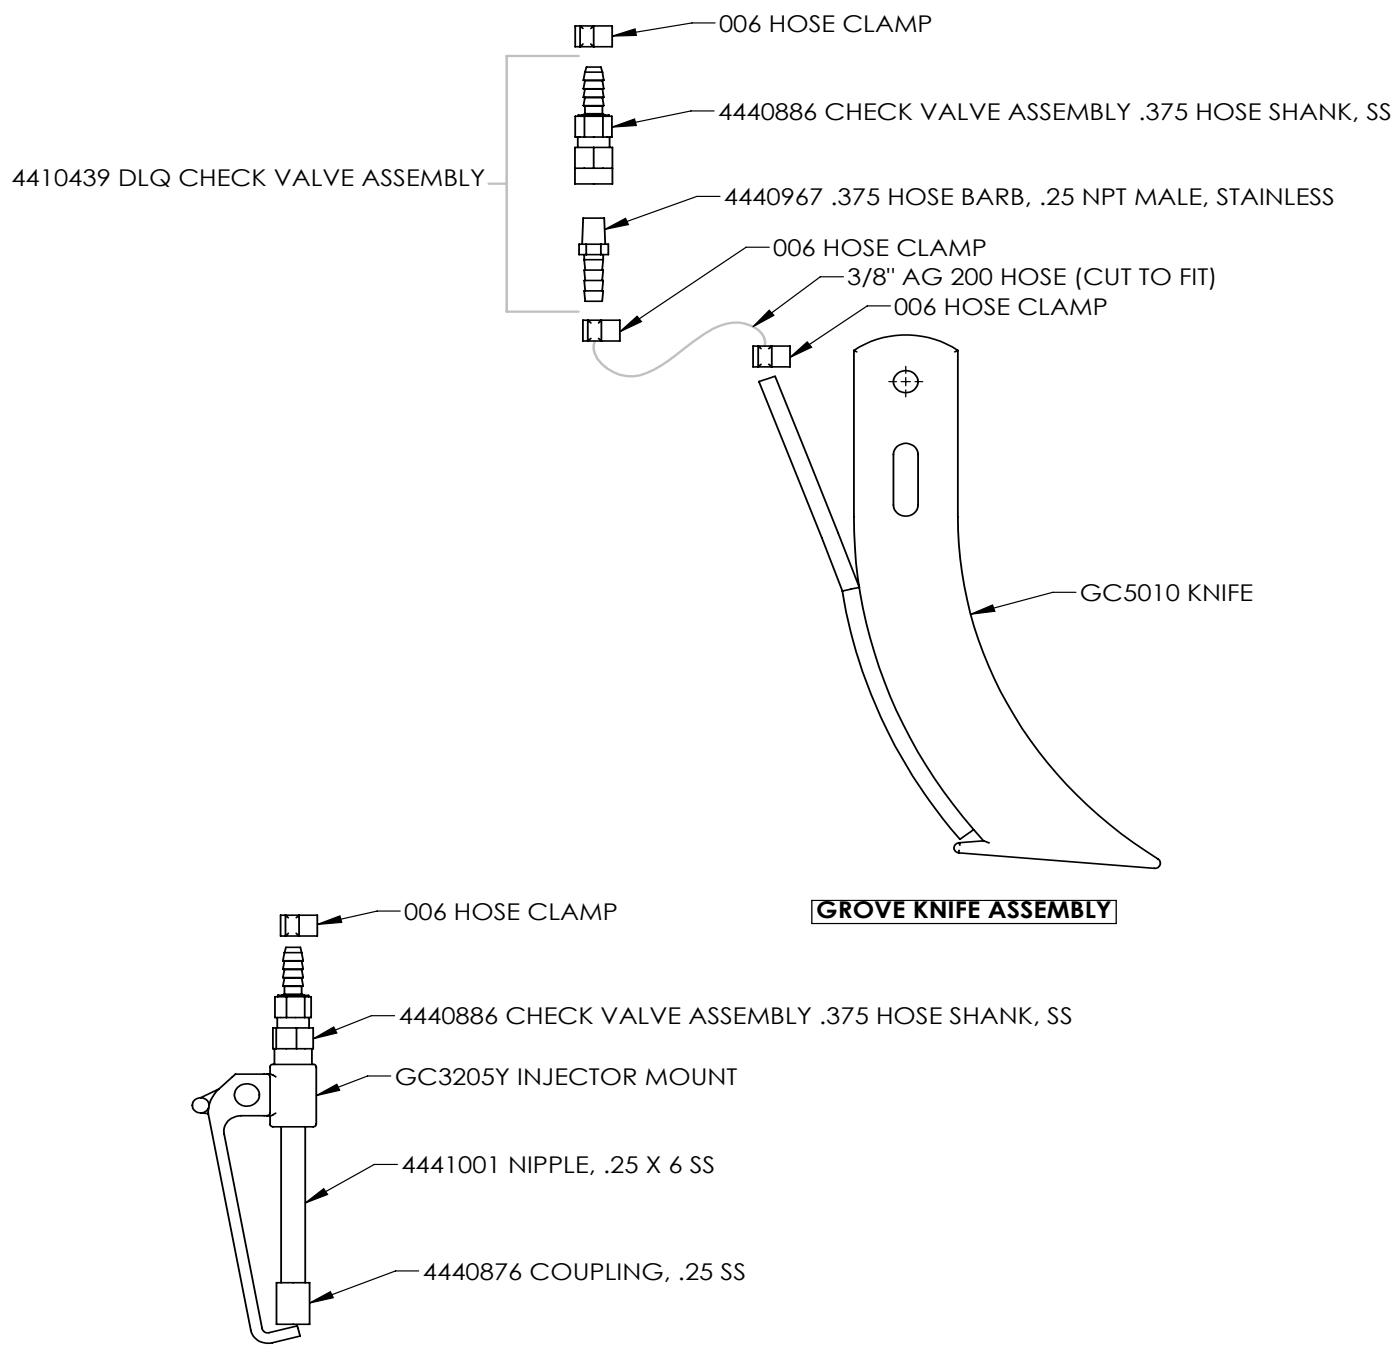

DRAWN BY	RICH SMMOTHERS	6/3/2016
CHECKED BY		
PRINT DATE	8/6/2018	
CONFIG.	Default	
COMMENTS:		DWG: GROVE KNIFE AND INJECTION
PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.	SHEET TITLE: Sheet1	REV A
SCALE: 1:4	SHEET 1 OF 1	

DLQ DOWNPRESSURE KIT - GULL WING PLUMBING

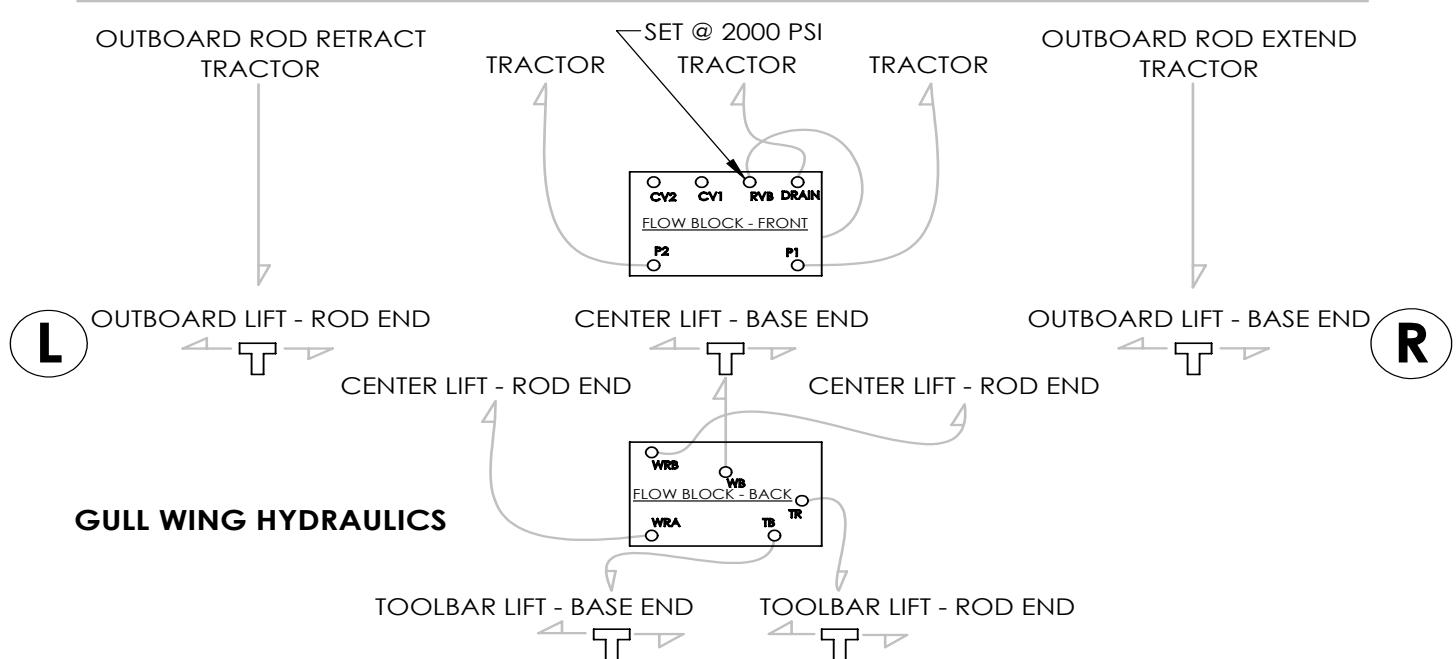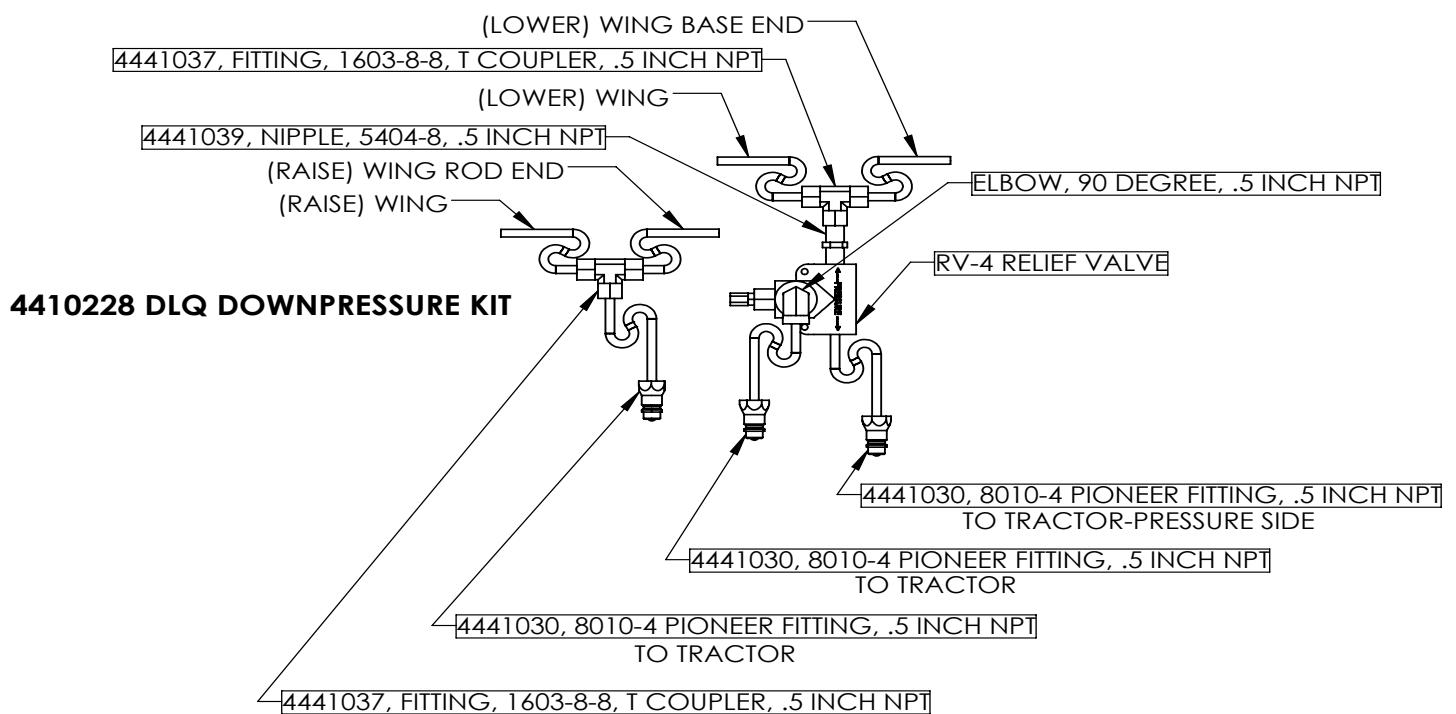

DRAWN BY	RICH SMMOTHERS	8/26/2009
CHECKED BY		
PRINT DATE	6/28/2016	
CONFIG.	Default	





PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
DALTON AG. ANY REPRODUCTION IN
PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF DALTON AG IS
PROHIBITED.

COMMENTS:

DWG:	DLQ DOWNPRESSURE KIT - GULL WING PLUMBING	
SIZE	SHEET TITLE:	Sheet1
A	REV	A

SCALE: 1:8 SHEET 1 OF 1

DECAL LAYOUT

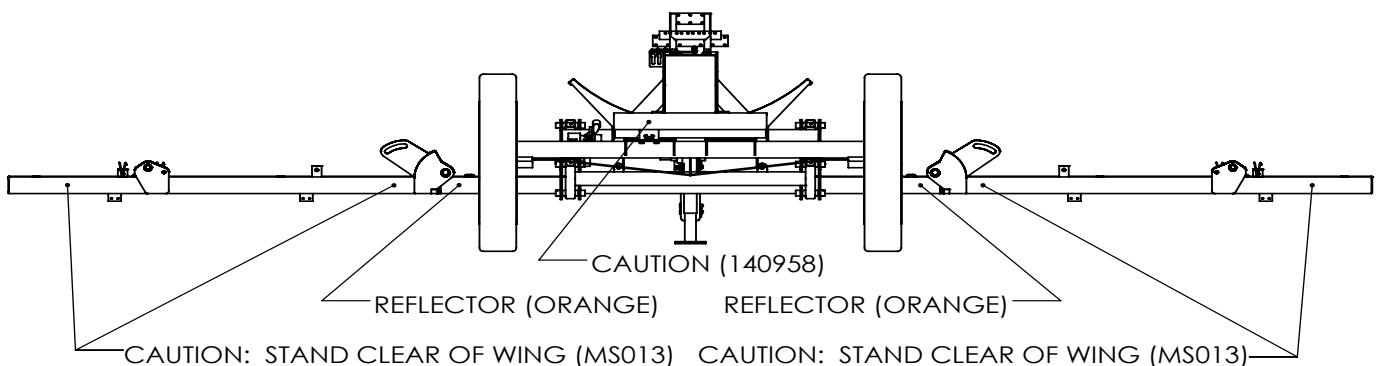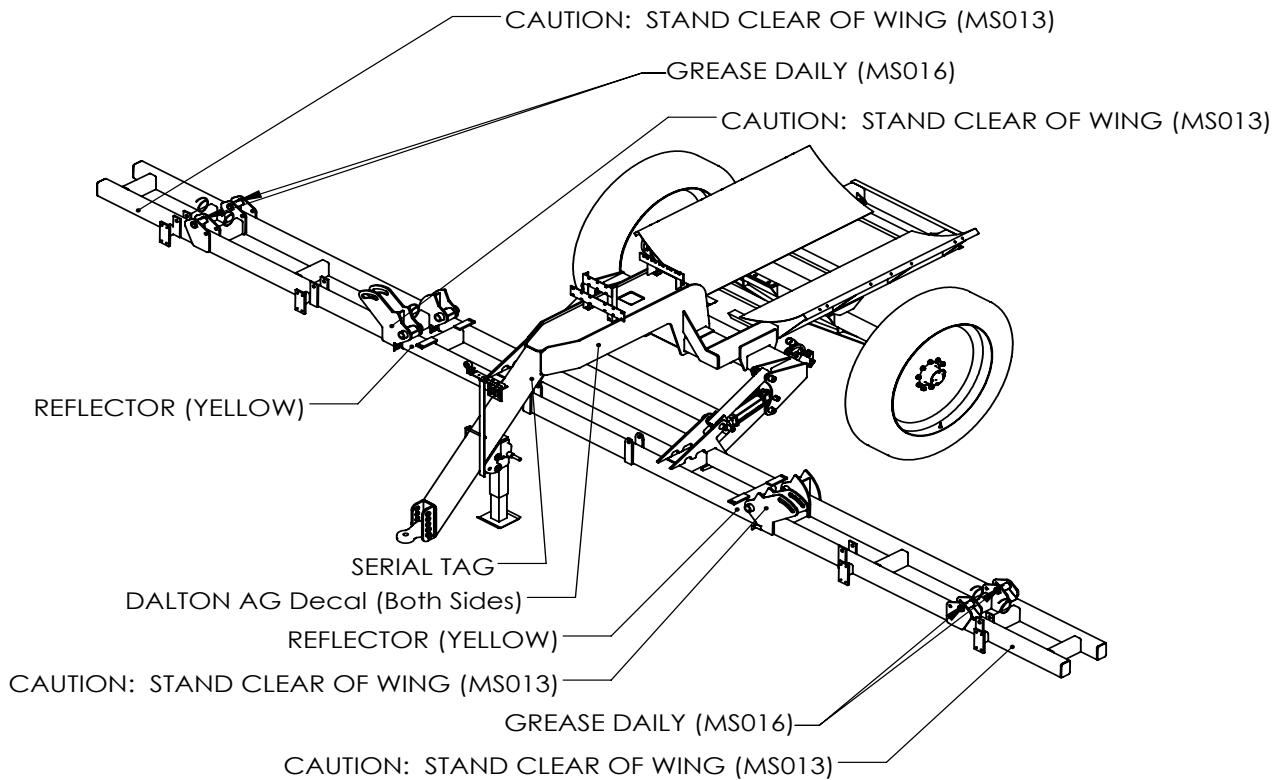

DRAWN BY	RICH SMMOTHERS	9/24/2015
CHECKED BY		
PRINT DATE		7/15/2016
CONFIG.	Default	

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
DALTON AG. ANY REPRODUCTION IN
PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF DALTON AG IS
PROHIBITED.

COMMENTS:



DWG: DLQ - DECAL LAYOUT

SIZE	SHEET TITLE:	Sheet 1	REV
A			A

SCALE: 1:60 SHEET 1 OF 1

PARTS ORDERING PROCEDURE

Your Dalton Ag dealer is interested in your new fertilizer application equipment and has the desire to help you get the most value from it. Through the help of this manual, you will find you can do some of the regular maintenance yourself. For parts and service, contact the Dalton Ag Dealership from which you purchased your fertilizer application equipment or your local Dalton Ag dealer.

When replacement parts are required, consult the applicable illustration and parts list to obtain the correct part name and number. When requesting a replacement part, always include the following information:

1. Complete Part Number
2. Description
3. Quantity Required
4. Machine and Model Number
5. Machine Serial Number - located on the topside of the frame near hitch
6. Provide complete name and address for where and how parts are to be shipped.

NOTE: Right and left hand parts and sides of the units are determined by standing at the rear and facing in the direction of forward travel.

EQUIPMENT MODEL:_____

EQUIPMENT SERIAL NO.:_____

DATE OF PURCHASE:_____

NAME OF DEALER:_____

DEALER'S PHONE NUMBER:_____

Thank you for your business!

DaltonAg.com

602 E. Van Buren Lenox, Iowa 50851

100% Employee Owned

800.342.7498

NOTES



www.daltonag.com

602 E. VAN BUREN | LENOX, IOWA 50851 | 800-342-7498