



OPERATING AND PARTS MANUAL

WIDE SPREAD SPREADERS

2021



TABLE OF CONTENTS

TO YOU THE OWNER.....	1
LIMITED WARRANTY STATEMENT.....	2
NEW MACHINE CHECKOUT.....	3
OPERATION AND SAFETY.....	4
LUBRICATION SCHEDULE.....	5
LUBRICATION DETAIL	6
BOLT TORQUE CHART.....	7
MACHINE ADJUSTMENT.....	8
SPECIFICATIONS.....	9
SPREAD ADJUSTMENT AND APPLICATION RATES.....	10
SPREAD PATTERN DETAILS.....	11
50' SPREAD SETUP.....	12
60' SPREAD SETUP.....	13
DISTRIBUTOR BLADE TUNING.....	14
40' SPREAD PATTERN DECAL.....	15
50' SPREAD PATTERN DECAL.....	16
60' SPREAD PATTERN DECAL.....	17
50' OR 60' SPREAD PATTERN DECAL, VARIABLE RATE.....	18
FRAME AND DRIVELINE.....	19
540 PTO.....	20
1000 PTO.....	21
6 TON AXLE/HUB PARTS.....	22
8 TON AXLE/HUB PARTS.....	23
10 TON AXLE/HUB PARTS.....	24
GROUND DRIVE ASSEMBLY.....	25
FRONT TANK ASSEMBLY.....	26
REAR AREA ASSEMBLY.....	27
GATE JACK ASSEMBLY.....	29
IDLER MOUNT, CHAIN BELT.....	30
DISTRIBUTOR GEAR BOX.....	31
HYDRAULIC SPINNER GEAR BOX.....	32
TRACTOR HYDRAULIC DRIVEN SPINNERS.....	33
DIGITAL READOUT.....	34
VARIABLE RATE CONTROL, ELECTRICAL PLAN.....	35
VARIABLE RATE CONTROL, HYDRAULIC PLAN.....	36
SPREADER CONSTANT VALUE.....	37
CALIBRATION NUMBERS FOR VARIABLE RATE SPREADERS 180 ENCODER.....	38
CALIBRATION NUMBERS FOR VARIABLE RATE SPREADERS 360 ENCODER.....	39
SCALE DETAIL.....	40
GATE MARKER DECAL.....	41
DECAL LAYOUT.....	42
PARTS ORDERING PROCEDURE.....	43

TO YOU, THE OWNER

Your Dalton Ag Equipment is the most modern, up-to-date, versatile, machine available for fertilizer application. The machine is the result of many years of experience, research, development and testing of equipment for fertilizer application. It is soundly engineered and carefully built to rigid specifications. It is of rugged and simple construction, with a minimum of moving parts.

However, to obtain maximum performance from your Dalton Ag Equipment, it is necessary to follow the instructions and safety suggestions in this manual. Each section has been carefully prepared for the purpose of providing needed and valuable information to the owner and operator. Each operator of this unit should be familiar with the contents of this manual. Keep it in a safe and convenient location. THERE ARE MANY SAFETY SUGGESTIONS (CAUTION AREAS) PRINTED THROUGHOUT THIS MANUAL. CAREFULLY READ THEM ALL BEFORE OPERATING THIS UNIT.

DESIGN IMPROVEMENTS

Dalton Ag Products follows a policy of continuous products improvement. We therefore reserve the right to make design improvements, and changes in specifications and prices, without incurring obligations to make revisions or additions to equipment previously sold.

**REGISTER
WARRANTY
ONE OF
FOUR WAYS**

- Register on-line at:
www.daltonag.com
- Fax your completed warranty registration form to:
641-569-7033
- Email your completed warranty registration form to:
office@daltonag.com
- Mail your completed warranty registration form to:
Dalton Ag, Inc.
P.O. Box 70
Lenox, IA 50851

LIMITED WARRANTY STATEMENT

DALTON AG PRODUCTS warrants to the original purchaser only that all products manufactured under the Dalton Ag and Mobility Brands will be free from defects in material and workmanship under normal use and service.

DALTON AG's obligation under this warranty is limited to repairing or replacing, as it may elect, free of charge and without charge for installation, at the place of business of a dealer or distributor authorized to handle the equipment covered by this warranty or at a DALTON AG facility, any parts that prove, in DALTON AG's judgment, to be defective in material or workmanship within two (2) years after delivery to the original purchaser. DALTON AG shall not be liable for personal injuries or any special or consequential damages of any kind, either direct or indirect. This warranty is subject to acts of God, fire and existing conditions of supply and demand, production, ability or inability to deliver, or for any other valid reason beyond the reasonable control of DALTON AG. No distributor, dealer, agent or DALTON AG employee (other than DALTON's President in writing) is authorized to extend or make any other or further express or implied warranty or incur any additional obligation on DALTON AG's behalf in connection with the sale of this product.

Customer Responsibility

Product Registration - It is a condition of this warranty that the original purchaser fill out the warranty card furnished by DALTON AG and return it to DALTON AG to be recorded in DALTON AG's owner file. Registration may also be done on line at www.DaltonAg.com/warrantyregistration. If the original purchaser's card or electronic registration is not on file at DALTON AG's office, the warranty period will extend only from date equipment was picked up or shipped from the DALTON AG plant.

Maintenance - It is the customer's responsibility to maintain their equipment in accordance with the instructions provided in the Operator's Manual. DALTON AG recommends that you keep records and receipts as the customer may be required to verify the maintenance instructions have been followed.

Operation - It is the customer's responsibility to operate the equipment only for the purpose for which it was designed and in accordance with all safety and operational recommendations contained in the Operator's Manual. If a defect in materials or workmanship occurs, it is the customer's responsibility to cease operating the equipment until authorized repairs are made.

Damage incurred from continued operation after a defect is discovered may not be covered by this warranty.

What this Warranty Covers

This warranty covers failures caused by defects in materials or workmanship only.

This Warranty does not cover failures caused by:

- | | | |
|------------------------------|------------------------------|-------------------------|
| - Improper operation | - Unauthorized repairs | - Usage contrary to the |
| - Natural calamities | - Use of Non DALTON AG parts | intended purpose of the |
| - Unauthorized modifications | - Neglected maintenance | product |

This Warranty does not cover replacement of Wear or Maintenance Items including, but not limited to:

- | | | | | |
|--------------|---------|----------|----------|------------|
| - Lubricants | - Hoses | - Disks | - Idlers | - Belts |
| - Filters | - Tires | - Chains | - Blades | - Bearings |

This Warranty does not cover:

Pickup and delivery of the equipment
 Service Calls or Travel Time to and from sites
 Rental of replacement equipment during repair period
 Products that have been declared a total loss and subsequently salvaged
 Overtime labor charges

Parts Warranty

DALTON AG warrants its replacement parts against defects in materials or workmanship for a period of 90 days or the remainder of the product warranty, whichever is longer under the terms set out above. Remedy for defective replacement parts for units that are beyond the original product warranty, will be limited to replacement of the failed part.

NEW MACHINE CHECKOUT

Before attempting to use or operate the spreader it is important to be thoroughly familiarized with the contents of this manual. Then the machine should be checked using the following check list:

1. Ground drive tire inflated to 22 PSI. Tires inflated to manufacturing specifications.
2. All bearings lubricated and tightly mounted with collars securely locked.
(See lubrication schedule page 5.)
3. Conveyor chains, drive chain & ground drive chain adjusted to correct tension. Conveyor chain should be flush or just below the bottom of the trough in the area approximately 2' behind the front roller.
4. Sprockets tightened & in proper alignment.
5. Inspect entire machine for loose bolts, especially in the spinner assembly and drive line area.
6. Distributor fan blades set properly. (See spread adjustment and application rates)
7. Place 1/2" material on top of chain, lower gate to material, set pointer at 1".
8. Tighten wheel bolts daily – 95 foot pounds single axle spreaders.
9. Check drive line for ease of operation by turning shaft by hand. If the foregoing inspection reveals that additional lubrication or adjustment is required, refer to the proper section of this manual for detailed instructions.
10. Ground drive wheel and universal joint shear pins in place and tight.
11. Check both spinner gear boxes for oil; fill to level of pipe plug with SAE No. 90 non-detergent oil.

OPERATION

SPREADER SAFETY

Before starting in motion please read the following words of caution.

- A. It is recommended that initial spreading be done in as low a range as possible to permit easy break-in.
- B. Always shut off or disconnect power to spreader before attempting to repair or adjust the spreader.
- C. Do not transport machine with ground drive wheel engaged.
- D. NEVER back-up spreader with ground drive wheel engaged.
- E. Make sure that the towing vehicle brakes are operating properly and are capable of stopping the towing vehicle.
- F. If a pick-up is used as the towing vehicle, it is wise to add ballast for additional safety and traction. We recommend that all towing vehicles be ballast loaded to their recommended G.V.W.
- G. Hitches should be of heavy construction and should be welded or bolted directly to the towing vehicle frame. Hitches should be checked routinely for loose bolts, cracked welds, etc.
- H. Never tow a spreader with a drawbar pin less than 1" in diameter. Pins should also have a locking device.
- I. Do not tow spreader at speeds in excess of 20 mph loaded or 40 mph empty.
- J. Remember, that the stopping and braking distances vary with load and vehicle speed. It is well to familiarize yourself with the characteristics of your machine under different load and speed conditions.
- K. Be sure to attach safety break-away chain and the safety chain to towing vehicle to assure control of spreader in the case of pin or hitch failure.
- L. The unit is designed for hitching to vehicles with drawbar heights between 12 and 18 inches above the ground level. It will operate with all standard tractor hitches and PTO's. WARNING: Hydraulically mounted drawbars must be securely and mechanically locked because a fully loaded spreader applies a load in the order of 2000 lbs. to the hitch.
- M. WARNING: Remember this unit is designed for agricultural use only and is primarily an off-the-road vehicle and should be towed at tractor speeds ONLY, not to exceed 20 mph loaded or 40 mph empty. Inspect hubs routinely to see if they are heating, which indicates either a need for lubrication or improper adjustment of brakes or bearings, also check stud nuts for tightness.
- N. WARNING: The maximum capacity of this unit is 6 tons (600) or 200 cubic feet, based on a material density of 60 pounds per cubic foot. DO NOT EXCEED THIS LIMIT!

OPERATING INSTRUCTIONS

Please read the following completely before spreading.

- 1) Attach spreader to towing vehicle, make sure hitch and hitch pin are sound.
- 2) Attach PTO shaft to proper rpm PTO.
- 3) Spinner discs, adjustable chute and conveyor floor should be clean for accurate metering.
- 4) Set metering gate to desired spread rate according to decal on the back end sheet of tank. Always keep the machine in the lowest possible range.
- 5) Before starting to spread, rotate the ground drive wheel several revolutions by hand to make sure the conveyor chain is operating freely. If chain is frozen or moves with too much resistance, correct problem before using spreader.
- 6) If the ground drive wheel operates properly, check with chain and sprocket arrangement for desired range setting and chain tension.
- 7) When spreading is complete, disengage ground drive assembly from the tire and install transport lockup.

LUBRICATION SCHEDULE

DAILY LUBRICATION SCHEDULE	DRIVELINE	ALL MODELS	(4) BEARINGS
			(2) U-JOINTS
		GROUND DRIVE	(1) BEARING
			(4) U-JOINTS
			(2) TELESCOPING TUBES
	CONVEYOR DRIVE	ALL MODELS	(6) BEARINGS
	GROUND DRIVE	ALL MODELS	(2) SHAFT HOUSINGS
			(2) U-JOINTS
			TELESCOPING TUBE
			(2) SQUIRTS OF SAE 90 OIL INTO JACK CRANK
OIL CAP			

Pay particular attention to the daily cleaning and greasing of the telescoping tube assembly.

WEEKLY LUBRICATION SCHEDULE	CHAINS	OIL	LUBRICATE PIN JOINTS WITH SAE 80-90
	PTO SHAFT	GREASE	(2) U-JOINTS AND SLIP TUBE
	SPINNER GEARBOX	GREASE	UNIVERSAL GREASE ON EACH FITTING UNDER SPINNER HUB

MONTHLY LUBRICATION SCHEDULE	DRIVE SHAFT SPLINES	COAT WITH GREASE OR ANTI-SEIZE COMPOUND
	SPINNER GEAR BOX	CHECK TO SEE THAT OIL LEVEL IS UP TO OIL LEVEL PLUG. USE SAE 90 OIL


ANNUAL LUBRICATION SCHEDULE	WHEEL BEARINGS	REPACK
	GEAR BOXES	DRAIN, FLUSH, AND REFILL WITH SAE 90 OIL

MAINTENANCE SCHEDULE

WEEKLY	WASH SPREADER
	CHECK GROUND DRIVE TIRE INFLATION (22 PSI)
	CORRECT BELT TENSION
	ADJUST TENSION OF CONVEYOR AND DRIVE CHAINS (SEE MACHINE CHECKOUT)

SEMI-ANNUALLY	TIGHTEN LOOSE BOLTS
	REPLACE WORN OR FAILED PARTS
	TOUCH-UP PAINT

LUBRICATION DETAIL

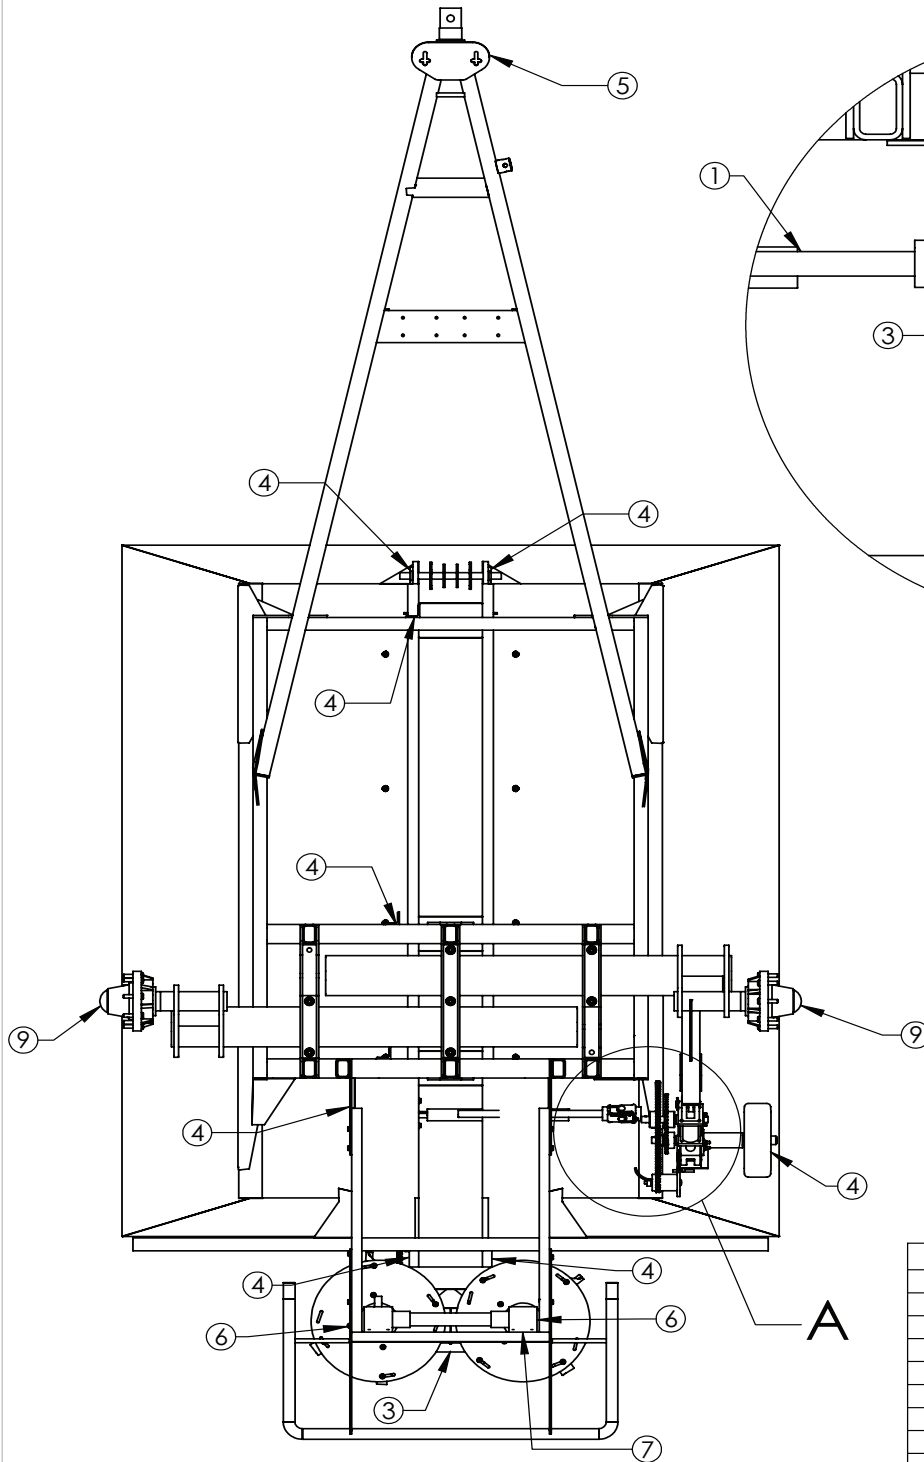

DETAIL A
SCALE 4 : 30

LUBRICATION SCHEDULE		
1	SLIP JOINT	DAILY
2	PIVOT BUSHING	EVERY 10 HRS
3	UNIVERSAL JOINT	EVERY 15 HRS
4	BALL BEARING	EVERY 15 HRS
5	ACTUATOR	EVERY 15 HRS
6	SPINNER HUB	EVERY 15 HRS
7	GEAR BOX	EVERY 75 HRS
8	GATE JACK (OIL)	WEEKLY
9	WHEEL BEARING	TWICE A YEAR

DRAWN BY	RICH SMOTHERS	2/9/2010
CHECKED BY		
PRINT DATE	7/28/2014	
CONFIG.	Default	
COMMENTS:		



DWG: LUBRICATION SCHEDULE

SIZE A	SHEET TITLE: Sheet1	REV A
------------------	------------------------	-----------------

SCALE: 1:26 SHEET 1 OF 1

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.

FOR PARTS, CALL 1.800.342.7498

IMPORTANT : Over tightening hardware can be as damaging as under tightening. Tightening beyond recommended torque will reduce the fastener's shock load capacity.

BOLT TORQUE CHART

SIZE							
	SAE GRADE 2		SAE GRADE 5		SAE GRADE 8		L9
	ASSEMBLY TORQUE DRY	LUBRICATED	ASSEMBLY TORQUE DRY	LUBRICATED	ASSEMBLY TORQUE DRY	LUBRICATED	ASSEMBLY TORQUE LUBRICATED
1/4-20	66*	49*	8	75*	12	9	11
1/4-28	76*	56*	10	86*	14	10	13
5/16-18	11	8	17	13	20	18	21
5/16-24	12	9	19	14	25	20	23
3/8-16	20	15	30	23	45	30	33
3/8-24	23	17	35	25	50	35	38
7/16-14	30	24	50	35	70	55	60
7/16-20	35	25	55	40	80	60	65
1/2-13	50	35	75	55	110	80	95
1/2-20	55	40	90	65	120	90	105
9/16-12	65	50	110	80	150	110	140
9/16-18	75	55	120	90	170	130	150
5/8-11	90	70	150	110	220	170	185
5/8-18	100	80	180	130	240	180	205
3/4-10	160	120	260	200	380	280	290
3/4-16	180	140	300	220	420	320	355
7/8-9	190	140	400	300	600	460	505
7/8-14	210	155	440	320	660	500	585
1-8	220	160	580	440	900	680	775
1-14	240	170	640	480	1000	740	900
1 1/8-7	300	220	800	600	1280	960	1150
1 1/8-12	340	260	880	660	1440	1080	1325
1 1/4-7	420	320	1120	840	1820	1360	1600
1 1/4-12	460	360	1240	920	2000	1500	1750
1 3/8-6	560	420	1460	1100	2380	1780	—
1 3/8-12	640	460	1680	1260	2720	2040	—
1 1/2-6	740	560	1940	1460	3160	2360	3250
1 1/2-12	840	620	2200	1640	3560	2660	3650

**ITEMS WITH * = INCH POUNDS
ALL OTHERS = FOOT POUNDS**

WARNING: Never work around any raised implement while in the raised position without using safety lockups.

MACHINE ADJUSTMENT

WHEEL BEARING ADJUSTMENT

After repacking or when inspecting wheel bearings, the following adjustment procedure should be followed. Place flat washer and spindle nut on spindle. Turn hub as you tighten nut. When a pronounced drag is felt in the bearings, back off nut one complete slot. If necessary continue to back off the nut until the next slot aligns with the cotter pin hole and install cotter pin and dust cap.

CONVEYOR CHAIN ADJUSTMENT

Loosen chain take-up locking nuts on outside of front end of trough. Adjust take-up bolts evenly until chain clears main frame members and axle tube by $\frac{3}{4}$ " $\frac{1}{2}$ ". Inspect shaft bearing mounting bolts and shaft locking collars for tightness of set screws (6 places). Reset take-up locking nuts.

STORAGE

Before storing the spreader for more than a few days, the machine should be emptied completely and thoroughly washed both inside and out. This precaution will minimize the severity of fertilizer acid corrosion, extend the useful life of the machine, and prevent damage to drive line and conveyor chain from fertilizer compaction and caking. We further recommend that the machine be thoroughly greased after washing.

Before operating the machine after extended periods of storage, re-lubricate the entire spreader in accordance with the lubrication section of this manual. Also check the entire spreader, following the New Machine Checkout Procedure to be found in a foregoing section of the manual.

Remember that oil and grease are your least expensive corrosion inhibitors.

ADDITIONAL INSTRUCTIONS:

CAUTION

Do not operate your spreader with less than one and a half (1 1/2) inch of metering gate opening as material will compact against metering gate and cause failure of the conveyor chain.

CAUTION

Do not disconnect implement from tractor with material remaining in box.

SPECIFICATIONS

ROW CROP SERIES SPREADER SPECIFICATIONS			
FEATURES	MOBILITY 600	MOBILITY 800	MOBILITY 1000
Capacity (Weight)	6 Tons	8 Tons	10 Tons
Hopper Length	120"	120"	148"
Hopper Width	93"	93"	93"
Hopper Capacity (Volume)	200 cu. ft.	270 cu. ft.	333 cu. ft.
Overall Length	230"	230"	250"
Overall Height	107"	120"	120"
Overall Width	96"	96"	96"
Empty Weight	3,800 lbs.	4,900 lbs.	5,900 lbs.
Groud Clearance	45" under Spinners 37" under Frame	45" under Spinners 37" under Frame	45" under Spinners 37" under Frame
Spread Pattern	40', 50', 60'	40', 50', 60'	40', 50', 60'
Hopper Construction	409 Stainless Steel	409 Stainless Steel	409 Stainless Steel
Spinner Drive System	540/1000 PTO: Standard Tractor Hydraulic: Optional	540/1000 PTO: Standard Tractor Hydraulic: Optional	Tractor Hydraulic
Spinners	Dual Gearbox Driven	Dual Gearbox Driven	Dual Gearbox Driven
Jack	5,000 lbs.	5,000 lbs.	5,000 lbs.
Hitch	HD Clevis: Standard CAT4 Bull Pull: Optional	HD Clevis: Standard CAT4 Bull Pull: Optional	CAT4 Bull Pull
Axle	72" - 120" adjustable	80" - 120" adjustable	80" - 120" adjustable
Conveyor Drive	2 SPD Ground Drive or Hydraulic	2 SPD Ground Drive or Hydraulic	Hydraulic
SRT Roll Tarp	Standard	Standard	Standard
Tires & Wheels	320/90/R42	380/90/R46	380/90/R46 Duals: Optional Floaters: 850/50 R30.5 Optional
Light Kit	Standard	Standard	Standard
Variable Rate Ready	Optional	Optional	Standard
Scale Kit with Monitor	Optional	Optional	Optional
Standard Powder Coat Paint Colors	White	White	White
Warranty	24 Months	24 Months	24 Months

CAUTION

- 1. Keep all shields in place.**
 - 2. Stop engine before leaving operator's position to adjust, lubricate, clean, or unclog machines.**
 - 3. Wait for all movement to stop before servicing the machine.**
 - 4. Keep hands, feet and clothing away from power driven parts.**
 - 5. Keep off equipment unless seat or platform for operation or observation is provided.**
 - 6. Make certain everyone is clear of machine before starting.**
- PART No. 140959

SPREAD ADJUSTMENT AND APPLICATION RATES

For accurate and precise spreading rates, it is necessary that you know the weight in pounds per cubic foot of the material to be spread. If this is not known, the weight can be quickly and accurately determined by the following method:

1. Weigh an empty one gallon container.
2. Fill level full with the material to be used.
3. Weigh container and material, and then subtract the weight of the container to obtain the weight of the material.
4. Multiply the weight of the material by 7.5 to obtain the weight of the material in pounds per cubic foot.

Example: Typical Material-Potash

1) Weight of empty one gallon container	1.00 lbs.
2) Weight of filled container	10.35 lbs.
3) Weight of container (net)	9.35 lbs.
4) 9.35×7.5	70.125 lbs. /cu ft.


You would therefore use the column on the Spread Chart headed 70 to determine the proper gate opening for the desired application rate.

Your Mobility Spreader with its heavy-duty distributor discs and blades will apply most materials in a 50 foot wide swath.

SPREAD PATTERN DETAILS


An operational characteristic of this type of machine is the possibility of overloading the distributors at high rates of application. Such an overload results in an alteration of the spread pattern to a narrower swath with heavier application at the center. This can be avoided by reducing speed when using high application rates. MOBILITY DISTRIBUTORS ARE DESIGNED FOR A MAXIMUM APPLICATION RATE OF 1500 POUNDS PER MINUTE OF AVERAGE 60 POUND PER CUBIC FOOT MATERIAL. Caution: Be extra careful to check your spread pattern when using high application rates. Adjust your driving pattern to the actual delivered spread swath, the adjustment of the machine, and the material being used. Recommended ground or travel speed for most application rates (up to 700 pounds per acre) is 8 mph. When application rates are in excess of 700 pounds per acre, the ground speed should be proportionately reduced, (for example, at 1400 pounds per acre, maximum ground speed should be 4 mph.) We recommend that for very high application rates, to insure uniformity of application, that two lighter application passes be made preferably placing your second pass over the lap lines of the first pass. This also is recommended practice when spreading under very windy conditions or with a material that segregates easily. If your effective spread pattern is more than 50 feet wide the Metering Gate setting should be increased proportionately, according to the percentage of your spread width in excess of 50 feet. The gate setting should likewise be decreased if your effective spread pattern is less than 50 feet. EXAMPLE: 60 foot effective spread width—increase gate setting from Spread Chart by 20%; 40 foot effective spread pattern width—decrease your gate setting from Spread Chart setting by 20%. Your spread pattern can be checked accurately and visually on a freshly worked, level area of ground. Such an area is also ideally suited to adjusting and fine tuning your machine. The following diagram graphically illustrates a typical spread pattern.

Note on the illustration below that the lap point occurs at the point where the application rate is one-half of the spread chart rate. The profile of the spread pattern tapers at both edges and has a wide uniform area in the center. By careful attention to the lap point during application, a very uniform and even spread rate can be attained. The Mobility Spreaders have been designed to provide this good and uniform tapered profile to make spread width less critical. However, excessive or insufficient overlap of passes will result in a poor application pattern in the lap area of the total spread pattern. If you can attain this spread pattern and pay careful attention to the lap points, the dotted line on the illustration will represent your actual overall spread pattern.

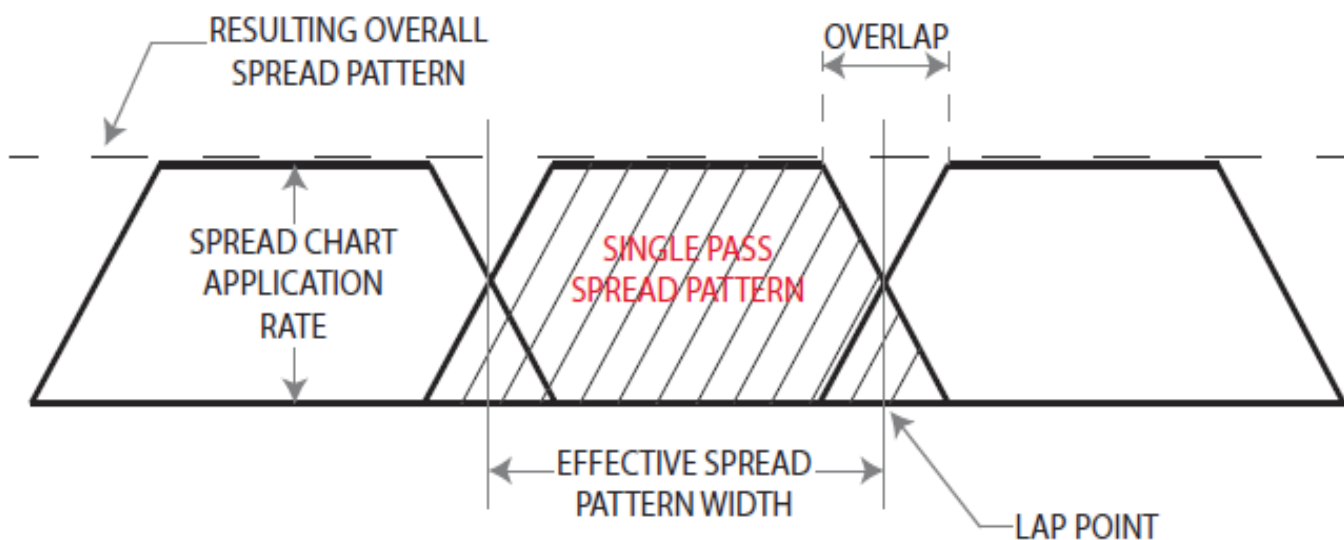

60' SPREAD SETUP

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	4431277	SPINNER BLADE, 11 INCH, LH	6
2	4431277	SPINNER BLADE, 11 INCH, RH	6


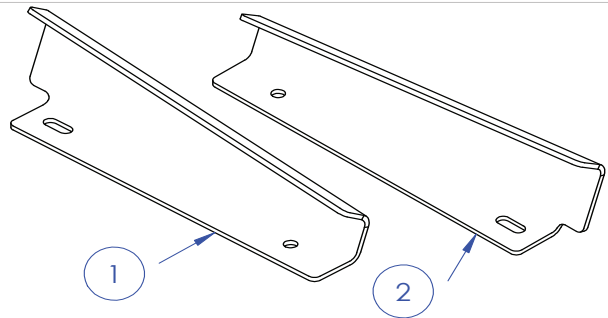


BLADES LABELLED (1) SET TO 2ND
HOLE FROM LEFT SIDE OF PATTERN,
VIEWED FROM THE CENTER OF THE DISC.

BLADES LABELLED (2) SET TO 2ND
HOLE FROM RIGHT SIDE OF PATTERN,
VIEWED FROM THE CENTER OF THE DISC.

BLADES LABELLED (2) SET TO 3RD
HOLE FROM LEFT SIDE OF PATTERN,
VIEWED FROM THE CENTER OF THE DISC.

BLADES LABELLED (1) SET TO 3RD
HOLE FROM RIGHT SIDE OF PATTERN,
VIEWED FROM THE CENTER OF THE DISC.

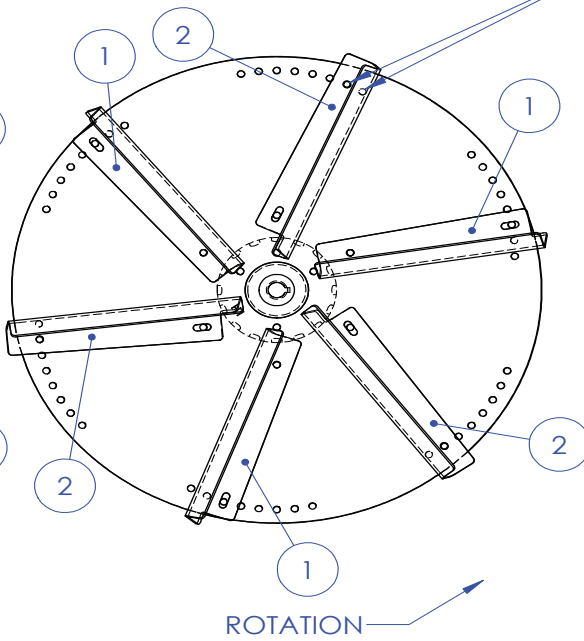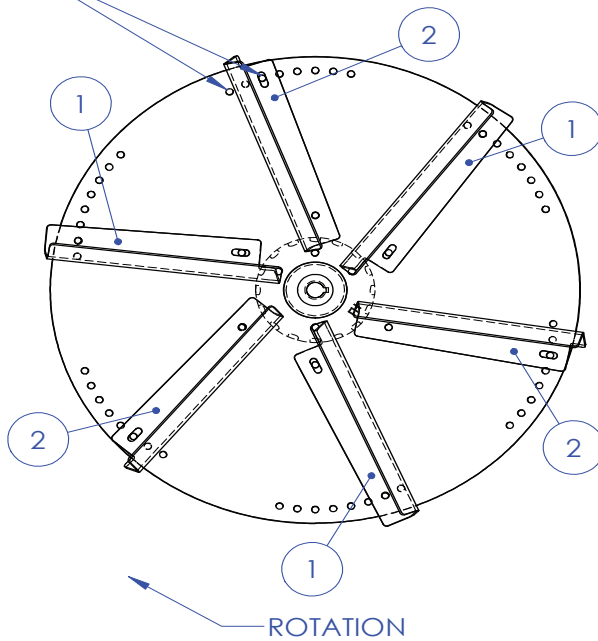

VIEWED FROM BACK OF SPREADER

DRAWN BY	--	3/12/2021
CHECKED BY		
PRINT DATE	3/16/2021	
CONFIG.	60' SPREAD	
COMMENTS:		



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
DALTON AG. ANY REPRODUCTION IN
PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF DALTON AG IS
PROHIBITED.


DWG: SPREAD SET UP, WIDE SPREAD

SIZE A	SHEET TITLE: 60' SPREAD	REV A
SCALE: 1:6	SHEET 2 OF 2	

FOR PARTS, CALL 1.800.342.7498


90' SPREAD SETUP

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	4431277	SPINNER BLADE, 11 INCH, LH	6
2	4431277	SPINNER BLADE, 11 INCH, RH	6

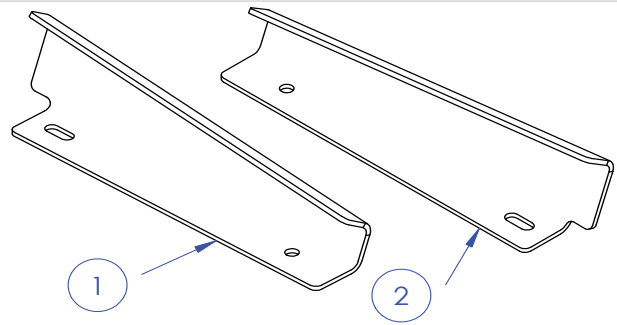

ALL BLADES SET TO 3RD HOLE FROM
LEFT SIDE OF PATTERN, VIEWED FROM
THE CENTER OF THE DISC

ALL BLADES SET TO 3RD HOLE FROM
RIGHT SIDE OF PATTERN, VIEWED FROM
THE CENTER OF THE DISC

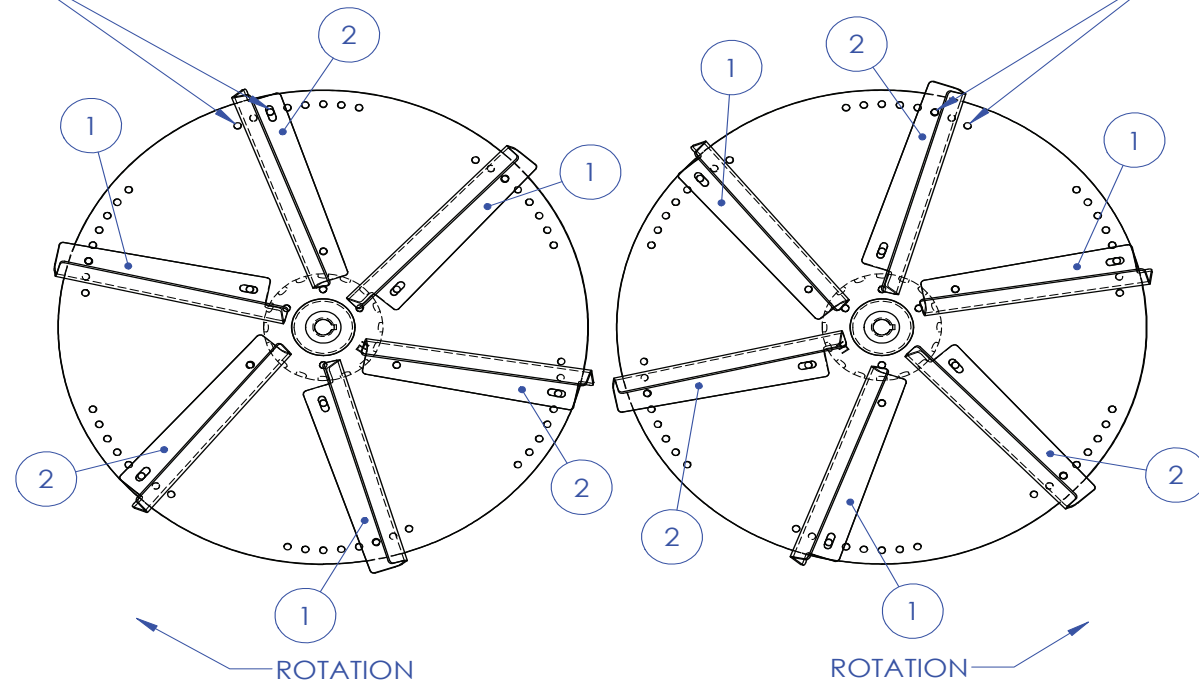

VIEWED FROM BACK OF SPREADER

DRAWN BY	--	3/12/2021
CHECKED BY		
PRINT DATE	3/16/2021	
CONFIG.	90' SPREAD	
COMMENTS:		



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
DALTON AG. ANY REPRODUCTION IN
PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF DALTON AG IS
PROHIBITED.

DWG: SPREAD SET UP, WIDE SPREAD

SIZE A	SHEET TITLE: 90' SPREAD	REV A
SCALE: 1:6	SHEET 1 OF 2	

FOR PARTS, CALL 1.800.342.7498

DISTRIBUTOR BLADE TUNING


FINE TUNING OF DISTRIBUTOR AND BLADE SETTINGS

All Mobility Spreaders are given an average standard factory setting of distributor blades. Such a setting, of course, cannot be perfect for all field conditions and materials. The following information will be helpful in adjusting the distributor blades on your machine to give optimum performance for your specific conditions.

Your spread pattern will be affected by 1) the material used, 2) the distributor blade setting, and 3) the rotation speed of the distributors. The distributors are designed to be operated at 750 RPM (540 tractor P.T.O. RPM). A plus or minus 10% change in distributor RPM will increase or decrease spread pattern width accordingly. An increase in PTO RPM will tend to deposit less material at the center of the spread pattern, while a decrease will deposit more material at the center. The physical characteristics of the materials being spread, which are important to the spread pattern, include bulk density, particle size, particle shape, physical strength and rugosity or surface roughness. For best performance it is recommended that you fine tune your machine to the material being used. The spreading profile and spread swath width can be changed drastically by alteration of the setting of the distributor blades. The drawing on the next page shows had blades may be extended from or retracted toward the center of the disc. Also, the angle of blade intersection with a radius of the disc may be altered. They may be advanced toward coincidence with the disc radius or retarded away from it. Further, blade lengths are not all equal. These adjustments affect the spread pattern in the following ways:

1. Advance long blades--more material to the outside of spread pattern; also will increase spread pattern width.
2. Retard long blades--opposite effect of above.
3. Advance short blades—helps eliminate problem of streaking in the middle of spread pattern.
4. Retard short blades—puts more material in the center of spread pattern.
5. Extend blades away from center of spinner—increases spread width somewhat.
6. Retract blades (more towards center of spinner)—opposite effect of above.
7. Moving flow divider (or chute) toward the front of spreader will tend to put more material in center of spread pattern. This is because material is deposited on outer edge of spinner causing it to leave earlier.
8. Moving divider toward the rear of the spreader has the opposite effect.

DISTRIBUTOR BLADE TUNING, MOBILITY

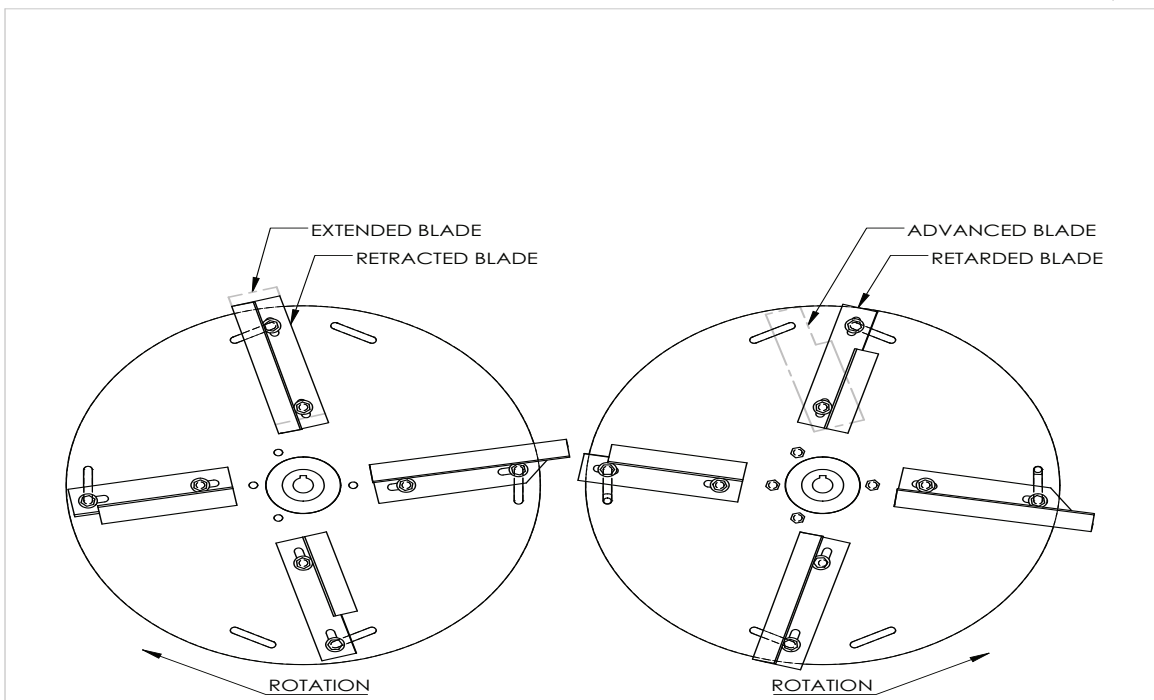

40' SPREAD

NOTICE

APPROXIMATELY 40 FT. SPREAD

800.342.7498

LOW RANGE

12 TO 72 T.

GATE OPENING	MATERIAL WEIGHT IN POUNDS PER CUBIC FOOT							
	40	45	50	55	60	65	70	75
1	55	63	69	76	83	90	96	104
1.5	83	93	103	114	124	135	145	155
2	110	124	138	151	165	179	193	206
2.5	138	155	171	189	206	224	240	258
3	165	186	206	228	248	269	289	310
3.5	193	216	241	265	289	314	338	359
4	220	248	275	303	330	358	385	413
4.5	248	279	310	341	371	403	434	464
5	275	310	344	379	413	448	481	516

HIGH RANGE

24 TO 48 T.

GATE OPENING	MATERIAL WEIGHT IN POUNDS PER CUBIC FOOT							
	40	45	50	55	60	65	70	75
1	165	186	206	228	248	269	290	310
1.5	248	279	310	341	371	404	435	465
2	330	371	413	454	495	538	580	620
2.5	413	464	515	568	619	673	725	775
3	495	558	619	681	743	806	869	930
3.5	578	650	721	794	866	941	1014	1085
4	660	743	825	908	990	1075	1158	1240
4.5	743	836	929	1021	1114	1210	1303	1394
5	825	929	1031	1135	1238	1344	1448	1550

APPLICATION RATE EXPRESSED IN POUNDS PER ACRE



PART NO. 1001118-40

50' SPREAD

NOTICE

APPROXIMATELY 50 FT. SPREAD

800.342.7498

LOW RANGE

12 TO 72 T.

GATE OPENING	MATERIAL WEIGHT IN POUNDS PER CUBIC FOOT							
	40	45	50	55	60	65	70	75
1	44	50	55	61	66	72	77	83
1.5	66	74	82	91	99	108	116	124
2	88	99	110	121	132	143	154	165
2.5	110	124	137	151	165	179	192	206
3	132	149	165	182	198	215	231	248
3.5	154	173	193	212	231	251	270	287
4	176	198	220	242	264	286	308	330
4.5	198	223	248	273	297	322	347	371
5	220	248	275	303	330	358	385	413

HIGH RANGE

24 TO 48 T.

GATE OPENING	MATERIAL WEIGHT IN POUNDS PER CUBIC FOOT							
	40	45	50	55	60	65	70	75
1	132	149	165	182	198	215	232	248
1.5	198	223	248	273	297	323	348	372
2	264	297	330	363	396	430	464	496
2.5	330	371	412	454	495	538	580	620
3	396	446	495	545	594	645	695	744
3.5	462	520	577	635	693	753	811	868
4	528	594	660	726	792	860	926	992
4.5	594	669	743	817	891	968	1042	1115
5	660	743	825	908	990	1075	1158	1240

APPLICATION RATE EXPRESSED IN POUNDS PER ACRE

M·BILITY
BY DALTON AG

PART NO. 1001118

60' SPREAD

NOTICE

APPROXIMATELY 60 FT. SPREAD

800.342.7498

LOW RANGE

12 TO 72 T.

GATE OPENING	MATERIAL WEIGHT IN POUNDS PER CUBIC FOOT							
	40	45	50	55	60	65	70	75
1	37	42	46	51	55	60	64	69
1.5	55	62	68	76	82	90	97	103
2	73	82	92	101	110	119	128	137
2.5	92	103	114	126	137	149	160	172
3	110	124	137	152	165	179	192	207
3.5	128	144	161	177	192	209	225	239
4	147	165	183	202	220	238	257	275
4.5	165	186	207	227	247	268	289	309
5	183	207	229	252	275	298	321	344

HIGH RANGE

24 TO 48 T.

GATE OPENING	MATERIAL WEIGHT IN POUNDS PER CUBIC FOOT							
	40	45	50	55	60	65	70	75
1	110	124	137	152	165	179	193	207
1.5	165	186	207	227	247	269	290	310
2	220	247	275	302	330	358	387	413
2.5	275	309	343	378	412	448	483	517
3	330	372	412	454	495	537	579	620
3.5	385	433	481	529	577	627	676	723
4	440	495	550	605	660	717	772	827
4.5	495	557	619	681	742	807	868	929
5	550	619	687	757	825	896	956	1033

APPLICATION RATE EXPRESSED IN POUNDS PER ACRE

M•BILITY
BY DALTON AG

PART NO. 1001118-60

50' or 60' SPREAD, VARIABLE RATE

50' or 60' SPREAD

HYDRAULIC SPINNERS SET AT 750 RPM

GATE OPENING	APPROXIMATE RATE
2	50 - 200
3	100 - 300
4	200 - 400
5	300 - UP

APPLICATION RATE EXPRESSED IN POUNDS PER ACRE


BLADES MUST BE SET FOR SPREAD WIDTH

MOBILITY
BY DALTON AG

PART NO.1001118-VR

FRAME AND DRIVELINE

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED

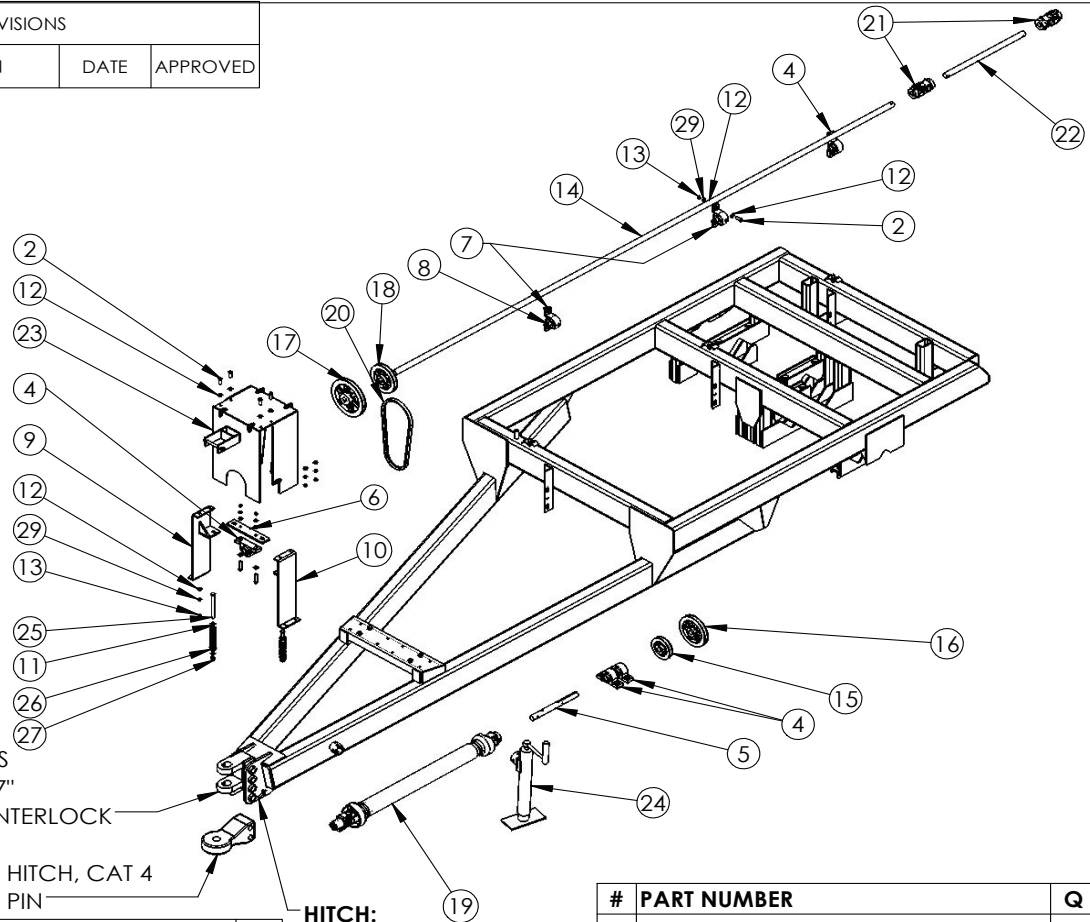

STANDARD:

4420532-HD CLEVIS

153002 BOLT, 1" X 7"

150061 NUT, 1" CENTERLOCK

OPTIONAL:

4440918 BULL PULL HITCH, CAT 4

4441048 BULL PULL PIN

HITCH:

4421004 BOLT ON

#	PART NUMBER	Q
1	6 TON & 8 TON FRAME	1
2	151805 BOLT, .375 NC x 1.25, PLTD	23
3	151806 BOLT, .375 NC x 1.5, G5, PLTD	10
4	640511 PILLOW BLOCK BEARING	4
5	1004197 SHAFT	1
6	2001052 BEARING ARM, FRONT	1
7	1008456 SPLIT POLY BEARING & HOUSING	2
8	1009336 SPLIT POLY INSERT ONLY	2
9	2001124 SHIELD, MOUNTING BRACKET, RH	1
10	2001125 SHIELD, MOUNTING BRACKET, LH	1
11	150214 FLAT WASHER, .375 SS	4
12	150214 FLAT WASHER, .375 SS	88
13	150046 NUT, .375 NC SS	49
14	2001126 SHAFT, FRONT, 1x133, 8TON	1
15	4440827 PULLEY, 4.75 DIA FOR 1000 PTO	1

#	PART NUMBER	Q
16	4440830 PULLEY, 6.75 DIA FOR 540 PTO	1
17	4440828 PULLEY, 8.25 DIA FOR 1000 PTO	1
18	4440829 PULLEY, 6.25 DIA FOR 540 PTO	1
19	1009228 PTO COMPLETE, 540 12N	1
	4440853 1000 RPM PTO HALF SHAFT	1
20	1007099 BELT	1
21	641667 U-JOINT, DRIVE SHAFT	2
22	2001127 SHAFT, BACK, 1 x 21, 8 TON	1
23	4420418 PTO SHIELD	2
24	4440234 TALL 5000 LBS JACK	1
25	1001885 CARRIAGE BOLT, .4375 x 6	2
26	1001636 SPRING	2
27	158039 LOCK NUT, .4375	2
28	4420532-HD HITCH CLEVIS	1
28B	4440918 BULL PULL HITCH, CAT 4	1
29	150248 LOCK WASHER, .375 STD SS	54

PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.	DRAWN BY	RICH SMOTHERS	1/15/2013
	CHECKED BY		
	PRINT DATE	5/2/2017	
	CONFIG.	FRAME & DRIVELINE- 600-800 ROW CROP	
COMMENTS:			



DWG: FRAME & DRIVELINE- 600-800 ROW CROPS


SIZE A	SHEET TITLE: 6 AND 8 TON ROW CROP	REV A
------------------	--------------------------------------	-----------------

FOR PARTS, CALL 1.800.342.7498

SCALE: 1:32 SHEET 1 OF 1

540 PTO

1009228 PTO COMPLETE, 540 12N

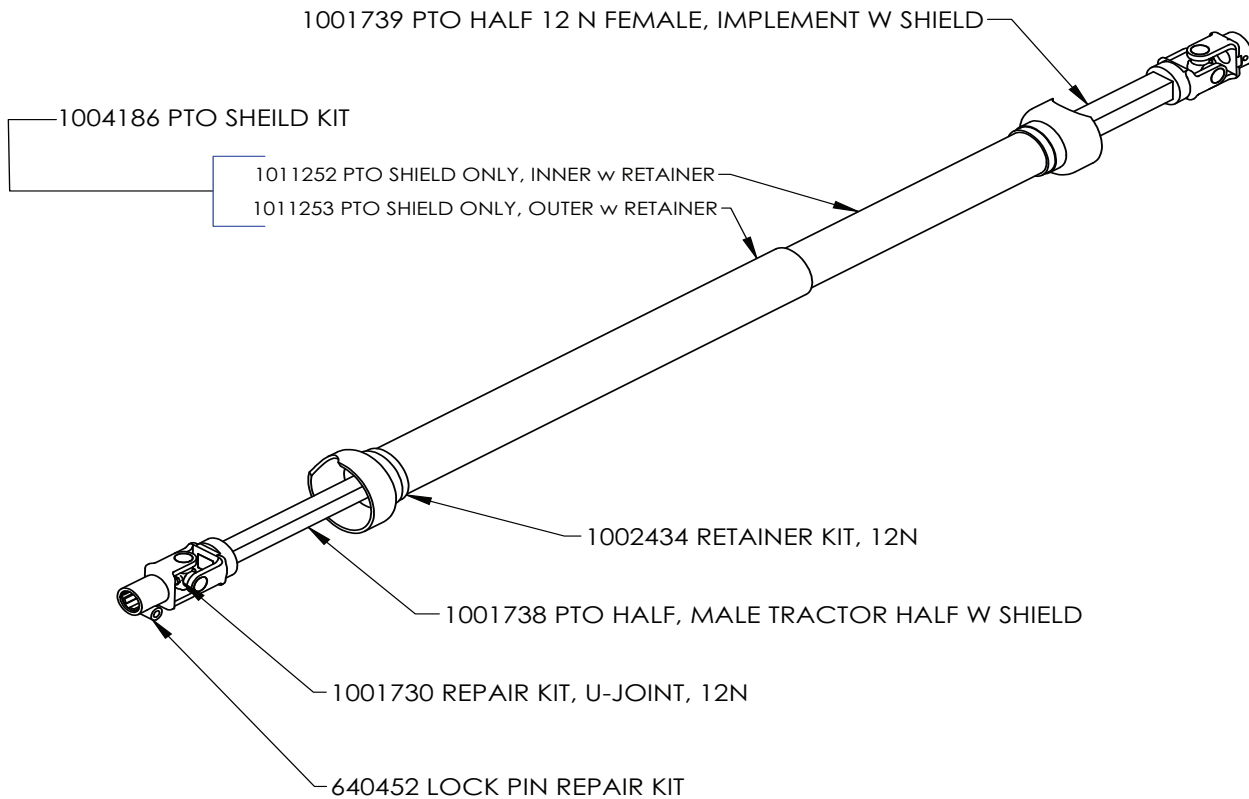

DRAWN BY	RICH SMOTHERS	7/7/2014
CHECKED BY		
PRINT DATE	7/28/2014	
CONFIG.	Default	
COMMENTS:		



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.

DWG: 1009228 540 RPM PTO SHAFT OPTION

SIZE A	SHEET TITLE: Sheet1	REV A
------------------	------------------------	-----------------

FOR PARTS, CALL 1.800.342.7498


SCALE: 1:10

SHEET 1 OF 1

1000 PTO

4440854 1000 RPM PTO SHAFT

4440854 1000 RPM PTO SHAFT

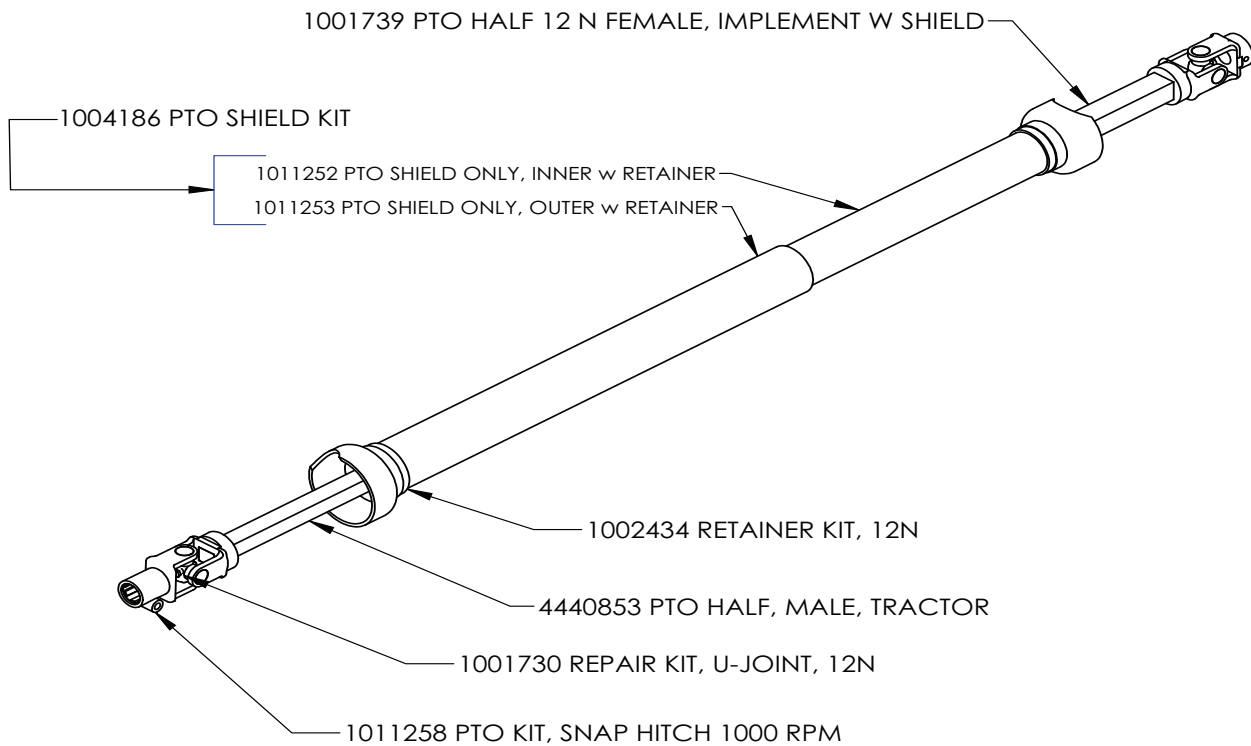

DRAWN BY	RICH SMOTHERS	7/7/2014
CHECKED BY		
PRINT DATE	12/24/2015	
CONFIG.	Default	
COMMENTS:		

Dalton
www.DaltonAg.com

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
CMC-DALTON AG. ANY REPRODUCTION
IN PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF CMC-DALTON
AG IS PROHIBITED.


DWG: 4440854 1000 RPM PTO SHAFT

SIZE A	SHEET TITLE: Sheet1	REV A
SCALE: 1:10	SHEET 1 OF 1	

FOR PARTS, CALL 1.800.342.7498


6 TON ADJUSTABLE AXLE & HUB PARTS

6 TON ADJUSTABLE AXLE & HUB PARTS

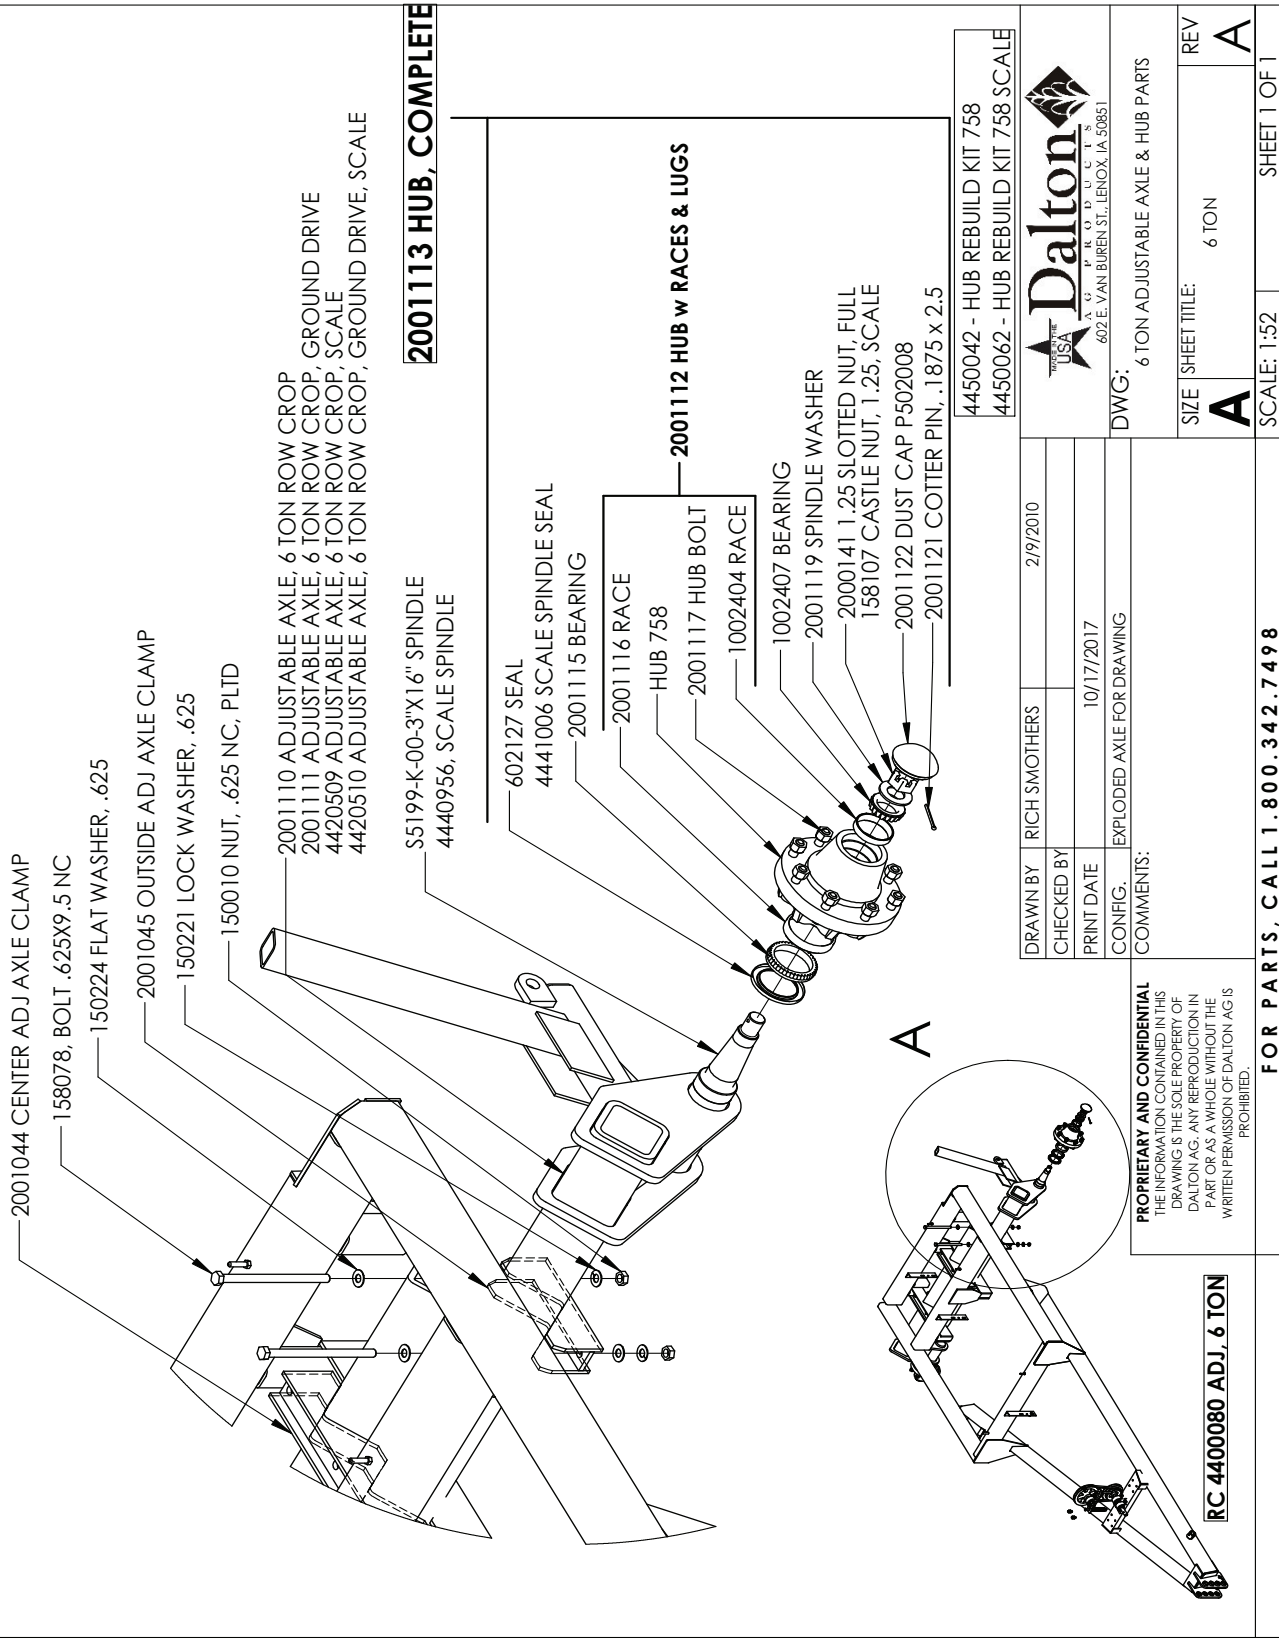

8 TON ADJUSTABLE AXLE & HUB PARTS

8 TON ADJUSTABLE AXLE & HUB PARTS

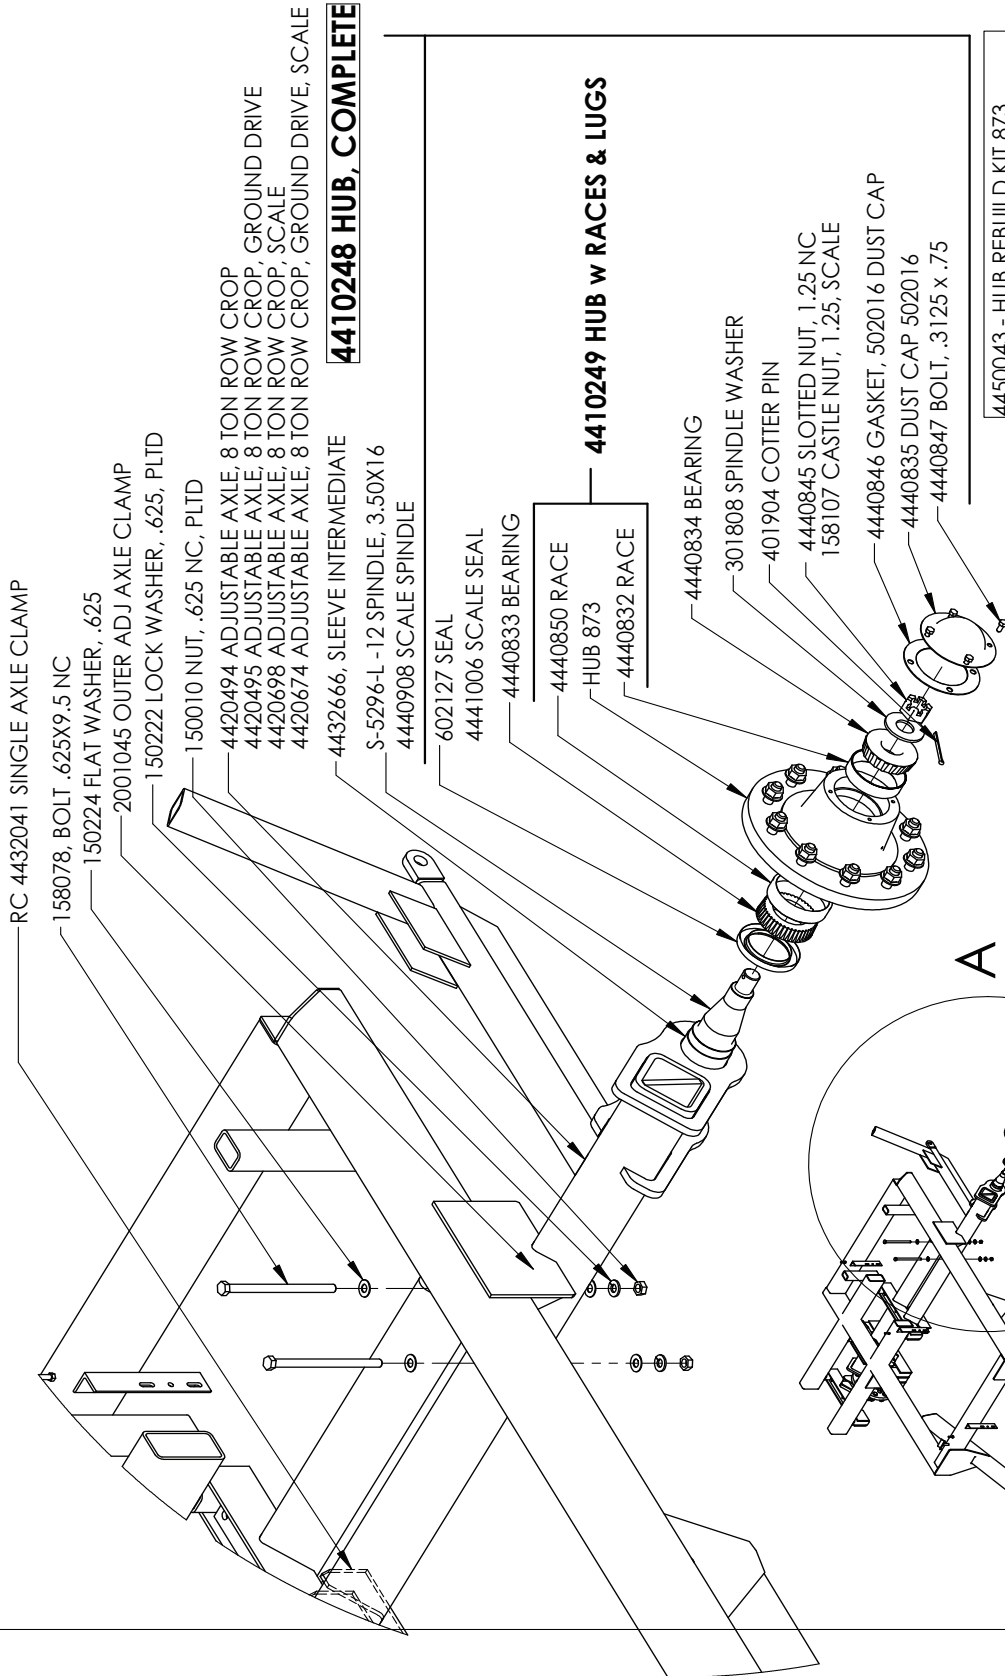

4450043 - HUB REBUILD KIT 873
4450063 - HUB REBUILD KIT 873 SCALE



DWG: 8 TON ADJUSTABLE AXLE & HUB PARTS

SIZE: 8 TON
REV: A

SHEET 1 OF 1

DRAWN BY	RICH SMOTHERS	1/15/2013
CHECKED BY		
PRINT DATE	10/17/2017	
CONFIG.	EXPLODED AXLE PARTS	

COMMENTS:


PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
DALTON AG. ANY REPRODUCTION IN
PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF DALTON AG IS
PROHIBITED.

RC 4400081 ADJ, 8 TON

FOR PARTS, CALL 1.800.342.7498

5 4 3 2 1

10 TON ADJUSTABLE AXLE & HUB PARTS

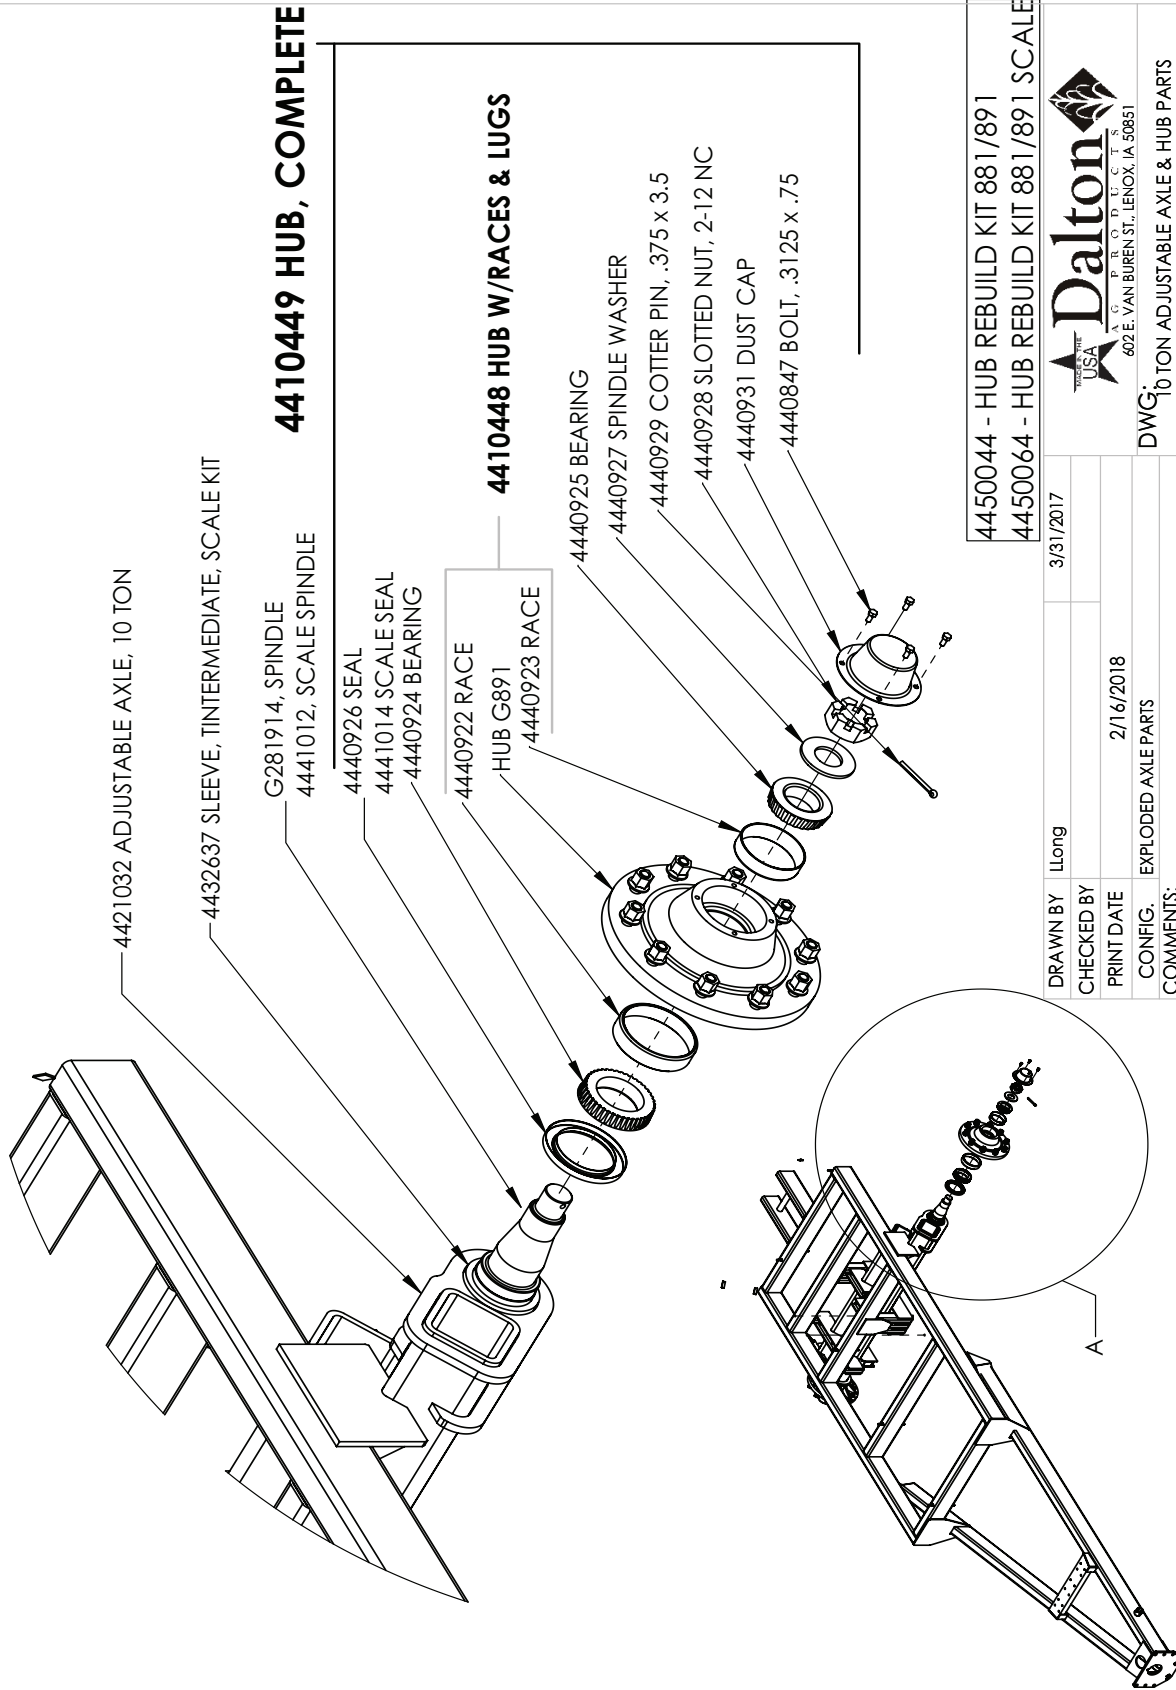


	DRAWN BY	Llong	3/31/2017		DWG: 10 TON ADJUSTABLE AXLE & HUB PARTS		
	CHECKED BY						
	PRINT DATE	2/16/2018					
	CONFIG.	EXPLODED AXLE PARTS					
	COMMENTS:						
PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.				SIZE	SHEET TITLE: A	Sheet1	REV
C:\EPDM_Vault\Spreader\MOBILITY\ms assemblies\				SCALE: 1:52	SHEET 1 OF 1		
5				4	3	2	1

GROUND DRIVE ASSEMBLY


(for 6 & 8 Ton only)

GROUND DRIVE ASSEMBLY

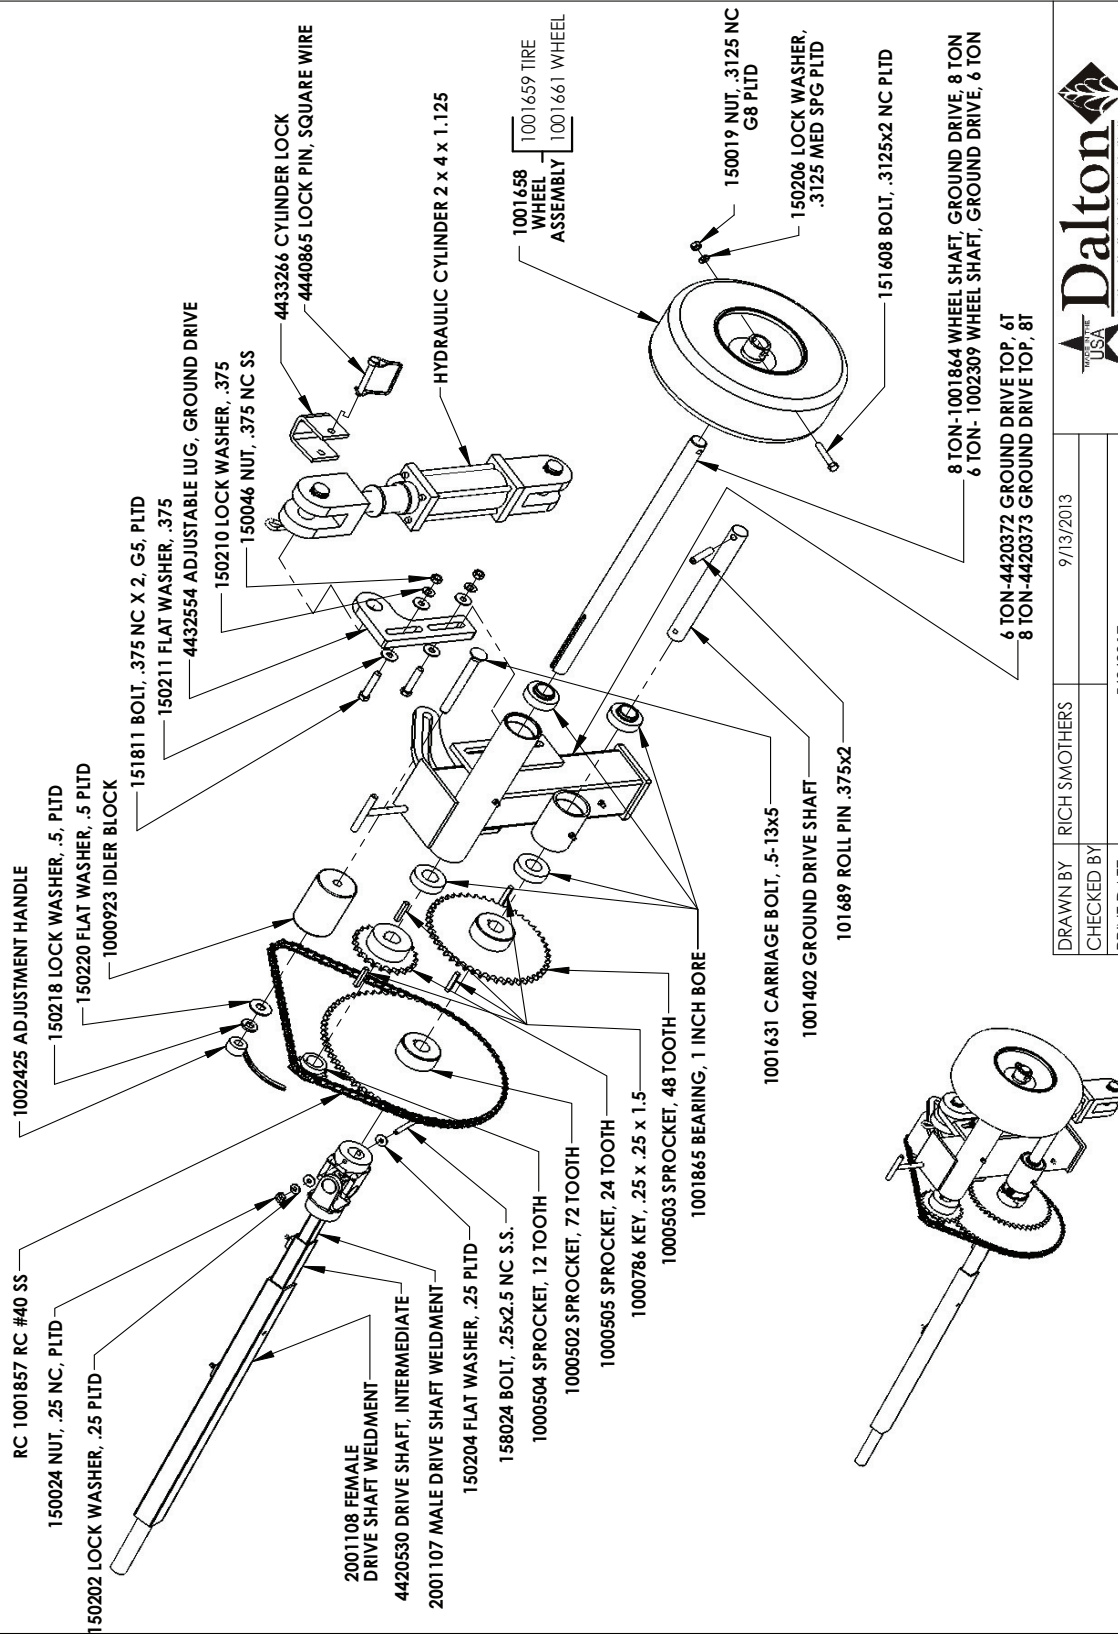


602 E. VAN BUREN ST., LENOX, IA 50851		9/13/2013		1	
DRAWN BY	RICH SMOTHERS	CHECKED BY		2	
PRINT DATE	5/2/2017	CONFIG.	Default	3	
COMMENTS: FOR USE WITH HYDRAULIC CYLINDER ON/OFF		4		5	
PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.		FOR PARTS, CALL 1.800.342.7498		SCALE: 1:10	
DWG: GROUND DRIVE ASSEMBLY		SIZE SHEET TITLE: 6 AND 8 TON ONLY		SHEET 1 OF 1	
REV A		1		2	

FRONT TANK ASSEMBLY

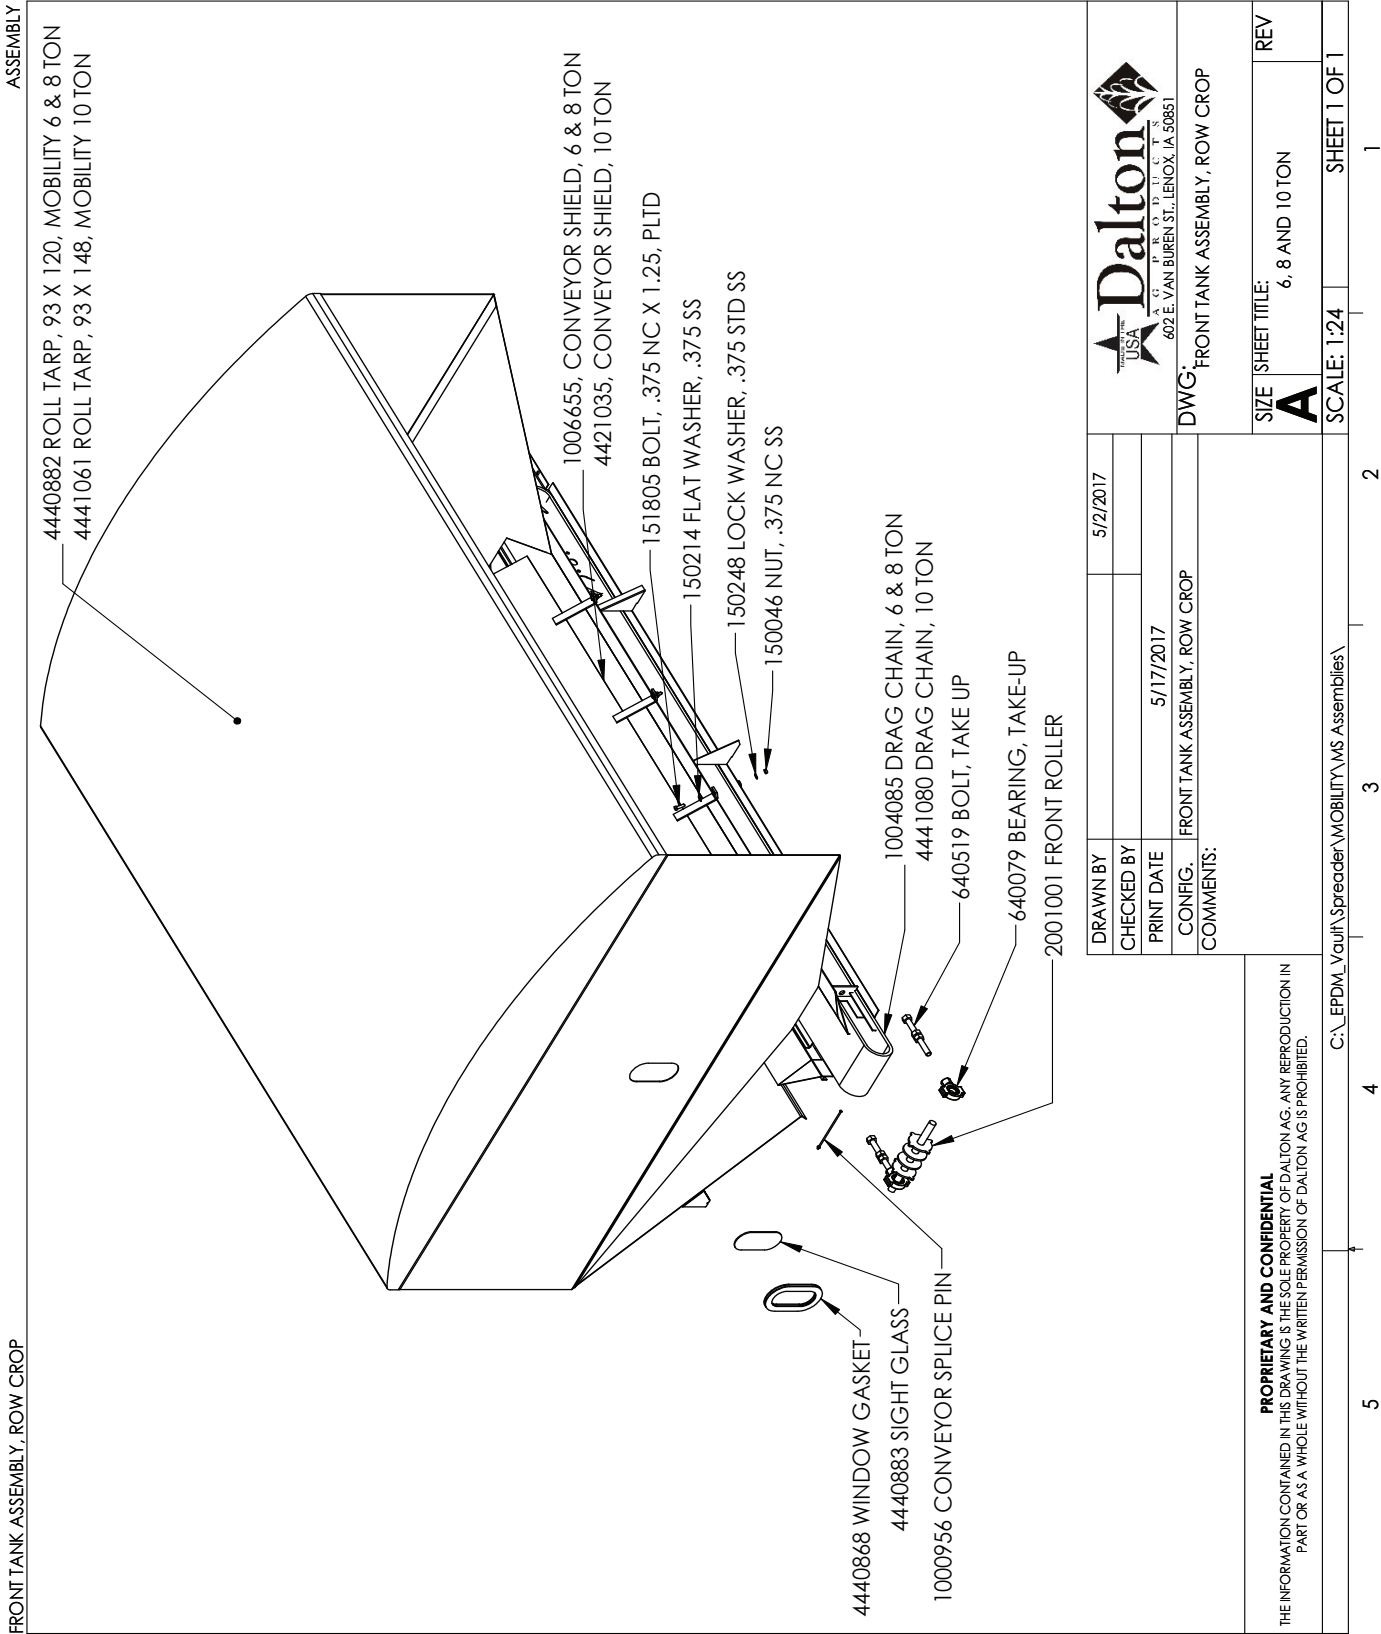

REAR AREA ASSEMBLY

REAR AREA ASSEMBLY

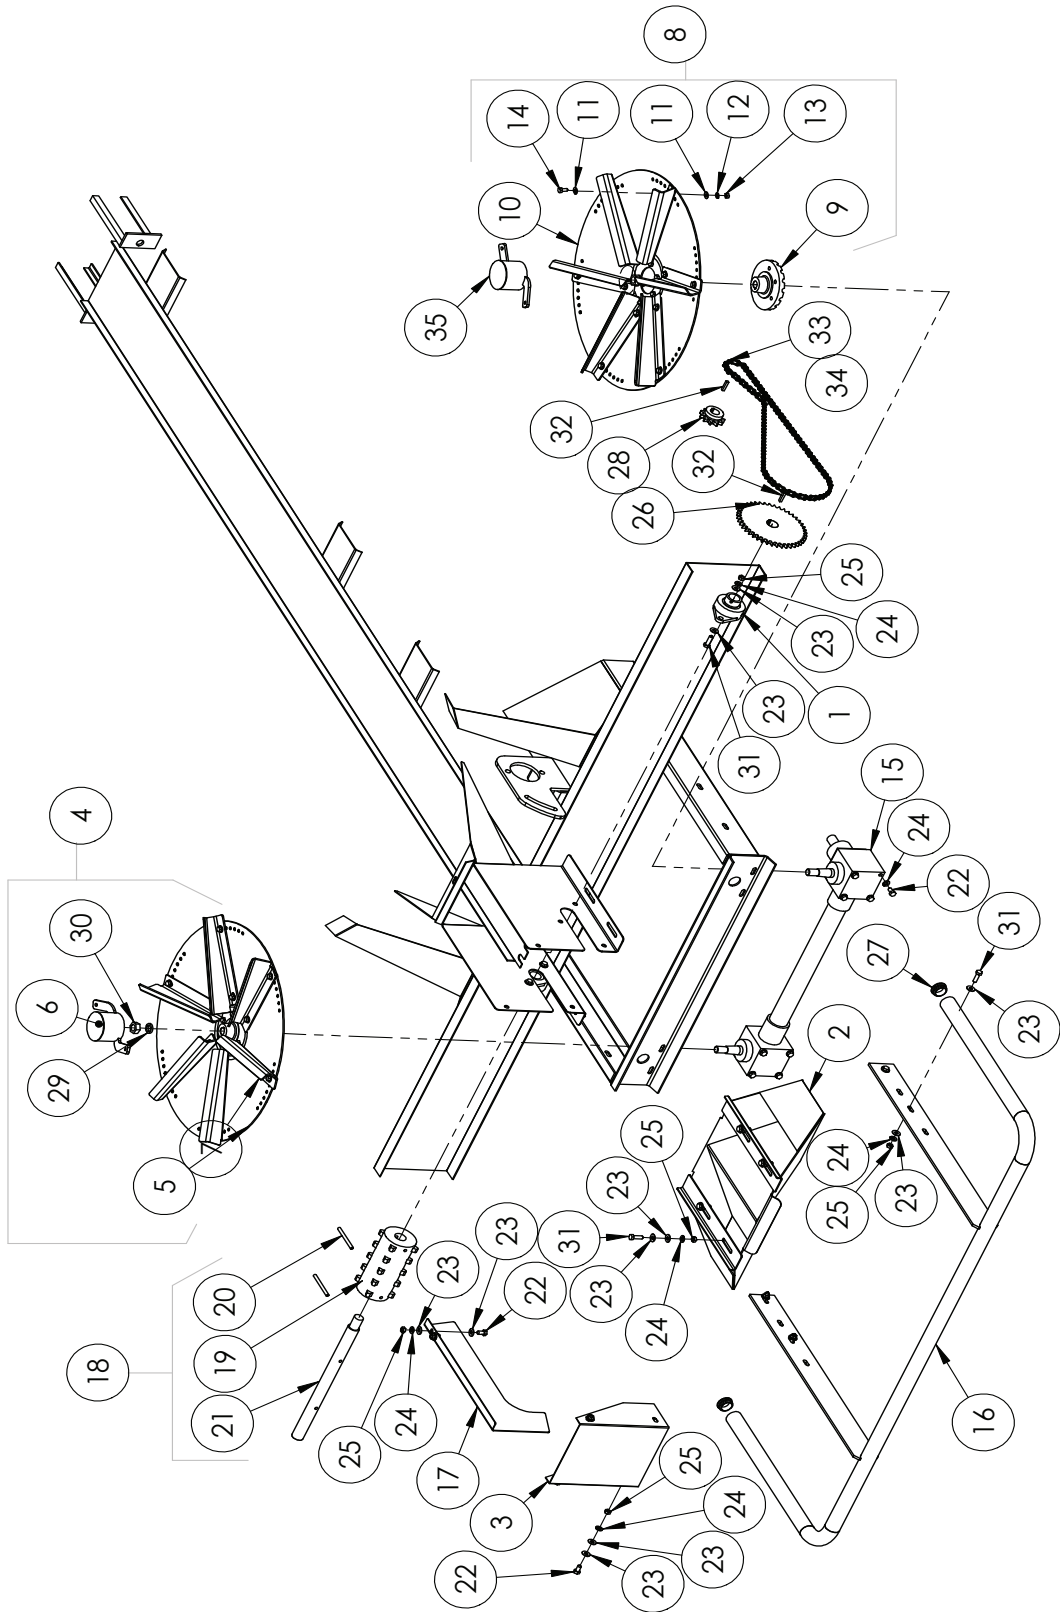

DRAWN BY J. J. Jendrich Jondle		11/24/2020	
CHECKED BY			
PRINT DATE 3/16/2021			
CONFIG. EXPLODED REAR VIEW			
COMMENTS:			
Dalton USA A G P R O D U C T S 602 E. VAN BUREN ST., LENOX, IA 50851		DWG: REAR AREA ASSEMBLY	
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.		SIZE SHEET TITLE: EXPLODED VIEW	
FOR PARTS, CALL 1.800.342.7498		SCALE: 1:18	
1		2	
3		4	
5		1	
SHEET 1 OF 2		REV A	

ITEM NO.	PART NUMBER	QTY.
1	1000646 BEARING 1.25 BORE	1
2	4421684 DIVIDER, WELDMENT, WIDE SPREAD	1
3	1001390 TROUGH EXTENSION BACK	1
4	4410815-L SPINNER ASSEMBLY, LH	1
5	4421661 SPINNER DISC, WELDMENT, LH	1
6	4421685 DISC CAP WELMENTS L.H.	1
7	4431277 SPINNER BLADE, 11 INCH	3
8	4410815-R SPINNER ASSEMBLY, RH	1
9	1003709-VR SPINNER HUB, VARIABLE RATE, MACHINED	1
10	4421662 SPINNER DISC, WELDMENT, RH	1
11	158054 FLAT WASHER, .3125, SS	32
12	158053 LOCK WASHER, .3125, SS	16
13	150007 NUT, .3125 NC, SS	16
14	151615 BOLT, .3125 X .75 SS	12
15	4441174 GEAR BOX SET, 26.375 CENTERLINE	1
16	4421647 REAR BUMPER, RC, WIDE SPREAD	1
17	4432469 PARTER PLATE, WIDE SPREAD	1
18	1000838 DRIVE SPROCKET ASSEMBLY	1
19	1000684 CAST SPROCKET, MACHINED	1
20	158035 ROLL PIN .3125 X 3.5	2
21	1000644 SPROCKET SHAFT	1
22	151834 BOLT .375 X .75 NC, SS	14
23	150214 FLAT WASHER, .375 SS	36
24	150248 LOCK WASHER, .375, SS	26
25	150046 NUT, .375 NC, SS	18
26	1000507 SPROCKET 50B36	1
27	4441075 1.25 PIPE CAP	2
28	640012 SPROCKET, 50B12	1
29	150225 LOCK WASHER, .75, SS	2
30	150013 NUT, .75 NC	2
31	151815 BOLT, .375 X 1.25 NC, SS	12
32	641653 KEY, .25 X .25 X 1.25	2
33	4432166-86 CHAIN, SS #50 CHAIN, 86 PITCH w CONNECTOR (PWM DRIVE)	1
34	4432166-108 CHAIN, SS #50 CHAIN, 108 PITCH w CONNECTOR (GROUND DRIVE)	1
35	4421686 DISC CAP WELDMENT R.H.	1

DRAWN BY	Jeremiah Jondle	11/13/2020
CHECKED BY		
PRINT DATE	3/16/2021	
CONFIG.	REAR AREA ASSEMBLY	



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.

COMMENTS:

DWG: 4400445 800W REAR AREA ASSEMBLY


SIZE A	SHEET TITLE: BOM	REV A
------------------	---------------------	-----------------

FOR PARTS, CALL 1.800.342.7498

SCALE: 1:18 SHEET 2 OF 2

GATE JACK ASSEMBLY

4410472, GATE JACK ASSEMBLY

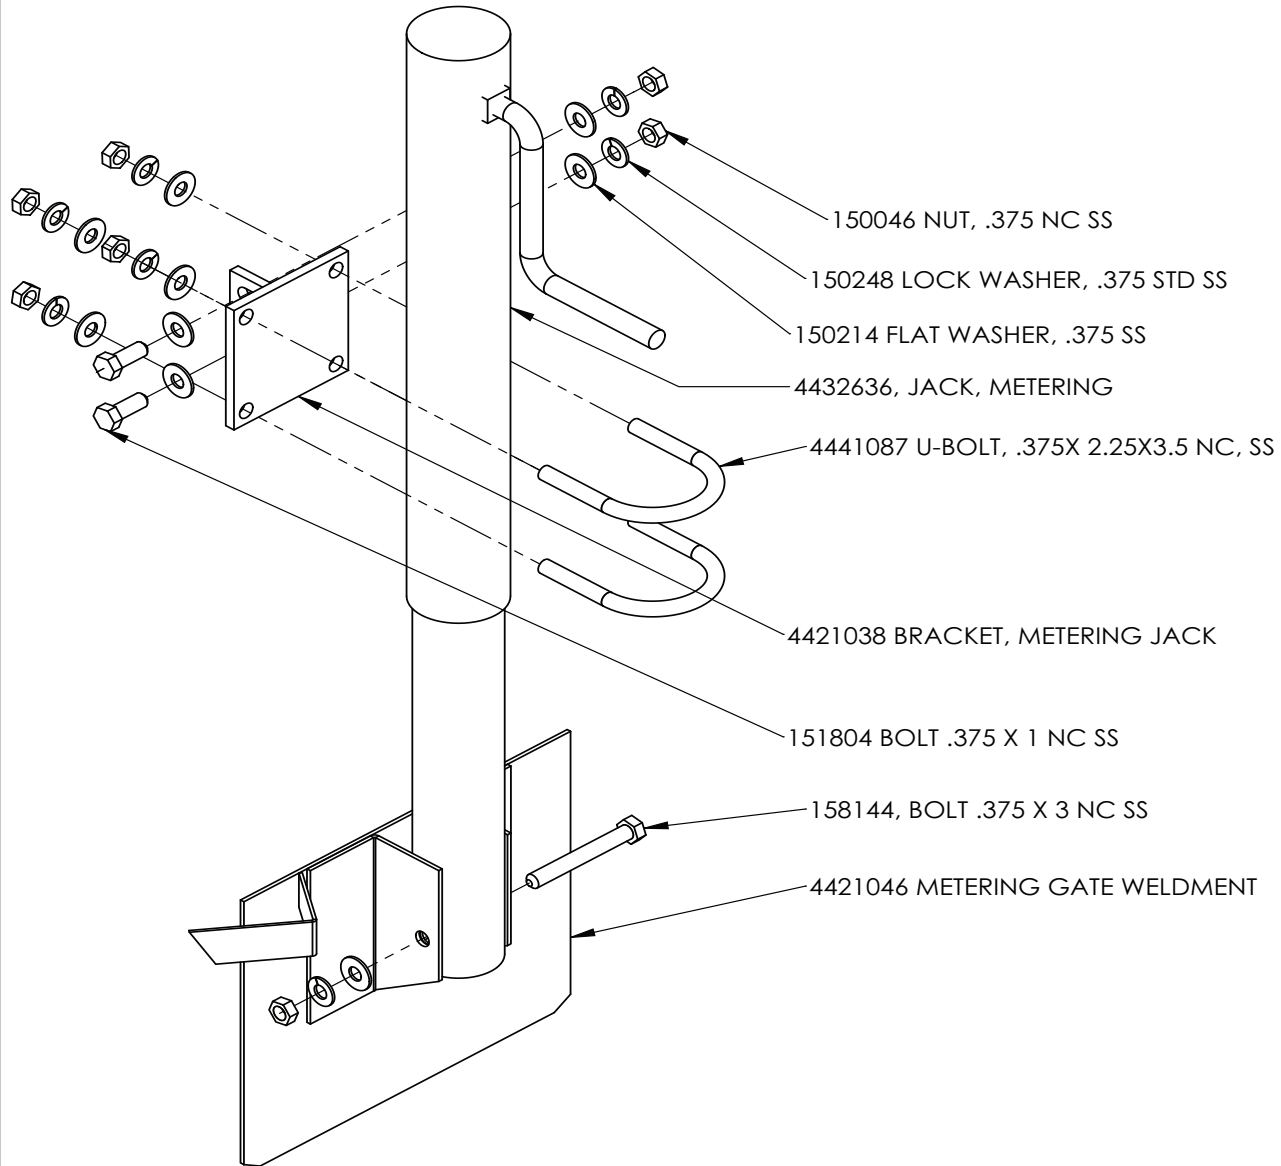

DRAWN BY	RICH SMOTHERS	3/30/2017
CHECKED BY		
PRINT DATE	10/19/2017	
CONFIG.	Default	
COMMENTS:		




DWG:	GATE JACK ASSEMBLY		
SIZE A	SHEET TITLE: Sheet1	REV A	
SCALE: 1:4		SHEET 1 OF 1	

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.

FOR PARTS, CALL 1.800.342.7498

IDLER MOUNT, CHAIN BELT

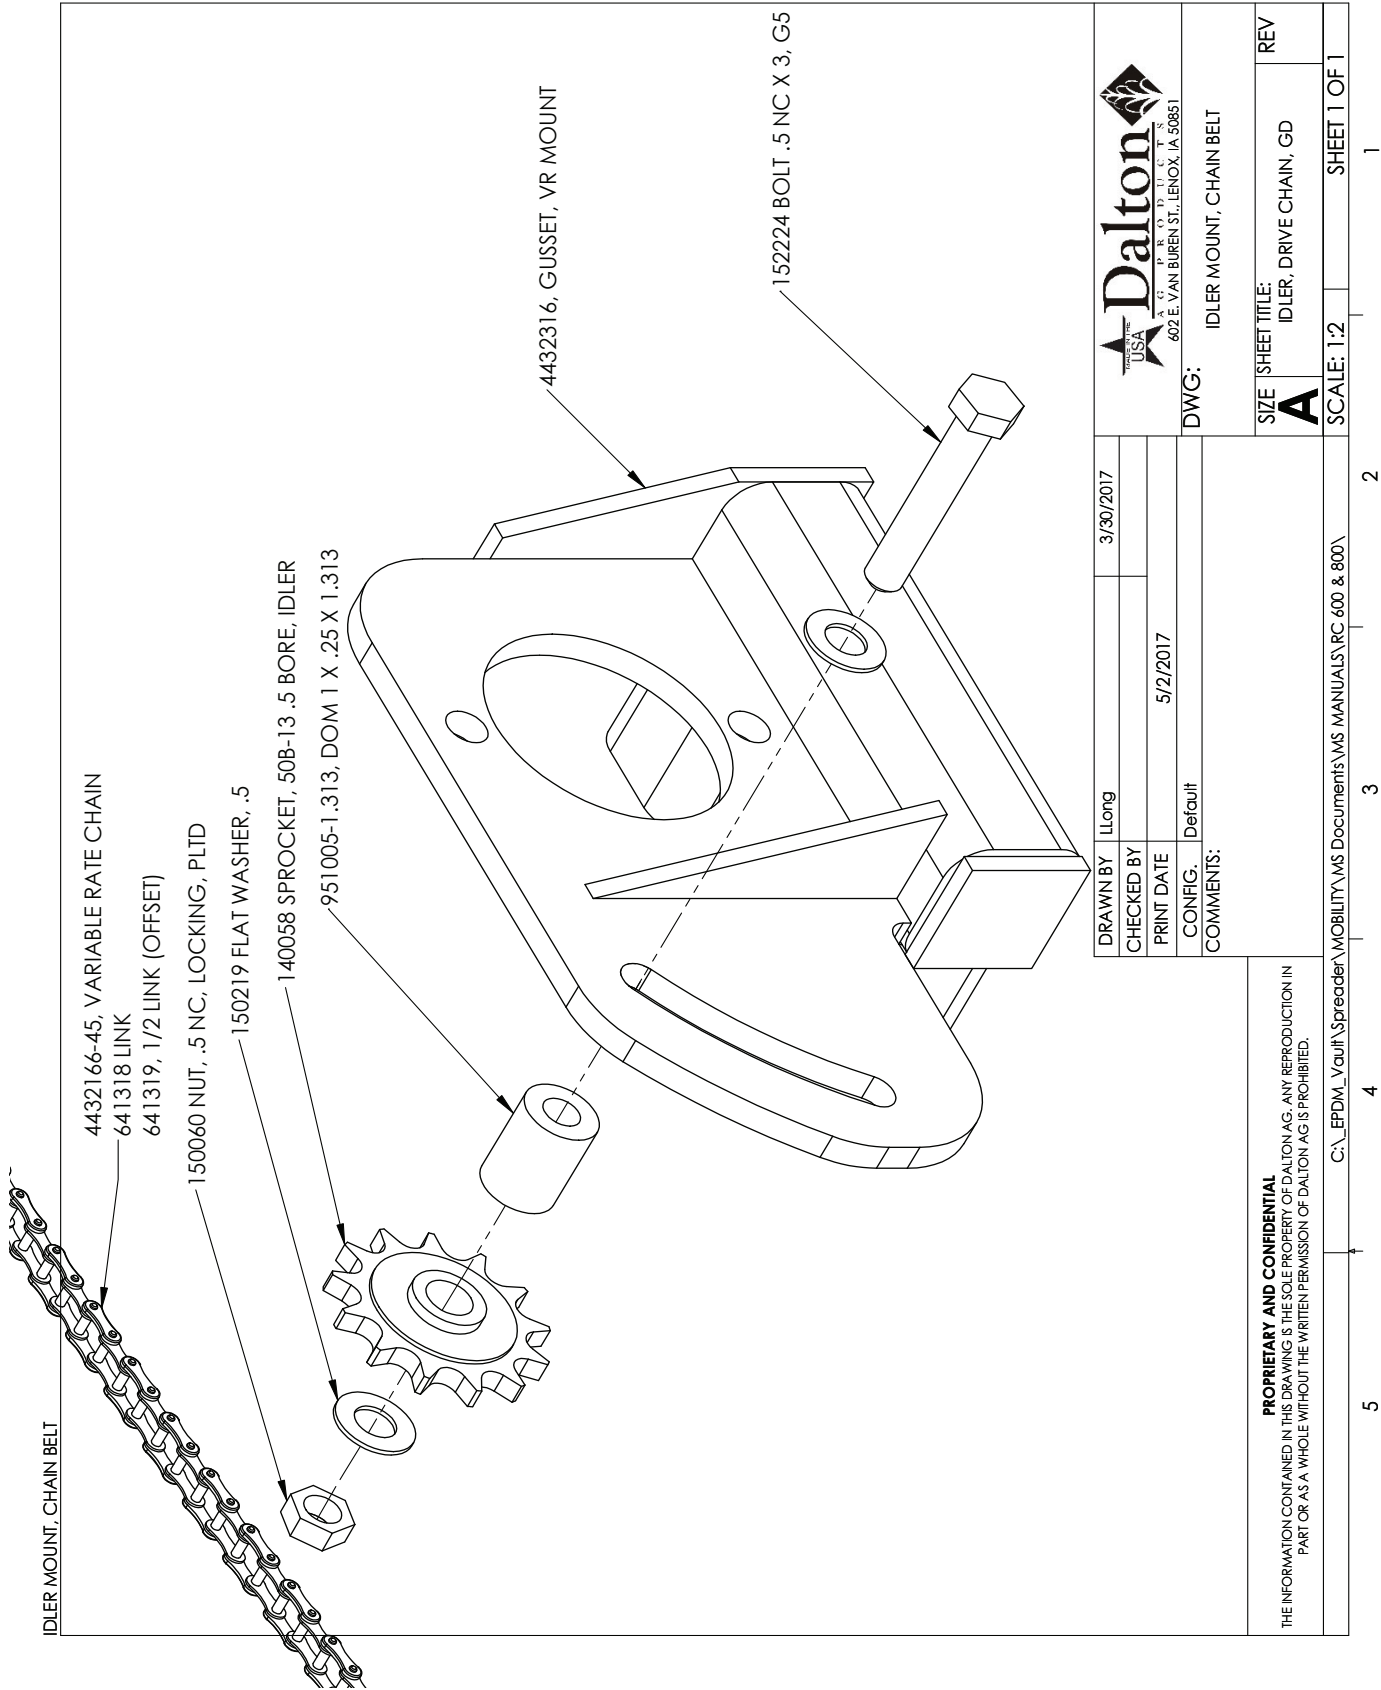

DRAWN BY	L Long	3/30/2017
CHECKED BY		
PRINT DATE	5/2/2017	
CONFIG.	Default	
COMMENTS:		

DWG: IDLER MOUNT, CHAIN BELT

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.

SIZE SHEET TITLE:
A IDLER, DRIVE CHAIN, GD
REV

SHEET 1 OF 1

C:\EPDM_Vault\Spreader\MOBILITY\MS Documents\MS MANUALS\RC 600 & 800\

1

2


3

4

5


4441174, GEAR BOX SET

ITEM	PART #	DESCRIPTION	QTY
1	1003735	BOX ASSEMBLY, RH	1
2	1000938	PLUG, SOFT	2
3	1000932	BEARING	8
4	1002426	GEAR	2
5	1000936	HOUSING, RH	1
6	1006856	OIL PLUG	2
7	1000935	KEY, WOODRUFF	2
8	1003730	SHAFT, TAPERED	1
9	1000933	RETAINER RING	5
10	1000931	RETAINER RING	8
11	1000930	SEAL	3
12	4441653	TUBE ASSEMBLY	1
13	1000944	HOUSING BARREL	3
14	4441654	TUBE ASSEMBLY	1
15	4441655	SHAFT, TAPERED	1
16	1000945	PINION GEAR	2
17	1003736	BOX ASSEMBLY, LH	1
18	1003730	SHAFT, TAPERED	1
19	1000947	HOUSING, LH	1
20	1001205	BARREL ASSEMBLY	1
21	1000948	SHAFT & GEAR ASSEMBLY	1
22	1000940	GASKET	3
23	1000834	HHCS, 5/16-18 x 3/4"	12
24	1000836	LOCK WASHER, 5/16"	12
25	1003742	45 DEGREE GREASE ZERK	2

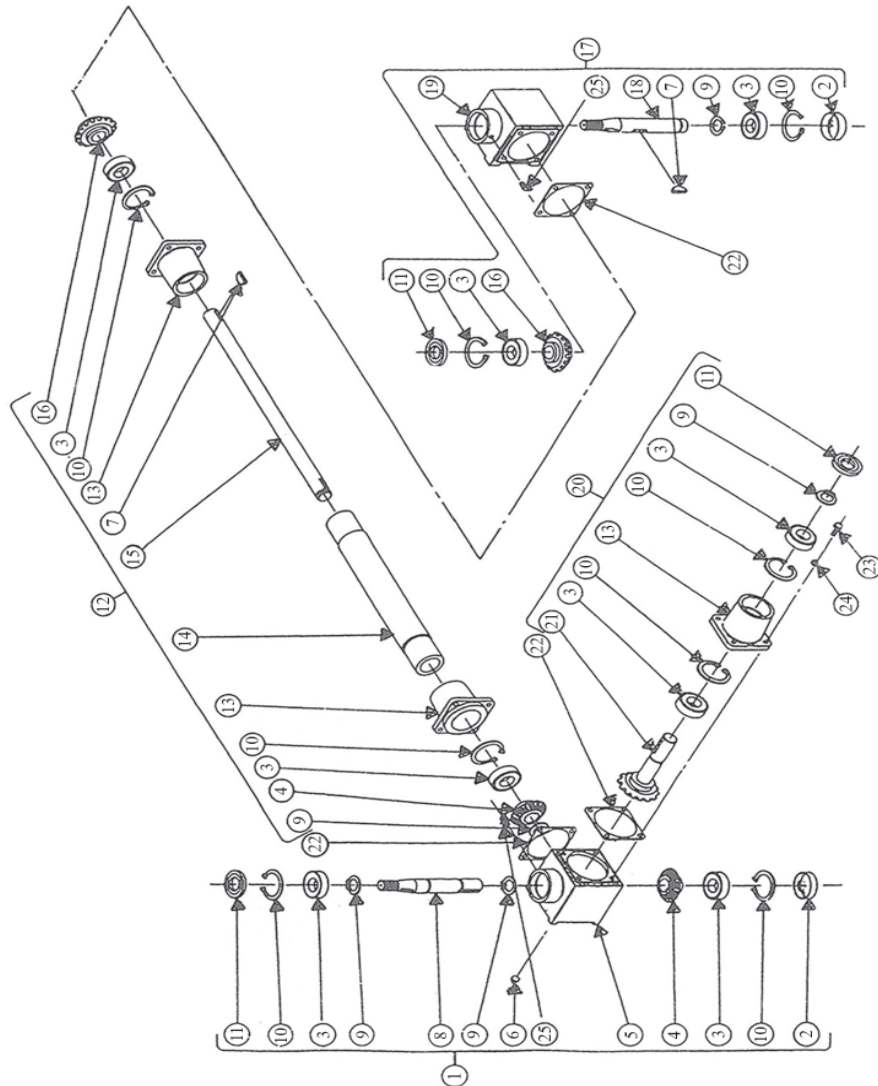

HYDRAULIC SPINNER GEAR BOX

ROW CROP HYD. SPINNERS, WIDE SPREAD

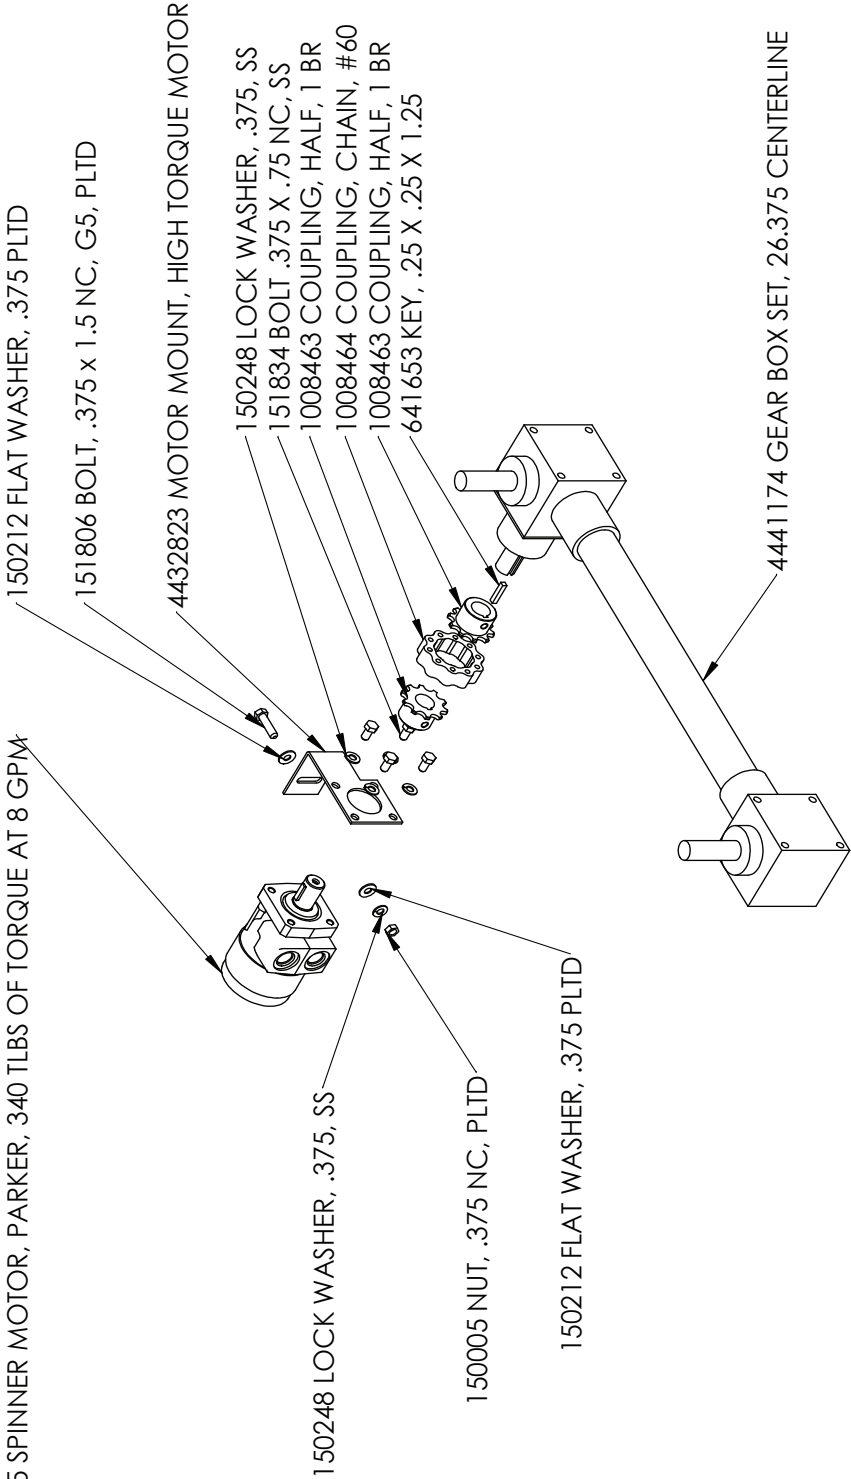


ROW CROP HYD. SPINNERS, WIDE SPREAD

UNLESS OTHERWISE SPECIFIED TOLERANCES TO BE: ANGLES : ± 1.0° FRACTIONS <6" : ± 1/32, >6" : 1/16 X.X : ± 0.06 X.XX : ± 0.03 X.XXX : ± 0.005	DRAWN BY	David Buchanan	11/12/2020	Dalton USA A G P R O D U C T S 602 E. VAN BUREN ST., LENOX, IA 50851
	CHECKED BY			
	PRINT DATE	11/17/2020		
	CONFIG.	Default		
COMMENTS:				DWG: ROW CROP HYD. SPINNERS, WIDE SPREAD
PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.	SIZE	SHEET TITLE:	Sheet1	REV
	A			
	SCALE: 1:12			SHEET 1 OF 1
5	4	3	2	1

TRACTOR HYDRAULIC DRIVEN SPINNERS

TRACTOR HYDRAULIC DRIVEN SPINNERS, WIDE SPREAD

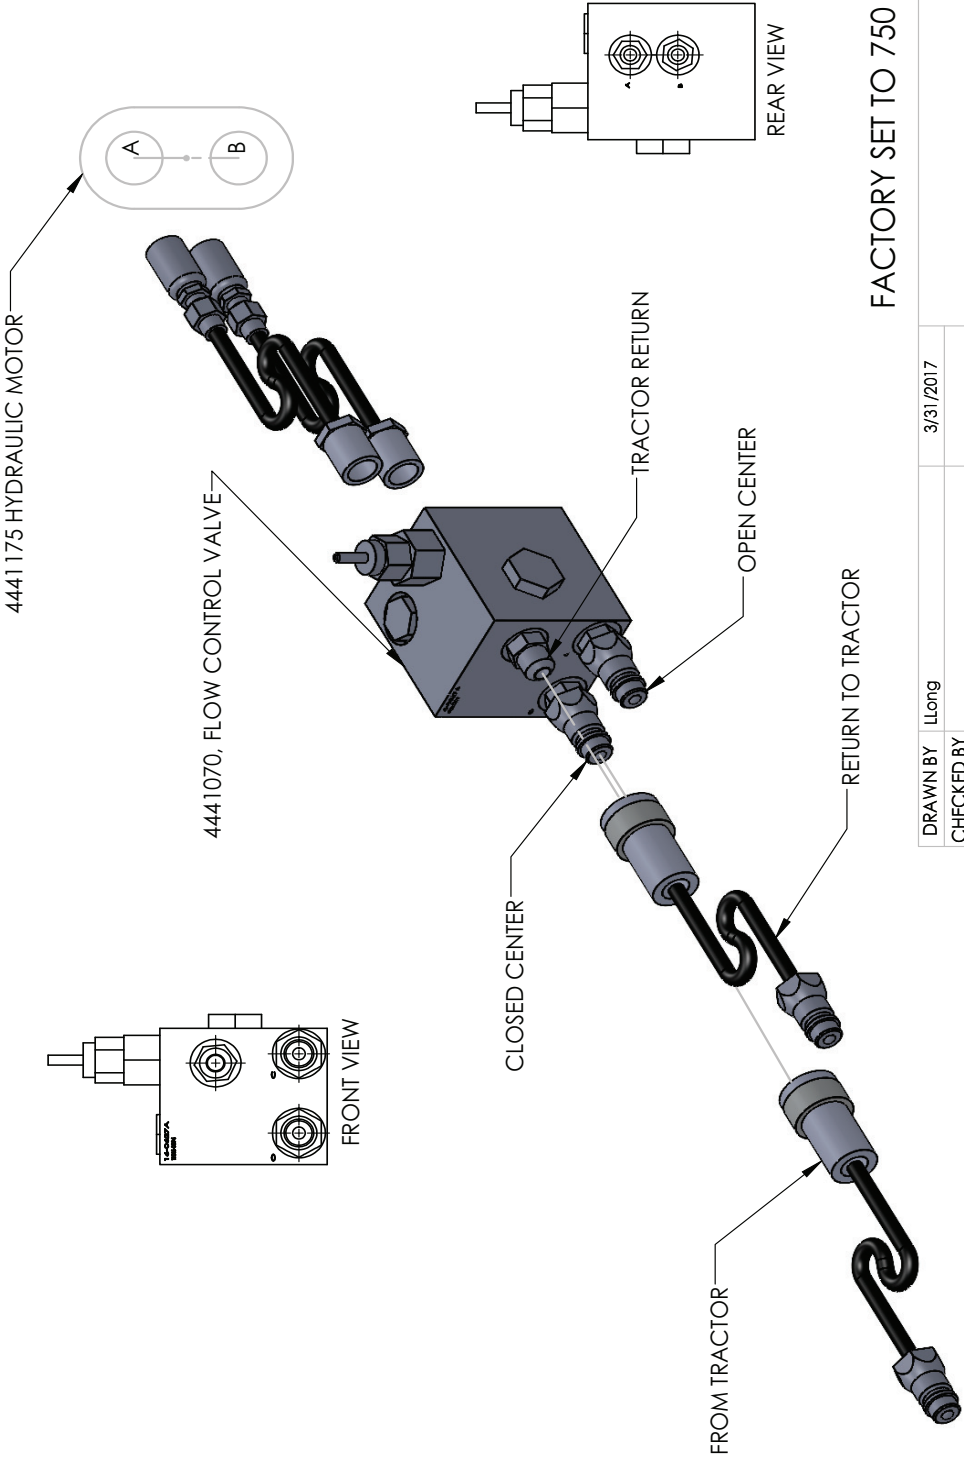


FACTORY SET TO 750 RPM


	PROPRIETARY AND CONFIDENTIAL			THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.
	DRAWN BY	Llong	3/31/2017	
	CHECKED BY			
	PRINT DATE	3/10/2021		
	CONFIG.	Default		
	COMMENTS:			
	DWG: 602 E. VAN BUREN ST., LENOX, IA 50851			
	TRACTOR HYDRAULIC DRIVEN SPINNERS, WIDE SPREAD			
	SIZE	SHEET TITLE:	REV	
		A	SCHEMATIC	
SCALE: 1:4			SHEET 1 OF 1	

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON AG IS PROHIBITED.

MOBILITY HYDRAULIC SPINNER DRIVE LAYOUT

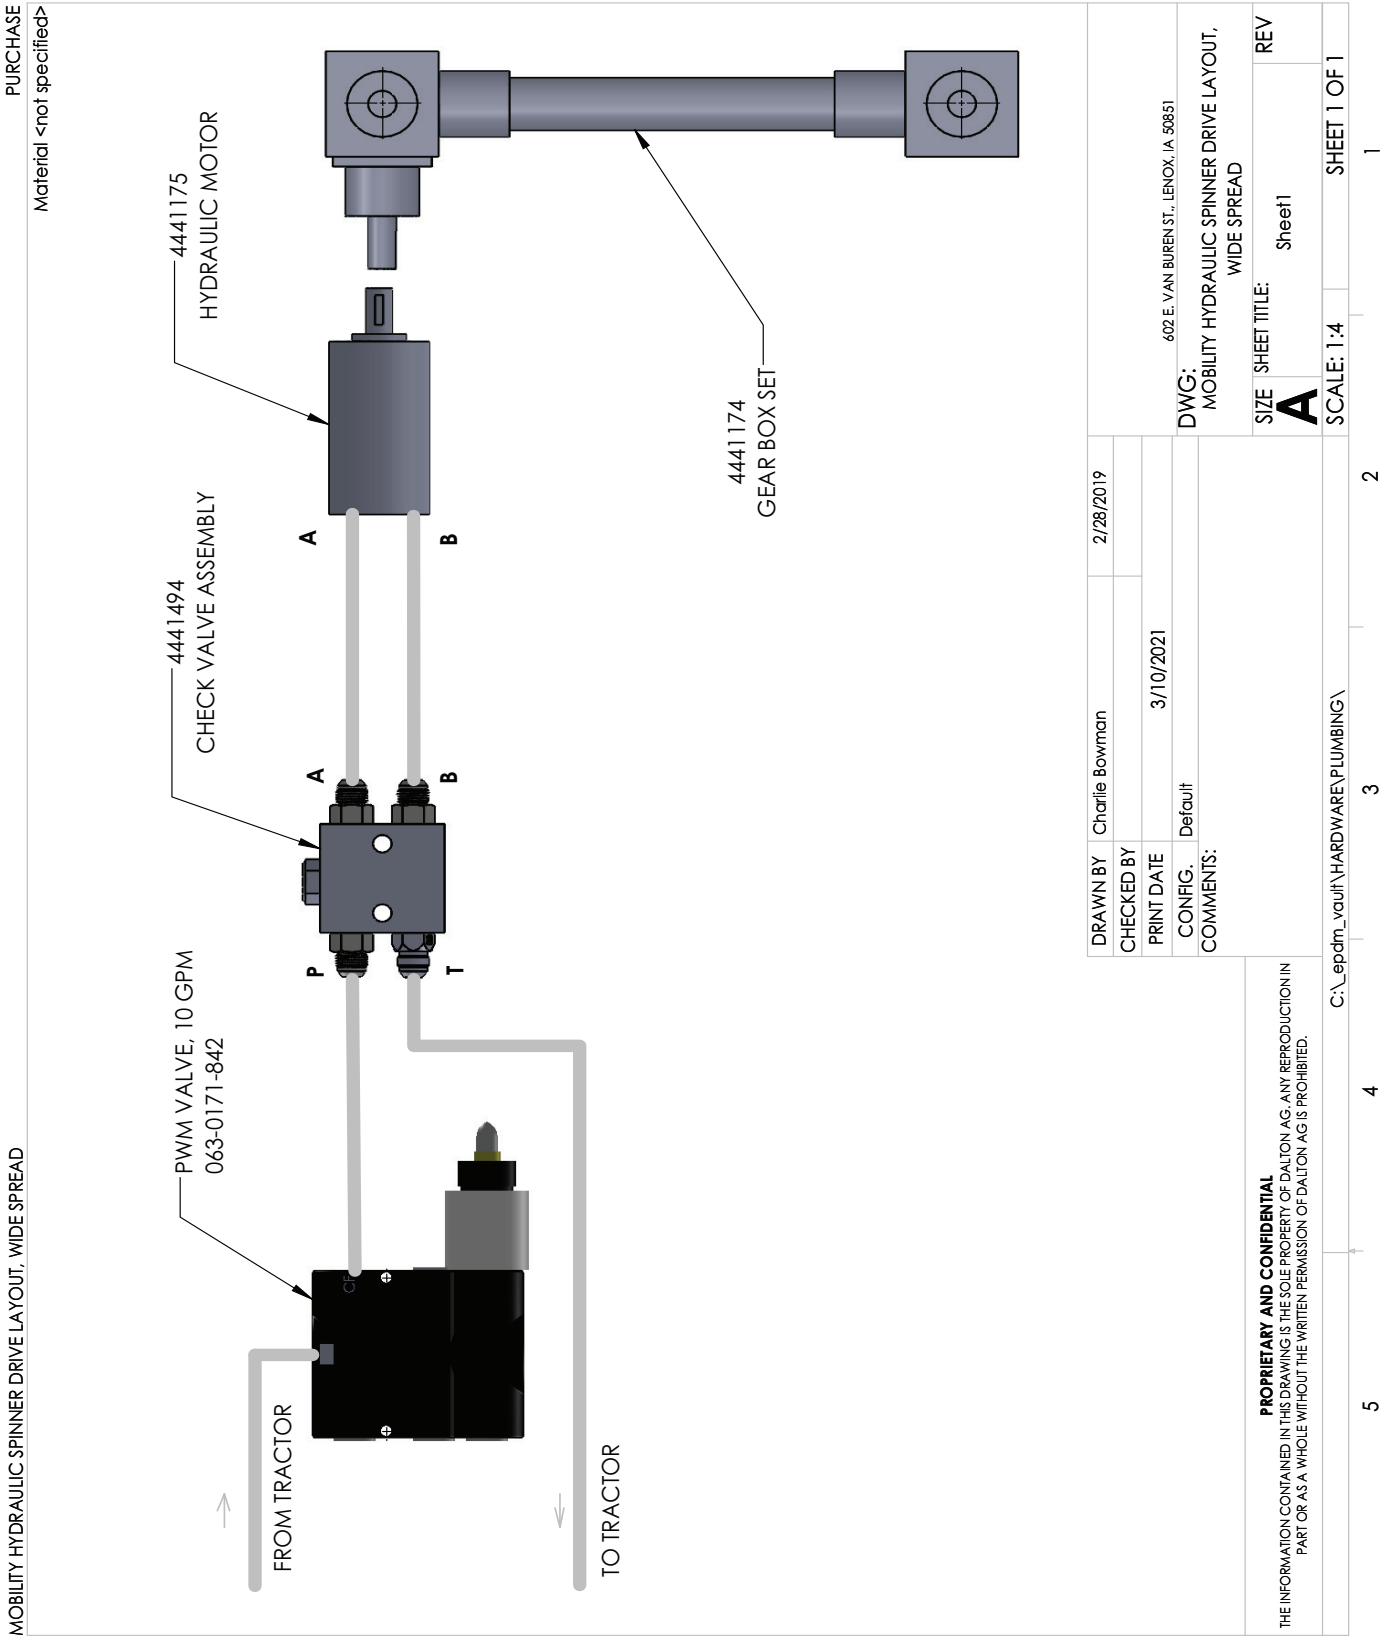


DIGITAL READOUT

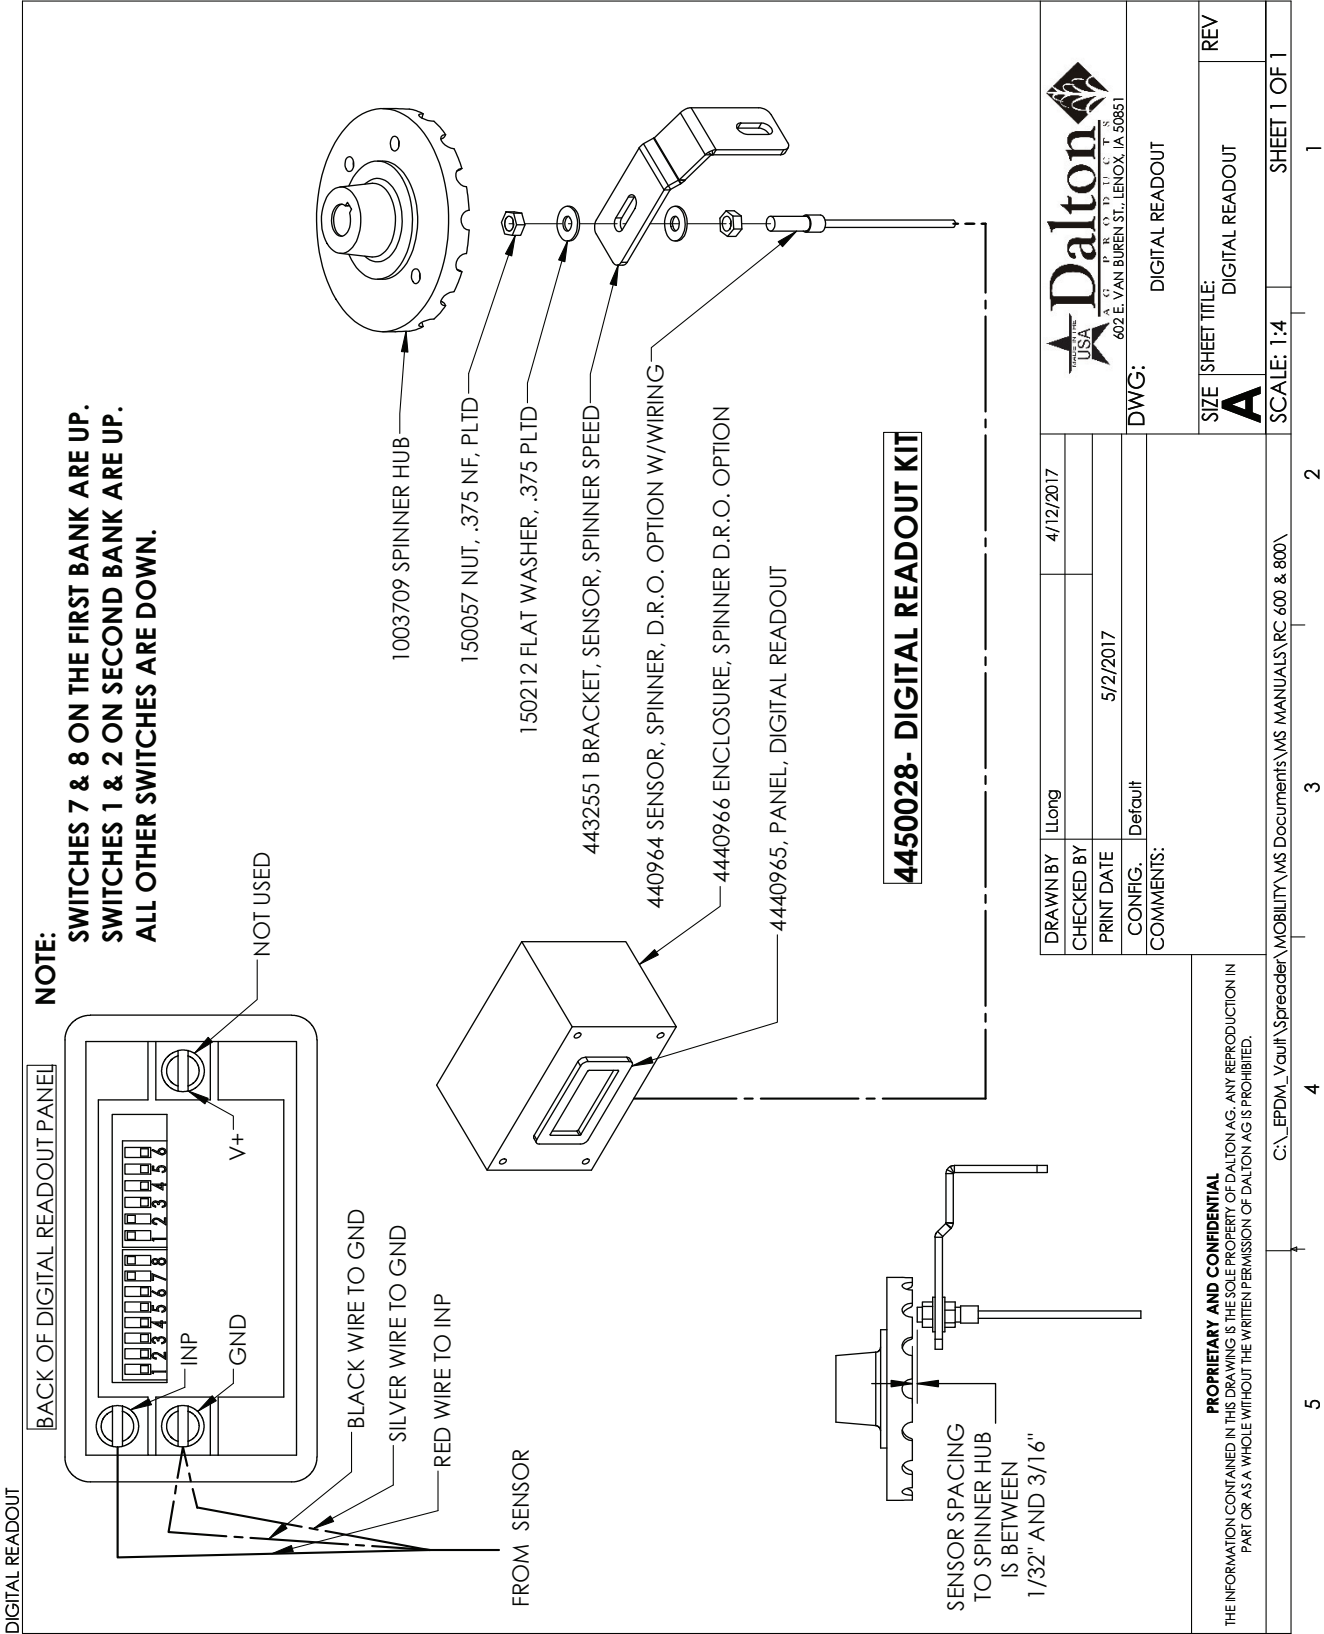

VARIABLE RATE CONTROL, ELECTRICAL PLAN

SCS 660 WITH MASTER SWITCH GRANULAR CONTROL SYSTEM

CONTROL CONSOLE W/ MASTER SWITCH
SCS 660: 063-0172-542

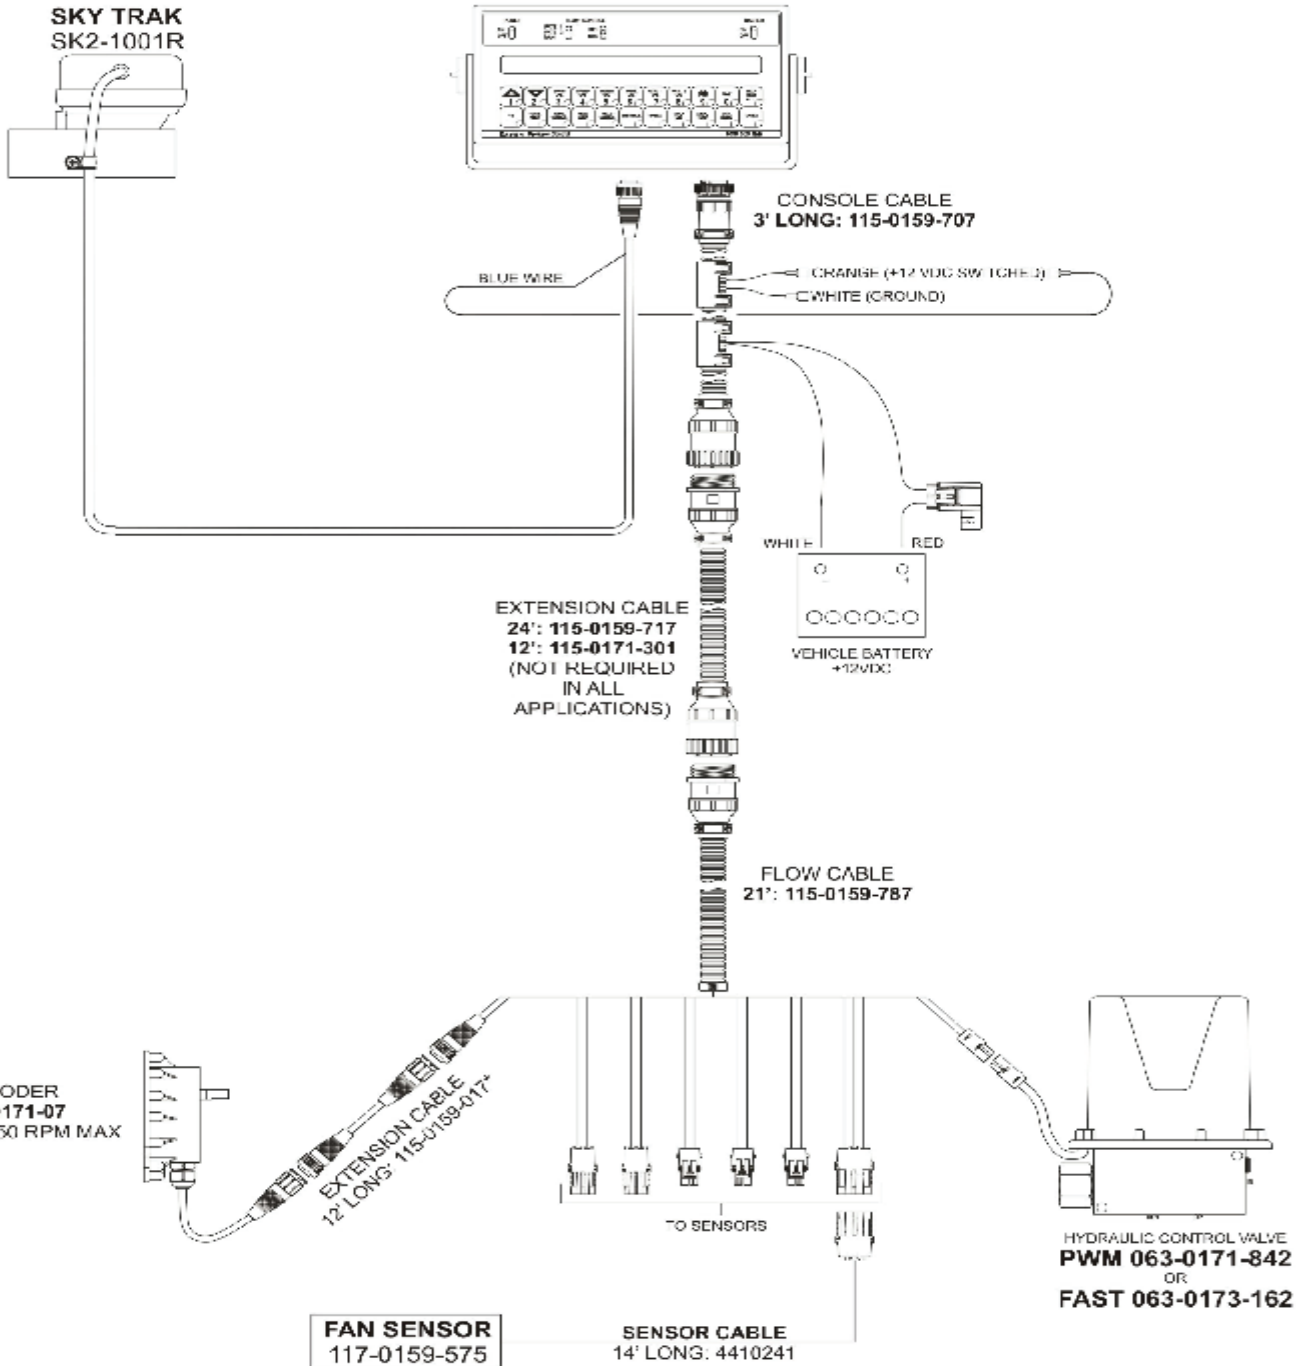

DRAWN BY	RICH SMOTHERS
CHECKED BY	
PRINT DATE	
CONFIG.	
COMMENTS:	

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF CMC-DALTON AG. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF CMC-DALTON AG IS PROHIBITED.

FOR PARTS, CALL 1.800.342.7498




DWG: VARIABLE RATE CONTROL, ELECTRICAL PLAN

SIZE	SHEET TITLE:	REV
A	ELECTRICAL PLUMBING	A

SCALE: 1:10

SHEET 1 OF 1

VARIABLE RATE CONTROL, HYDRAULIC PLAN

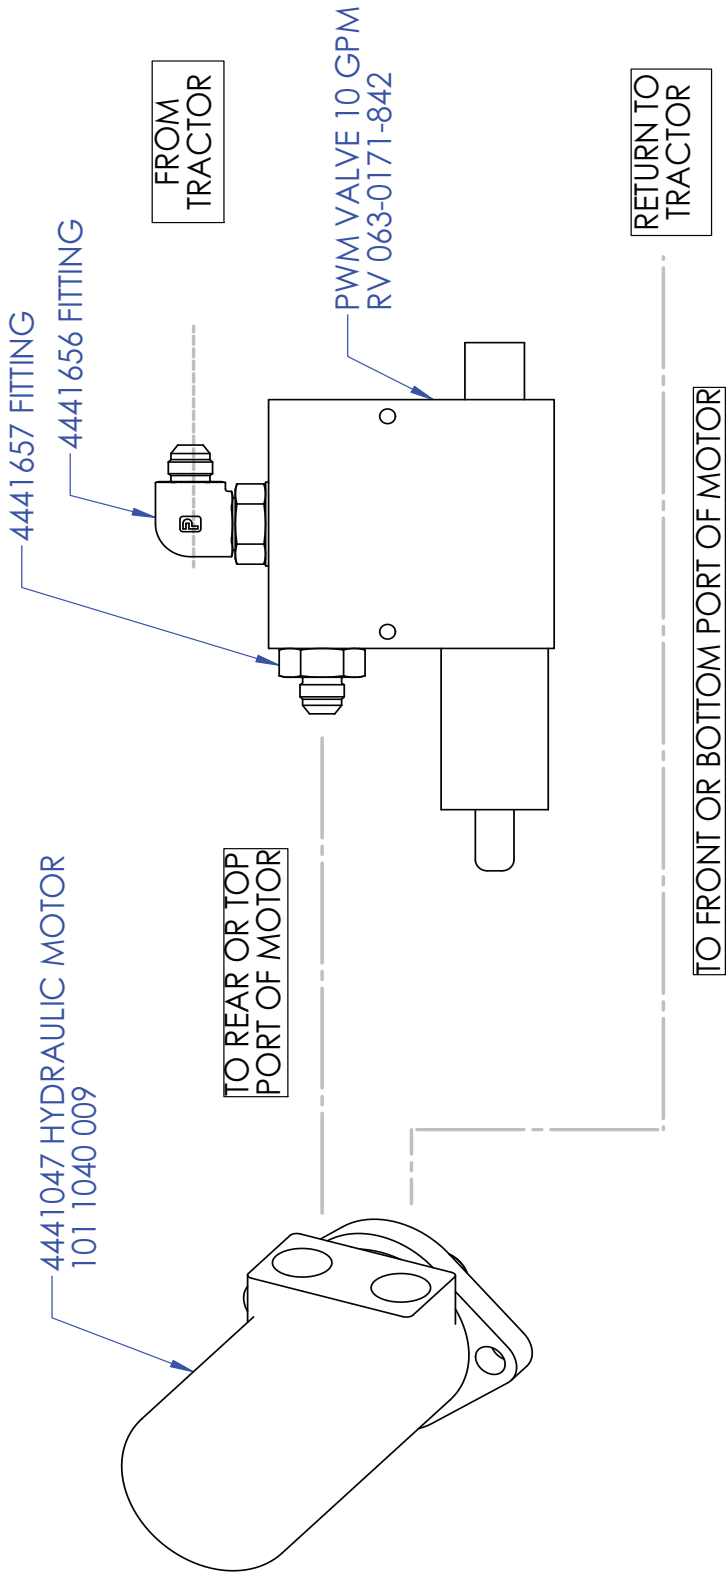

DRAWN BY RICH SMOTHERS 4/12/2012

CHECKED BY

PRINT DATE 3/11/2021

CONFIG. FOR DWG

COMMENTS:

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DALTON A.G. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF DALTON A.G. IS PROHIBITED.

DWG: VARIABLE RATE CONTROL, HYDRAULIC PLAN

SIZE	SHEET TITLE:	REV
A	HYDRAULIC PLUMBING	A

SCALE: 1:3 SHEET 1 OF 1

FOR PARTS, CALL 1.800.342.7498

Calculate the Spreader Constant Value

The Spreader Constant value can be calculated in one of two ways: by performing a mathematical calculation,
or by performing a “catch test” by applying and measuring the product used.

Note: The Spreader Constant value must be recalculated every time the gate opening dimensions are changed!

Formula Calculation:

First, use a tape measure to measure the following dimensions on the machine:

- Gate height (GH) in inches [cm]
 - Gate width (GW) in inches [cm]
 - Distance of travel (D) in inches [cm] of the belt per one revolution of the sensor
- Second, determine the number of pulses emitted by the encoder per one revolution of the sensor.

1. Enter a METER CAL value of 10.

2. Enter a TOTAL VOL value of 0.

3. Turn the sensor exactly one revolution. The value in TOTAL VOLUME is the number of encoder pulses per sensor revolution.

Third, determine the cubic feet [cm] of discharge per one revolution of the sensor by multiplying the distance of the belt travel per one sensor revolution by the gate height by the gate width, then dividing it by 1728 (not necessary for determining cubic cm).

For Example:

Distance of Belt Travel per 1 Sensor Revolution (D) = 13 inches [33 cm]

Gate Height (GH) = 3 inches [18 cm]

Gate Width (GW) = 8 inches [38 cm]

Number of Encoder Pulses per 1 Sensor Revolution (P) = 180 or 360 (Dependent on Encoder)

$$\frac{D \times GH \times GW}{1728} = \text{Cubic Feet of Discharge per 1 Sensor Revolution}$$

$$\frac{13 \times 3 \times 8}{1728} = .181 \text{ cubic feet of discharge per 1 sensor revolution}$$

Finally, calculate the Spreader Constant value using one of the following formulas, using the example of a 180 CPR granular encoder. Write down this number for future reference when programming the console.

Rate in Pounds: *180 Encoder Used As Example*

$$\frac{P}{\text{Cubic Feet of Discharge per 1 Sensor Revolution}} = \text{Spreader Constant Value}$$
$$\frac{180}{.181} = 994 \text{ Spreader Constant}$$

Calibration Numbers for Variable Rate Ready Spreaders *For 180 Pulse Encoder*
063-0171-071

Inches of belt travel per revolution of rear roller = 13"

Encoder pulses per revolution of rear roller = 180

Gate Width = 8"

Gate Height = Actual inches above the floor (chain is ½" thick)

Meter Cal = Product Density

Speed Cal w/ Sky Trak = 600

Speed Cal w/Astro II = 783

Spreader Constant #'s

2" Gate Height = 1500

2.5" Gate Height = 1196

3" Gate Height = 994

3.5" Gate Height = 857

4" Gate Height = 747

4.5" Gate Height = 664

5" Gate Height = 600

*The spreader constant is entered by holding down the meter cal. button until the spreader constant menu comes available.

*These numbers are a good starting point and may be need to be adjusted slightly if your actual rate is off.

Calibration Numbers for Variable Rate Ready Spreaders ***For 360 Pulse Encoder*** **063-0173-937**

Inches of belt travel per revolution of rear roller = 13"

Encoder pulses per revolution of rear roller = 180

Gate Width = 8"

Gate Height = Actual inches above the floor (chain is ½" thick)

Meter Cal = Product Density

Speed Cal w/ Sky Trak = 600

Speed Cal w/Astro II = 783

Spreader Constant #'s

2" Gate Height = 3000

2.5" Gate Height = 2392

3" Gate Height = 1988

3.5" Gate Height = 1714

4" Gate Height = 1494


4.5" Gate Height = 1328

5" Gate Height = 1200

*The spreader constant is entered by holding down the meter cal. button until the spreader constant menu comes available.

*These numbers are a good starting point and may be need to be adjusted slightly if your actual rate is off.

SCALE DETAIL

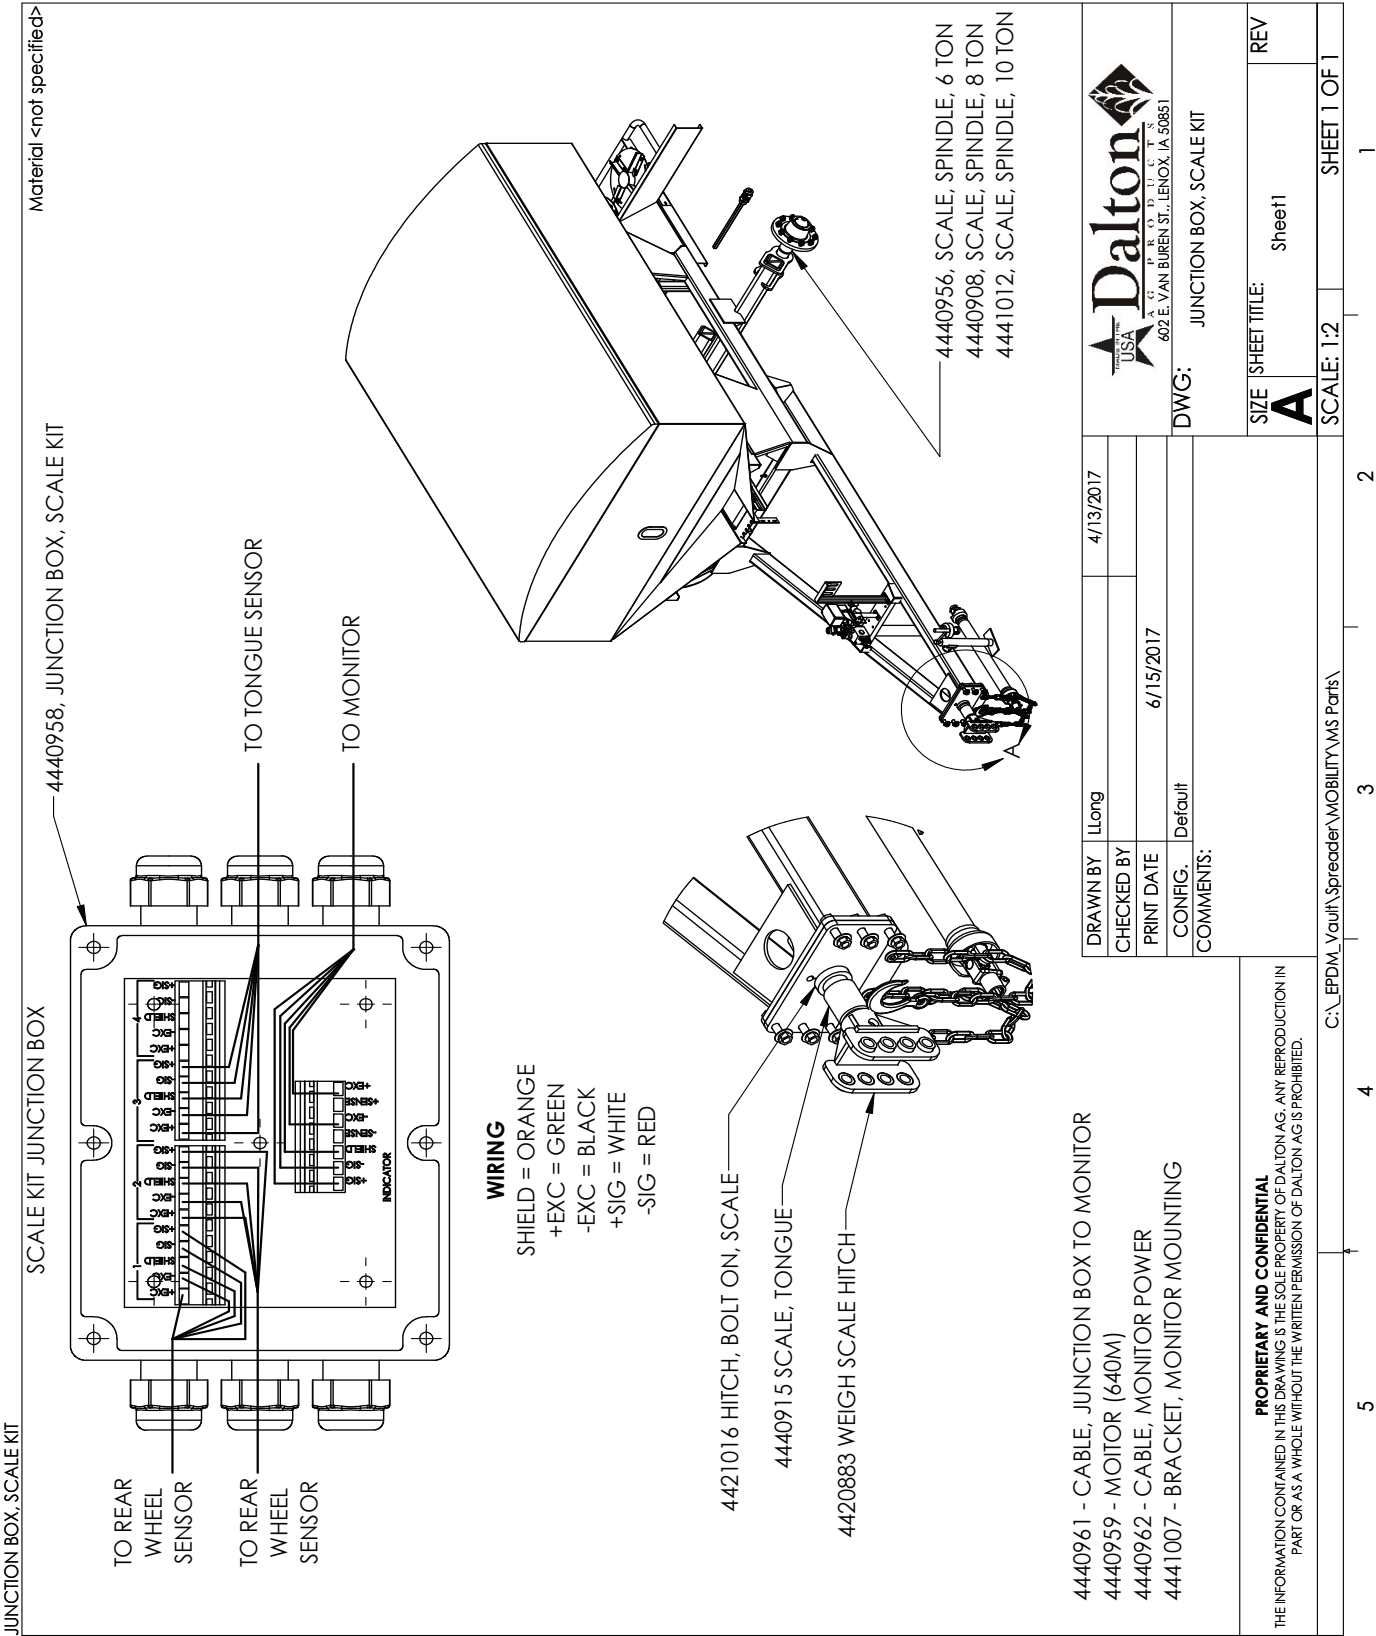


GATE MARKER DECAL INFO

1000529 - DECAL, GATE HEIGHT MARKER, ALL MOBILITY MODELS

To replace decal (Mobility VR Model):



Place 1/2" material on top of chain, lower gate to material, set pointer at 1"

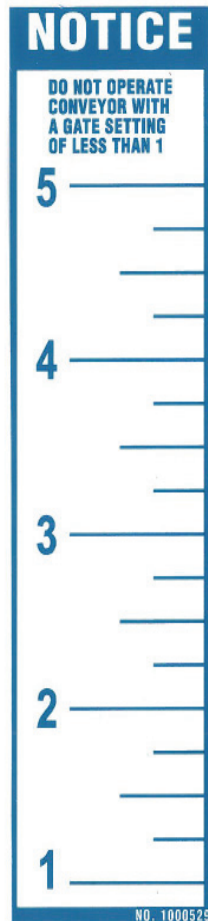

#1000529

DECAL LAYOUT

GROUND DRIVE RC SPREADER VARIABLE RATE

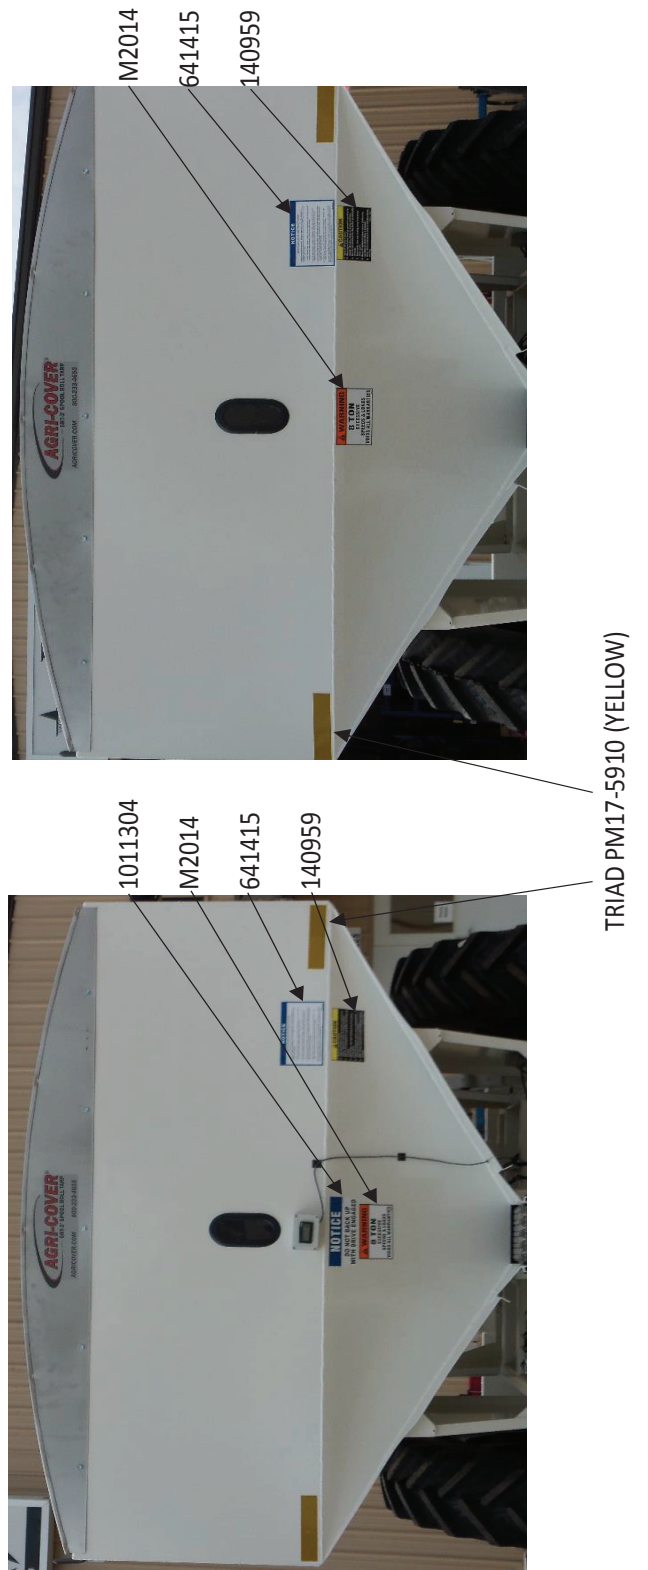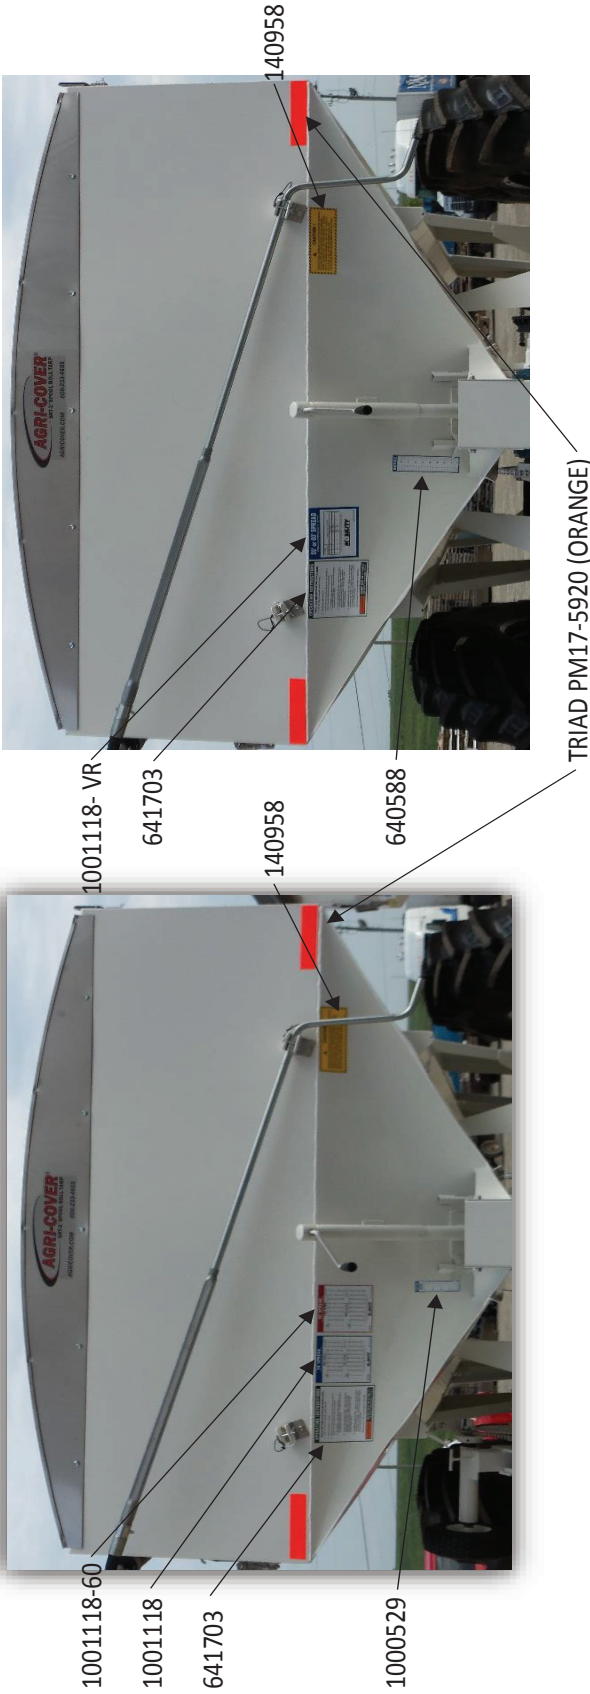

DECAL LAYOUT



5910 (YELLOW)



- TRIAD PM17-5920
- MS029
- 1008495 (8TON)
- 90620 BLUE
- TRIAD PM17-5910
- MS029
- 1008495 (8TON)
- 90620 BLUE
- TRIAD PM17-5920
- MS029 TRIAD PM17-5920



PARTS ORDERING PROCEDURE

Your Dalton Ag dealer is interested in your new fertilizer application equipment and has the desire to help you get the most value from it. Through the help of this manual, you will find you can do some of the regular maintenance yourself. For parts and service, contact the Dalton Ag Dealership from which you purchased your fertilizer application equipment or your local Dalton Ag dealer.

When replacement parts are required, consult the applicable illustration and parts list to obtain the correct part name and number. When requesting a replacement part, always include the following information:

1. Complete Part Number
2. Description
3. Quantity Required
4. Machine and Model Number
5. Machine Serial Number - located on the topside of the frame near hitch
6. Provide complete name and address for where and how parts are to be shipped.

NOTE: Right and left hand parts and sides of the units are determined by standing at the rear and facing in the direction of forward travel.

EQUIPMENT MODEL: _____

EQUIPMENT SERIAL NO.: _____

DATE OF PURCHASE: _____

NAME OF DEALER: _____

DEALER'S PHONE NUMBER: _____

Thank you for your business!

NOTES



www.daltonag.com

602 E. VAN BUREN | LENOX, IOWA 50851 | 800-342-7498